 


Parts list

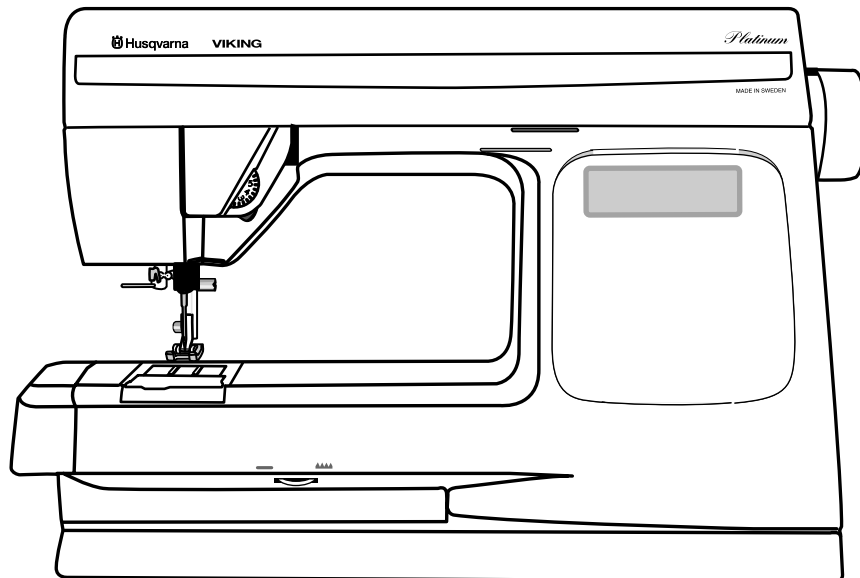

PLATINUM

750 Quilt

750


730

Part no	Description	Page	Part no	Description	Page
411 72 10-01	Washer	C	412 34 88-01	Fastener, spring	I
411 78 10-03	Bulb 4 V	E	412 34 96-01	Cablage motor	B
411 96 68-01	Screw	A,E	412 34 97-01	Cable for PC-board	B
411 96 68-03	Screw	A,F	412 35 26-01	Washer	H
411 96 68-04	Screw	E	412 35 31-01	Thread tension set	J, L
411 96 68-10	Screw	B	412 35 33-02	Driving wheel compl.	B
411 96 68-12	Screw	B	412 35 42-01	Pulley	H
411 96 68-21	Srew	E	412 35 62-01	Pin	B
411 96 68-25	Screw	F	412 35 64-01	Holder	B
411 96 71-07	Screw	B	412 36 14-01	Opener, stitch plate	L
411 98 14-01	Washer	C	412 36 80-01	Locking Washer	C
412 00 13-01	Washer	D	412 36 82-07	Lower shaft compl.	H
412 05 60-01	Screw M5*14	B	412 36 83-05	Arm shaft	G
412 05 60-04	Screw M3*6	C,I	412 36 84-01	Cog belt	G
412 05 60-06	Screw M4*12	B,G,H,I	412 36 87-01	Pin	G
412 05 60-07	Screw M4*16	J	412 37 11-01	Thread reel disc 20 mm	A
412 05 60-11	Screw M3*5	C,D	412 37 11-02	Thread reel disc 40 mm	A
412 14 30-05	Fuse 6.3 A/250 V	B	412 37 14-02	Lever Feedlift	C
412 14 30-06	Fuse 2 A/250 V	B	412 37 20-02	Knob feed dog lowering	A
412 14 32-03	Fuse 3.5 A/250 V (USA)	B	412 37 27-01	Spring	C
412 14 32-05	Fuse 2 A/250 V (USA)	B	412 37 82-01	Nut	C
412 15 78-01	Cord device, stand.	K	412 38 16-02	Feed Unit Cpl.	C
412 15 79-03	Cord device, USA, Can.	K	412 39 09-29	Plastic bag with access.	L
412 15 80-02	Cord device, England	K	412 39 09-30	Plastic bag with access.	L
412 15 81-01	Cord device, Australia	K	412 39 12-01	Spring presserfoot lifter	E
412 15 98-01	Spring	K	412 39 47-01	Washer	D
412 18 45-01	Foot	K	412 39 54-01	Frame Feed Unit Cpl.	C
412 21 14-01	Screw	E	412 39 56-01	Feed carriage	C
412 21 14-03	Screw, torx M3*8	F	412 40 97-01	Screw	F
412 21 14-06	Screw	F	412 41 12-01	Ankel	F
412 21 14-14	Screw, torx M4*16	B	412 42 37-01	Thread knife	A,D
412 22 98-01	Locking nut	I	412 43 18-01	Feed dog	C
412 28 19-02	Screw	C,E	412 44 40-02	Hook	D
412 28 48-01	Spring	C	412 44 44-01	Cog wheel	D
412 28 54-02	Presser bar	F	412 45 23-01	Thread knife	A
412 28 75-01	Base plate	B	412 45 24-01	Holder, thread knife	A
412 28 79-01	Screw	D	412 45 55-01	Spring	J
412 30 06-01	Driver	G	412 45 91-01	Hook cover, window	D
412 30 07-01	Spring	G	412 46 44-01	Adjusting screw, thread tension	D
412 30 08-01	Pulley	G	412 46 45-01	Screw, thread tension	D
412 30 09-02	Hand wheel	G	412 47 16-01	Thread tension compl.	D
412 30 16-01	Link	J	412 47 73-01	Bobbin case holder	D
412 30 21-01	Locking washer	J	412 48 09-02	Protector, take up	A
412 3024-01	Crank arm	J	412 49 49-01	Distance sleeve	B
412 30 30-01	Guide arm	E	412 49 80-52	PC-board Platinum 730	B
412 30 50-01	Foot	B	412 49 80-53	PC-board Platinum 750	B
412 30 55-01	Rubber ring	B	412 49 80-55	PC-board Platinum 750 Quilt	B
412 30 66-01	Shuttle shaft	D	412 50 06-01	Bearing	E
412 30 74-01	Damper	D	412 50 08-01	Gear segment	F
412 30 97-01	Presser bar lifter	E	412 50 09-01	Spring / Lower	F
412 31 04-02	Guide Cpl	C	412 50 10-01	Spring / Upper	F
412 31 06-01	Spring	C	412 50 11-01	Link	F
412 31 44-01	Cable standard	K	412 50 15-01	Bearing	F
412 31 44-02	Cable USA, Can, Japan	K	412 50 19-01	Back holder - Needle threader	F
412 31 48-01	Spring	C	412 50 20-01	Front holder - Needle threader	F
412 31 69-01	Spring	F	412 50 21-01	Needle threader	F
412 31 79-01	Clutch	G	412 50 22-01	Setting plate	F
412 31 81-01	Clamp, lower shaft	H	412 50 23-02	Eccentric / needle adj,	F
412 31 84-01	Bushing, feed dog	C	412 50 24-01	Cross head compl.	F
412 31 89-01	Regulating Unit	K	412 50 27-01	Calibration stop	E
412 32 27-05	Bobbin winding	B	412 50 46-01	Wedge	F
412 32 33-02	Sealing washer	A	412 50 47-01	Clamp ring	F
412 32 34-03	Step motor, feeding	I	412 50 48-01	Clamp ring	E
412 32 34-10	Step motor, sewing head	E	412 50 52-01	Plate	F
412 32 45-04	Thread tension divice Cpl.	J	412 50 55-01	Frame - lower	F
412 32 47-01	Lever thread tension	J	412 51 63-02	Worm gear	H
412 32 49-01	Screw thread tension	J	412 51 70-01	Distance	H
412 32 50-01	Spring holder	J	412 52 09-01	Thread holder	A
412 32 67-45	PC-board transformer	B	412 52 10-01	Reel pin	A
412 32 71-45	Transformer 220-240 V	B	412 52 14-01	Spring	A
412 32 71-47	Transformer 120 V	B	412 52 97-02	Protector, accessorie box	L
412 32 71-48	Transformer 100 V	B	412 53 30-01	Stitch plate	D
412 32 84-01	Clamp	G,H	412 53 34-01	Reel pin holder	A
412 33 62-01	Cog Gear	E	412 54 97-01	Tap thread guard	A
412 33 93-01	Attachment, motor	B	412 54 98-01	Washer	A
412 33 94-01	Muffler, motor	B	412 55 01-01	Bobbin case compl.	D
412 33 97-02	Motor 24 V	B	412 55 43-02	Bobbin wounding cover cpl,	A
412 34 26-03	Spring	B	412 55 79-01	Bobbin wounding excenter	A
412 34 47-01	Holder	B	412 55 80-01	Thread support	A
412 34 48-01	Screen - Stopright func	H	412 55 81-01	Washer	A
412 34 50-01	Eccentric	B	412 56 15-45	Plastic bobbins (10-pac)	D,L
412 34 54-01	Cog belt	G	412 56 31-01	Thread support	A
412 34 60-01	Stop ring	H	412 56 85-01	Dust cover	D
412 34 75-01	Feeding step motor cpl,	I	412 56 86-01	Adjusting washer	D
412 34 79-01	Calibration stop	I	412 57 01-01	Sleeve, lamp	L
412 34 80-01	Damper	I	412 58 17-02	Needle bar compl.	F
412 34 81-01	Spring	I	412 58 18-01	Neddle clamp	F
412 34 82-01	Setting screw	I	412 58 19-01	Thread guide	F
412 34 84-01	Shaft	I	412 59 11-01	Grounding cable / Sew Head	F
412 34 85-01	Joint cross	I			
412 34 87-01	Spring	I			


Part no	Description	Page	Part no	Description	Page
412 60 01-01	Needle bar frame	F			
412 60 03-01	Thread take up	E			
412 68 25-03	Lid cover / 730	A	ACCESSORIES		
412 68 25-04	Lid cover / 750	A	401 53 99-01	Buttonhole knife	L
412 68 25-05	Lid cover / 750 Quilt	A	401 55 55-01	Brush	L
412 68 32-01	Free arm cover	A	411 17 32-01	Clearance plate	L
412 68 34-01	Handle	A	412 08 38-47	Marking pen, neutral	L
412 68 36-01	Base plate	B	412 56 15-45	Bobbins (10)	L
412 68 37-01	Hard cover	L	412 36 14-01	Stitch plate opener	L
412 68 38-01	Accessory box complete	L	412 38 15-01	Screw driver	L
412 68 47-01	Presser bar guide cpl.	F	412 62 09-01	Grip aid	L
412 68 48-01	Frame	E			
412 68 50-01	Regulating dial	E	PRESSERFEET		
412 68 51-01	Spring-Presser bar	F	411 73 95-01	Edge guide G	L
412 68 56-01	Eccentric feed	H	411 85 30-01	Presser foot H	L
			412 00 16 -01	Presser foot decorative stitches	L
412 69 36-01	Spring	E	412 37 08-01	Quilting foot P	L
412 69 37-01	Screen	A	412 38 01-01	Presser foot B	L
412 69 51-01	Thread guide	A	412 38 02-01	Buttonhole foot C	L
412 69 65-02	Connector sensor with cable	E, F	412 38 04-01	Presser foot D	L
412 69 87-01	Adjusting arm	B	412 38 05-01	Zipper foot E	L
412 69 92-01	Adjustment dial	J	412 38 06-01	Presser foot J	L
412 70 08-01	Thread guide	A	412 40 80-01	Button hole sensor, comp.	L
412 70 80-01	Accessory box	L	412 61 76-01	Presser foot A	L
412 70 81-01	Cover accessory box	L			
412 70 82-01	Locking snap, Acc box	L	Users Guide 730		
412 70 83-01	Inside tray, Acc box	L	412 76 48-01	Users Guide Swe	L
412 70 98-01	Spring, Accessorie box	L	412 76 48-06	Users Guide Dan	L
412 73 23-01	Screw needle clamp	F	412 76 48-10	Users Guide Jap	L
412 73 30-01	Plug / Balance setting	A	412 76 48-11	Users Guide Fin	L
412 73 31-01	Window / Front cover	A	412 76 48-21	Users Guide Nor	L
			412 76 48-26	Users Guide Eng	L
412 75 31-01	Hook cover	D	412 76 48-31	Users Guide Fra	L
412 76 45-01	Main foil key board 730	A	412 76 48-36	Users Guide Holl	L
412 76 46-01	Main foil key board 750	A	412 76 48-41	Users Guide Ita	L
412 76 85-03	Sewing head cpl.	E	412 76 48-51	Users Guide Germ	L
412 76 89-03	Front cover Cpl 730	A	412 76 48-56	Users Guide Russ	L
412 76 89-04	Front cover Cpl 750	A	412 76 48-82	Users Guide Pol	L
412 76 89-05	Front cover Cpl 750 Quilt	A	412 76 48-90	Users Guide Cz	L
412 77 34-01	Foot control Cpl	K			
412 77 69-01	Grease protector	D	Users Guide 750		
412 8024-01	Foot control covers	K	412 76 47-01	Users Guide Swe	L
			412 76 47-06	Users Guide Dan	L
721 41 64-50	Pin	C	412 76 47-10	Users Guide Jap	L
721 41 69-70	Pin	I	412 76 47-11	Users Guide Fin	L
721 41 87-70	Pin	G,H	412 76 47-21	Users Guide Nor	L
721 42 10-10	Pin	H	412 76 47-26	Users Guide Eng	L
725 52 20-05	Screw M3*6	I	412 76 47-31	Users Guide Fra	L
725 52 28-05	Screw	F	412 76 47-36	Users Guide Holl	L
728 52 17-05	Screw M3*3	E,I	412 76 47-41	Users Guide Ita	L
728 52 19-05	Stop screw	F	412 76 47-51	Users Guide Germ	L
728 52 22-05	Screw	F	412 76 47-56	Users Guide Russ	L
728 52 85-05	Screw M4*6	F	412 76 47-82	Users Guide Pol	L
728 52 87-05	Screw M4*8	D	412 76 47-90	Users Guide Cz	L
728 53 20-05	Screw M5*5	G			
728 73 20-01	Screw	G			
728 73 64-05	Screw 6*10 mm	B			
728 82 83-05	Screw M4*4	G,H			
734 11 25-41	Washer	F			
735 21 36-01	Locking washer	B			
735 31 08-20	C-washer	D			
735 58 05-10	Locking washer	E			
735 58 23-00	Locking washer	A			
735 58 35-00	Locking washer	A			
735 58 55-00	Washer	G			
735 61 18-40	C-washer	F			
735 61 24-40	Compression ring 3mm	E,J			
735 61 36-40	C-washer	E			
735 61 53-40	Compression ring 6mm	E			

A

 412 76 89-03 / 730
412 76 89-04 / 750
412 76 89-05 / 750 Quilt

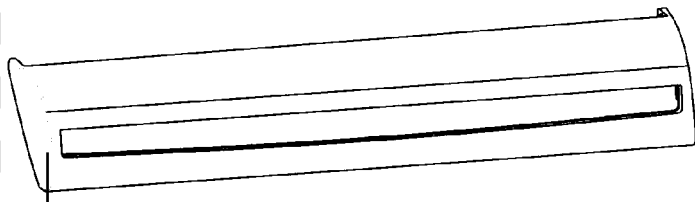

 412 68 25-03 (730)
412 68 25-04 (750)
412 68 25-05 (750 Quilt)

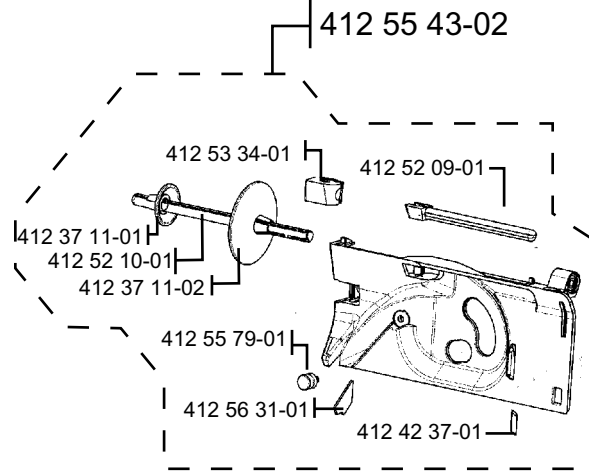

412 55 43-02

412 53 34-01

412 52 09-01

412 37 11-01

 
412 52 10-01

412 37 11-02

412 55 79-01

412 56 31-01


412 42 37-01

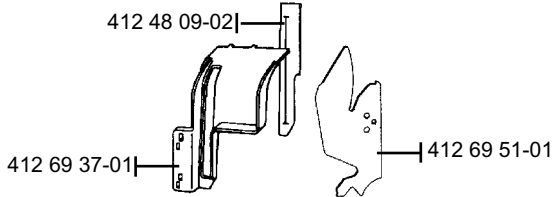

412 48 09-02


412 69 37-01

 412 69 51-01

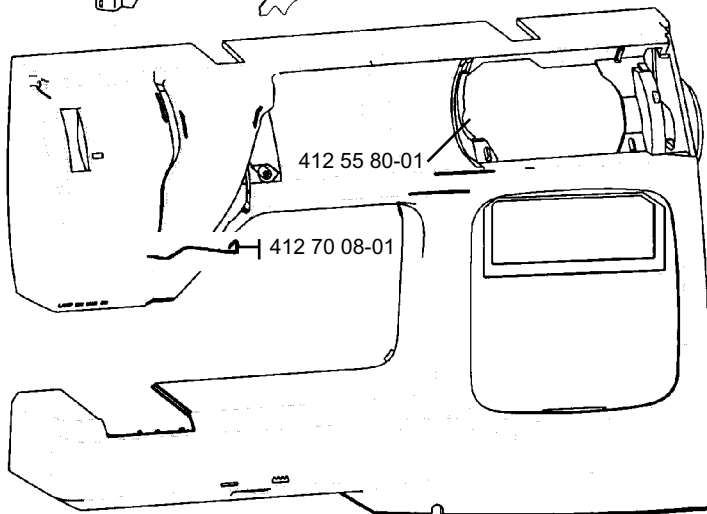

412 55 80-01

 412 70 08-01

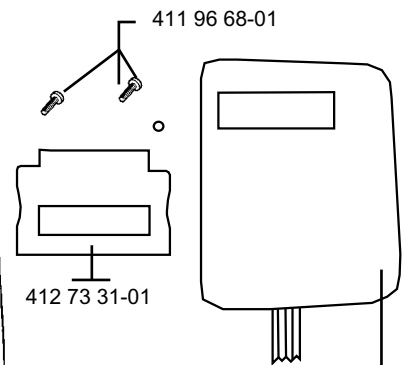

411 96 68-01

412 73 31-01

412 76 45-01 (730)

412 76 46-01 (750)

 
- 412 54 97-01
- 412 52 14-01
- 412 54 98-01
- 412 55 81-01
- 735 58 23-00



735 58 35-00

412 37 20-02

412 73 30-01

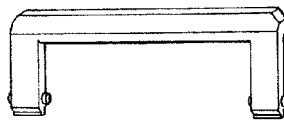


412 68 34-01

411 96 68-03


412 45 24-01

412 42 37-01

 
412 45 23-01

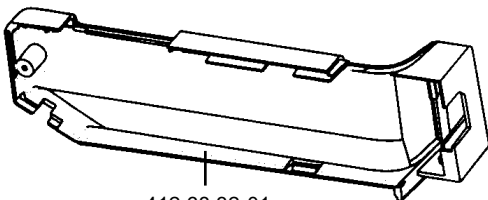


412 68 32-01

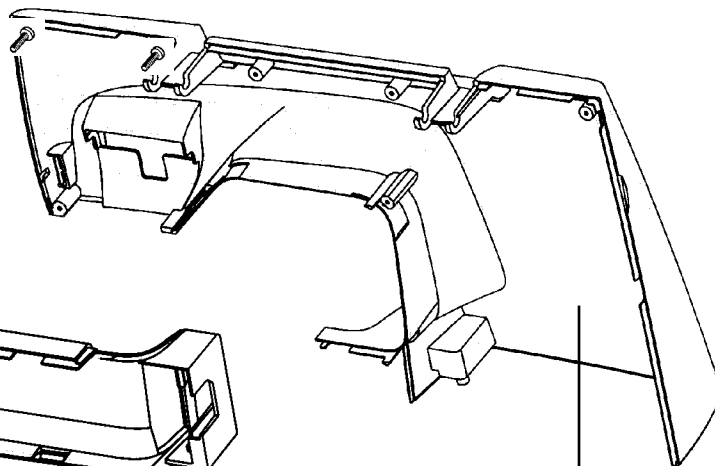 


412 73 29-01

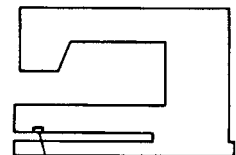 


412 32 33-02

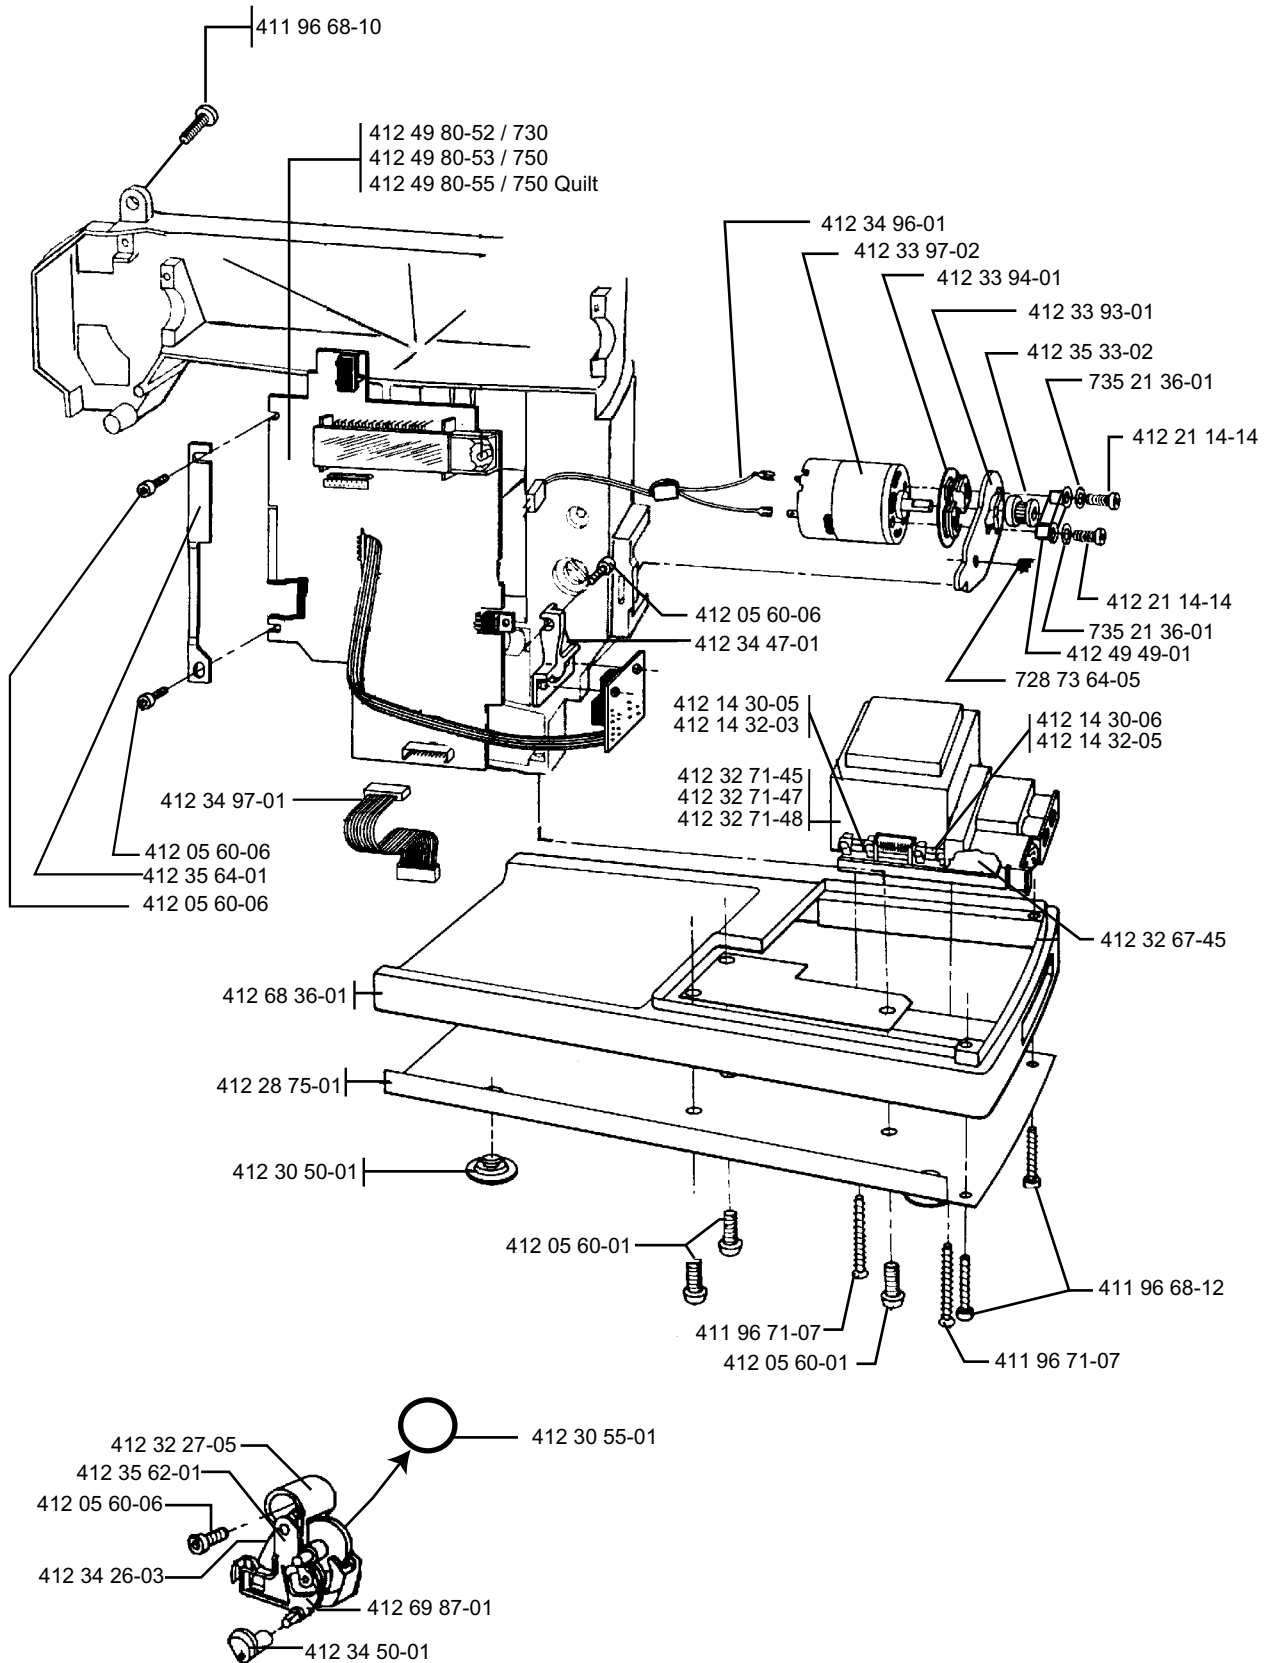 




C

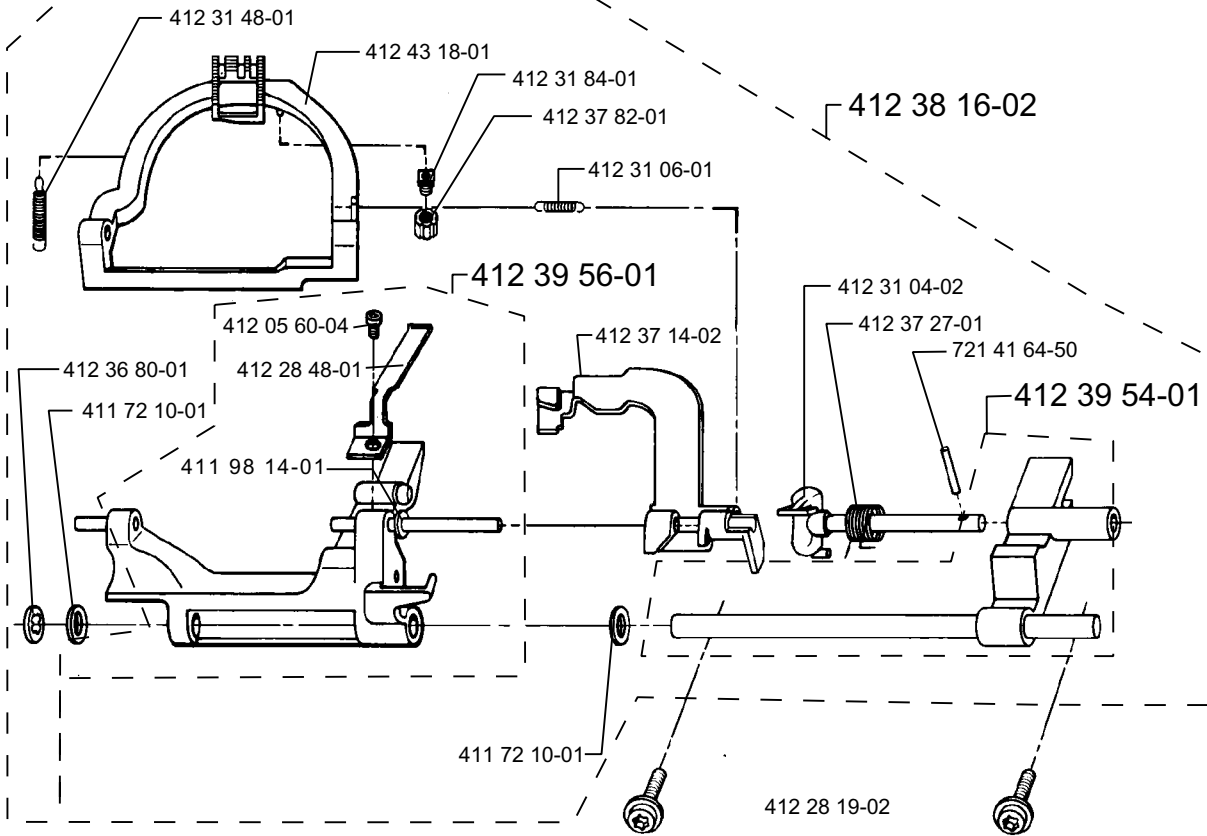 

















D

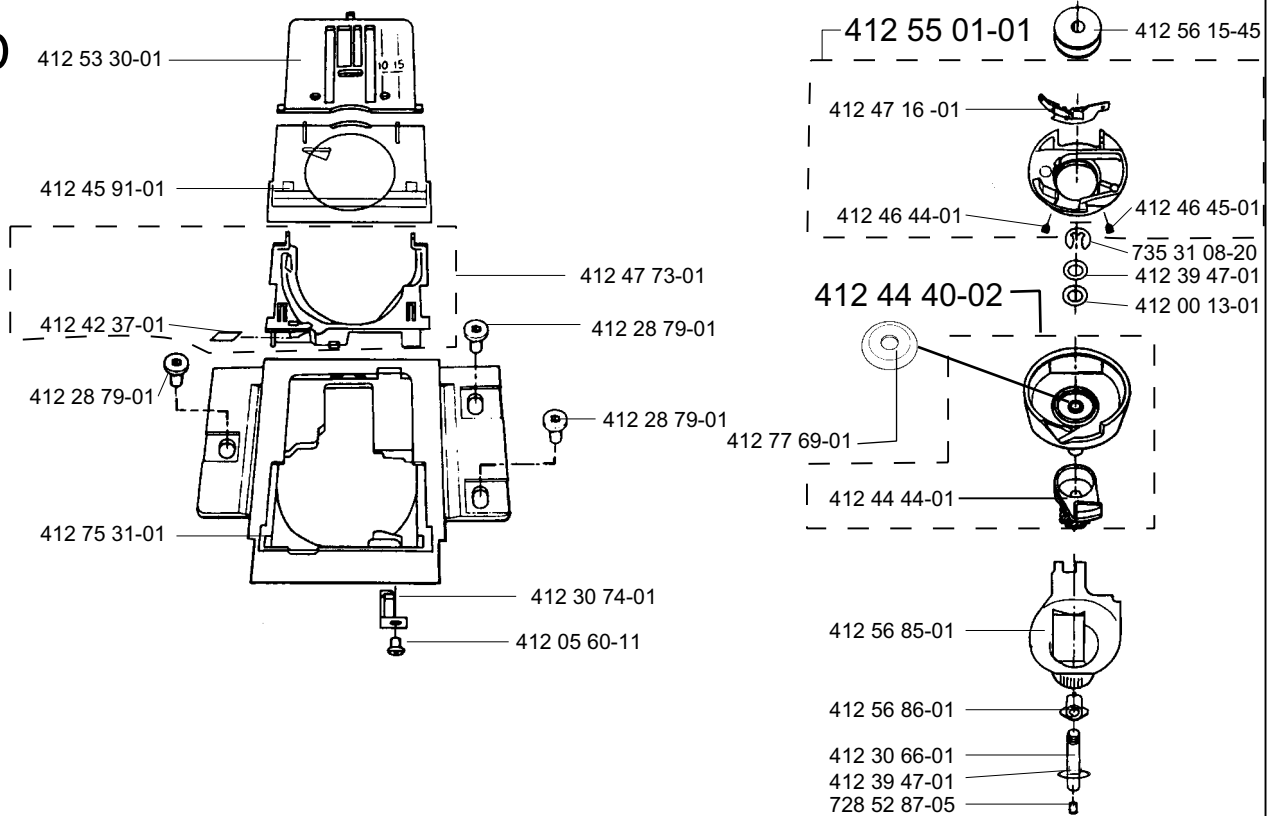 


412 76 85-03

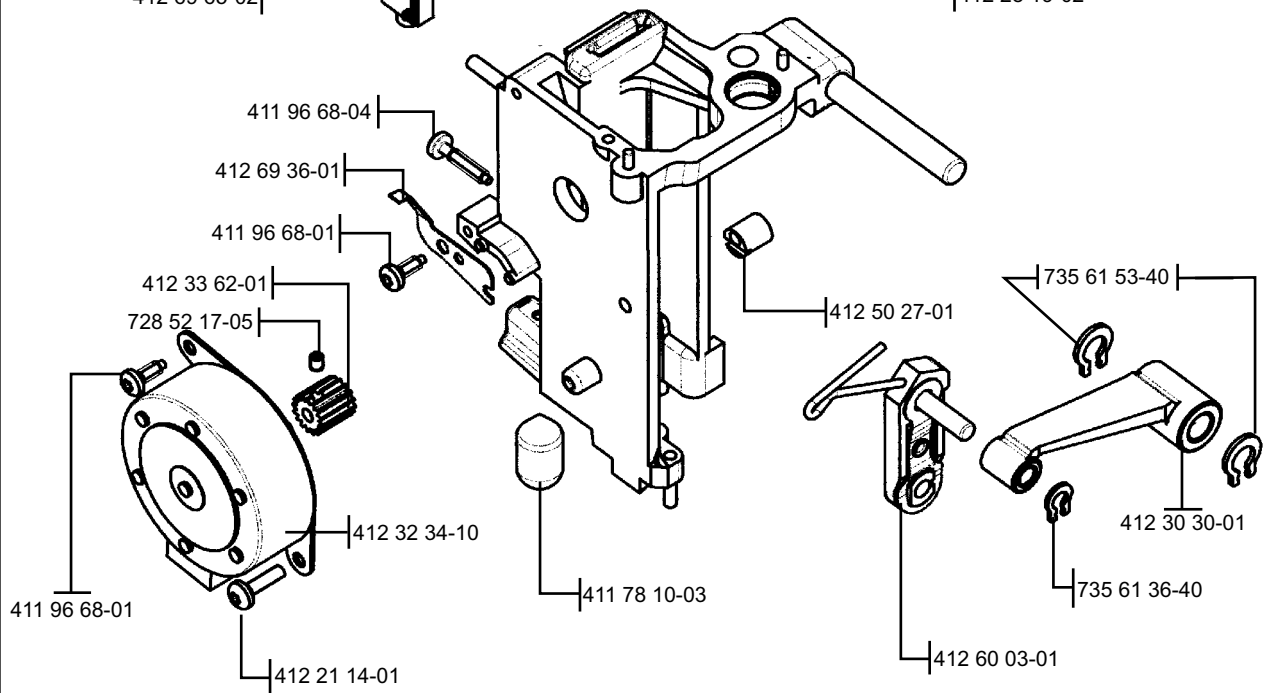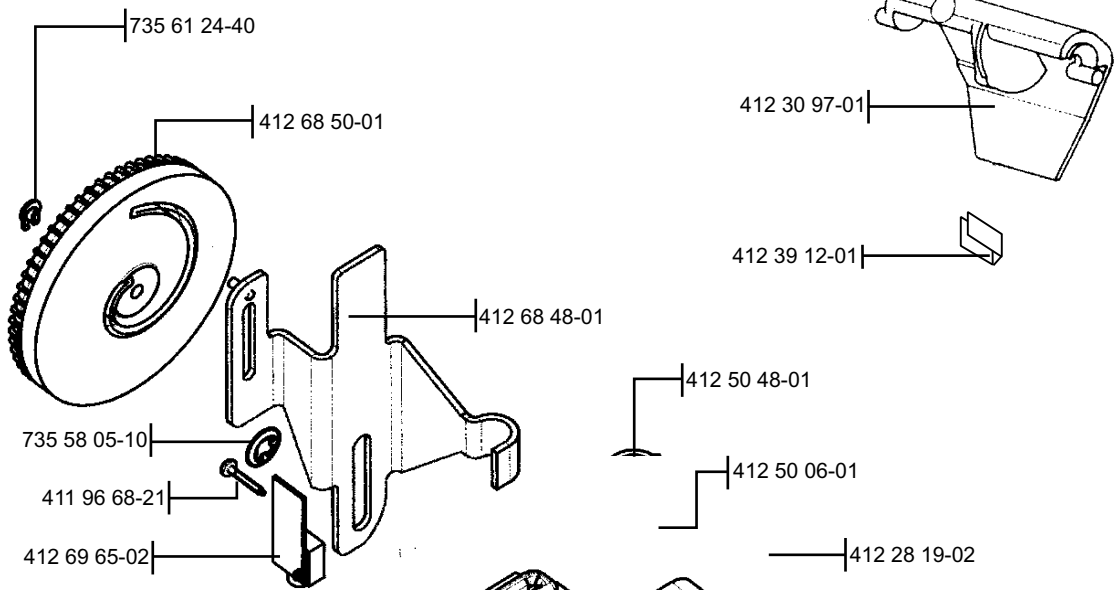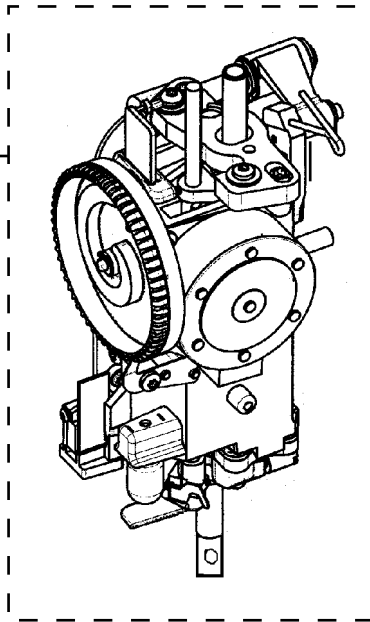   


F

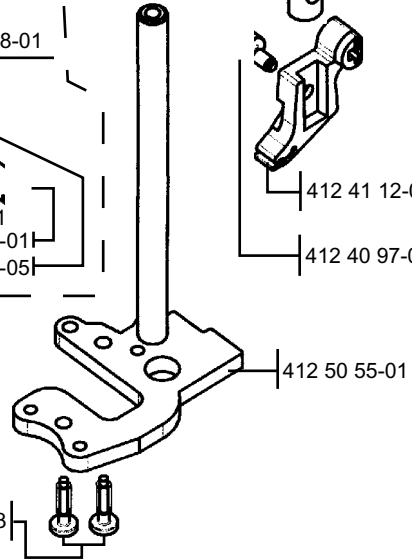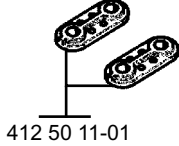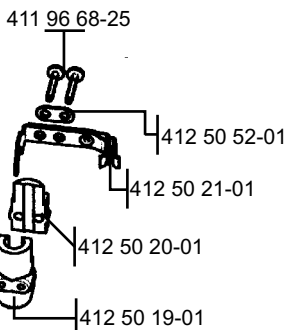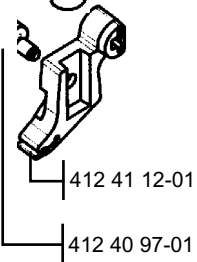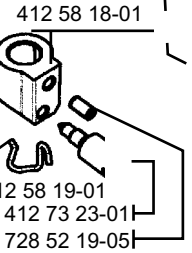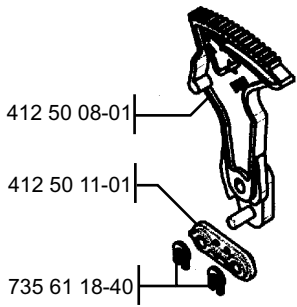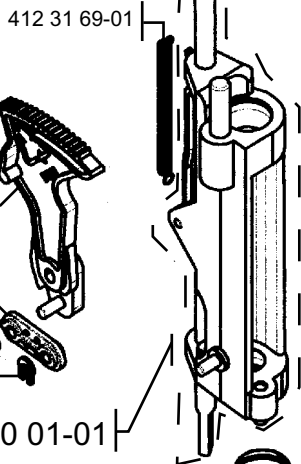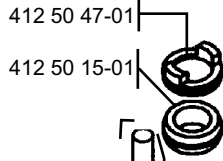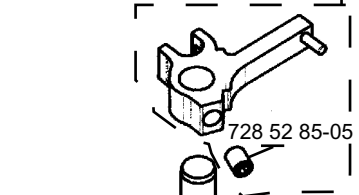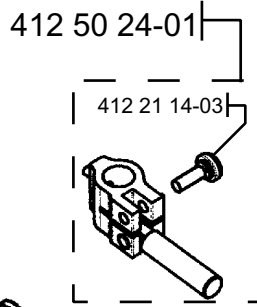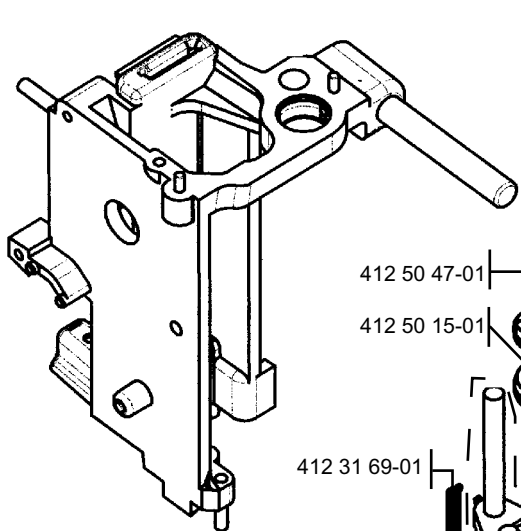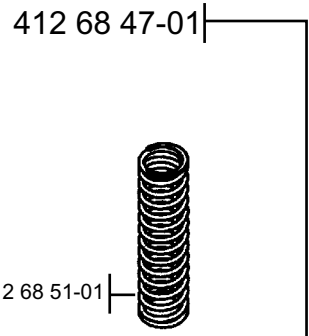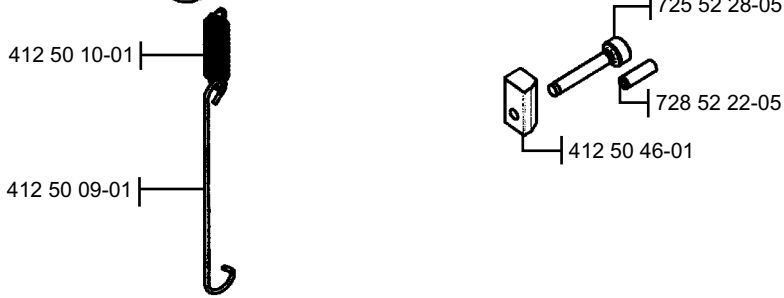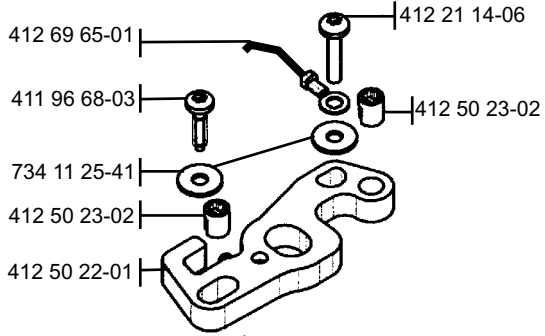                


G

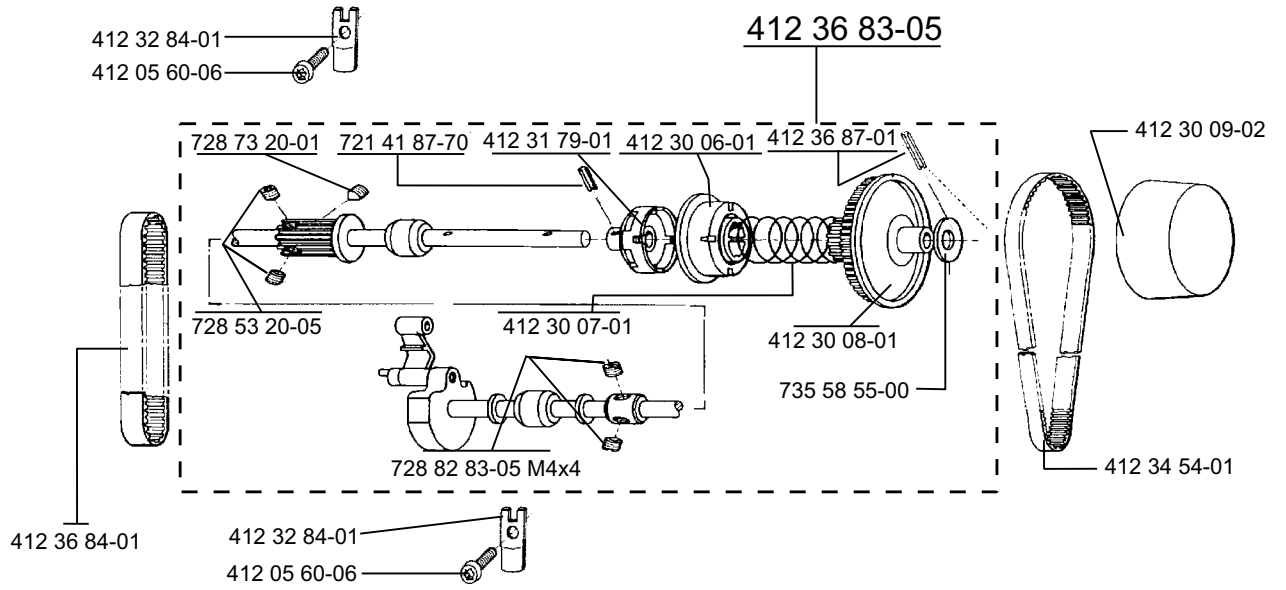 


H

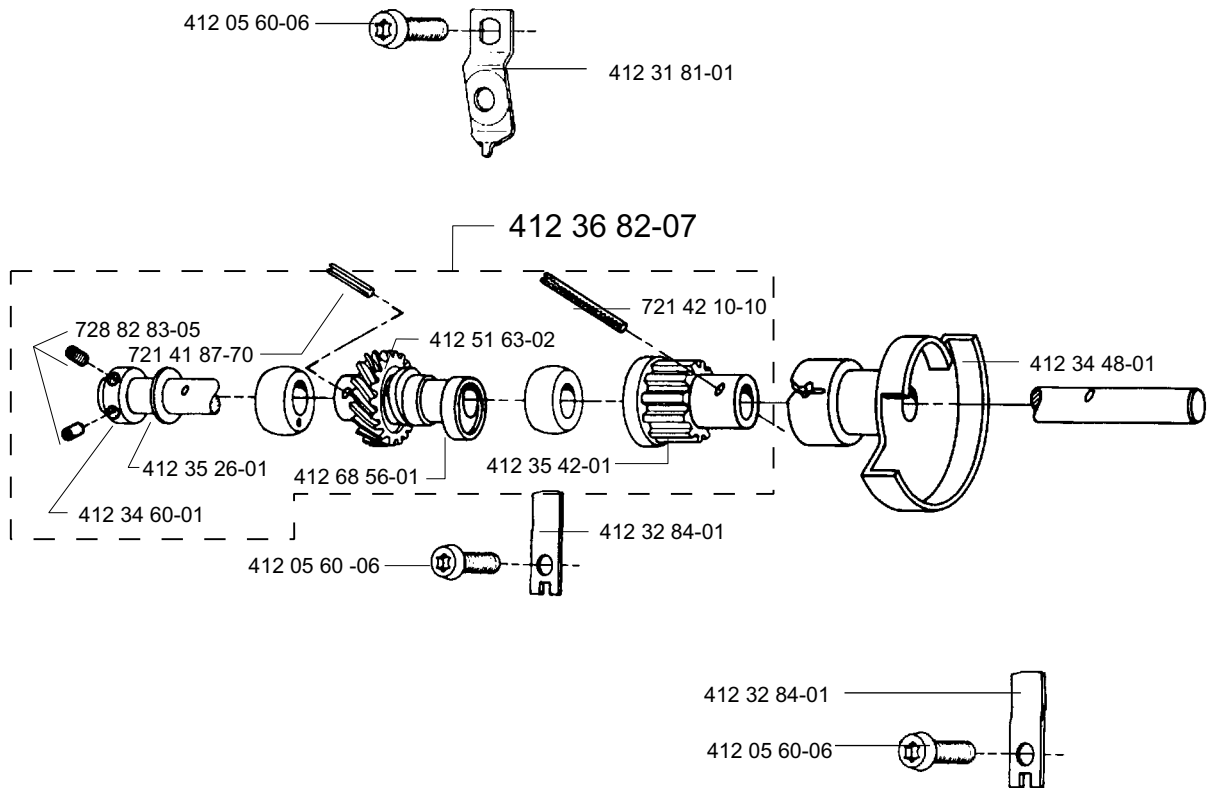 


I

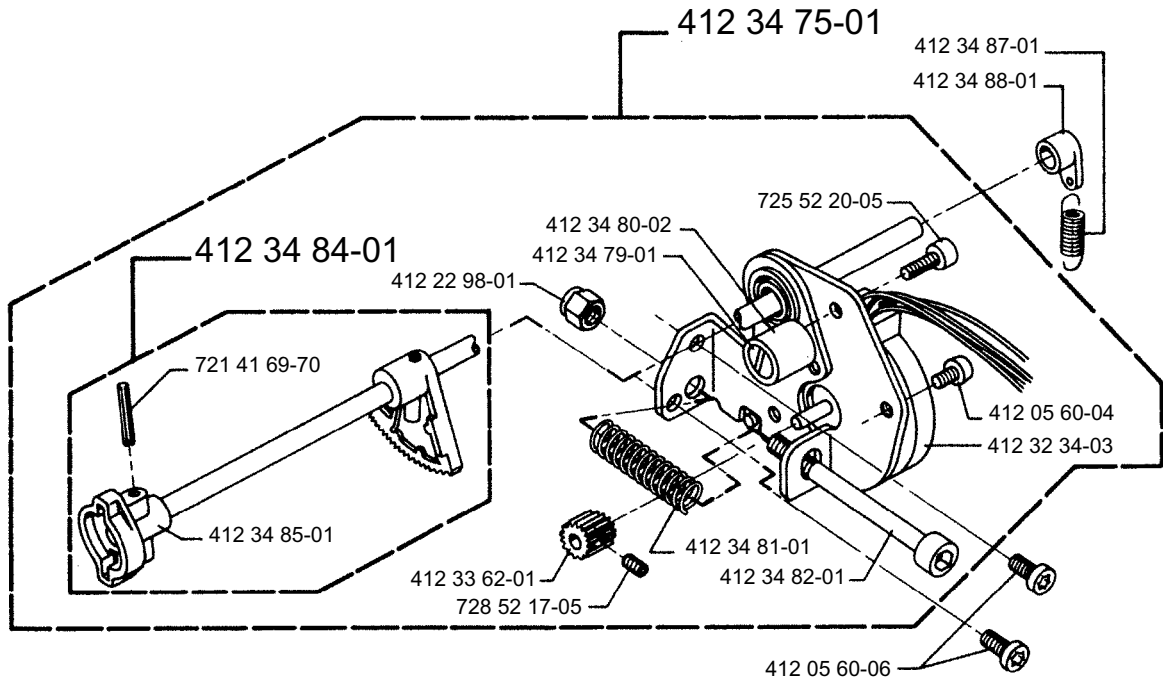 


J

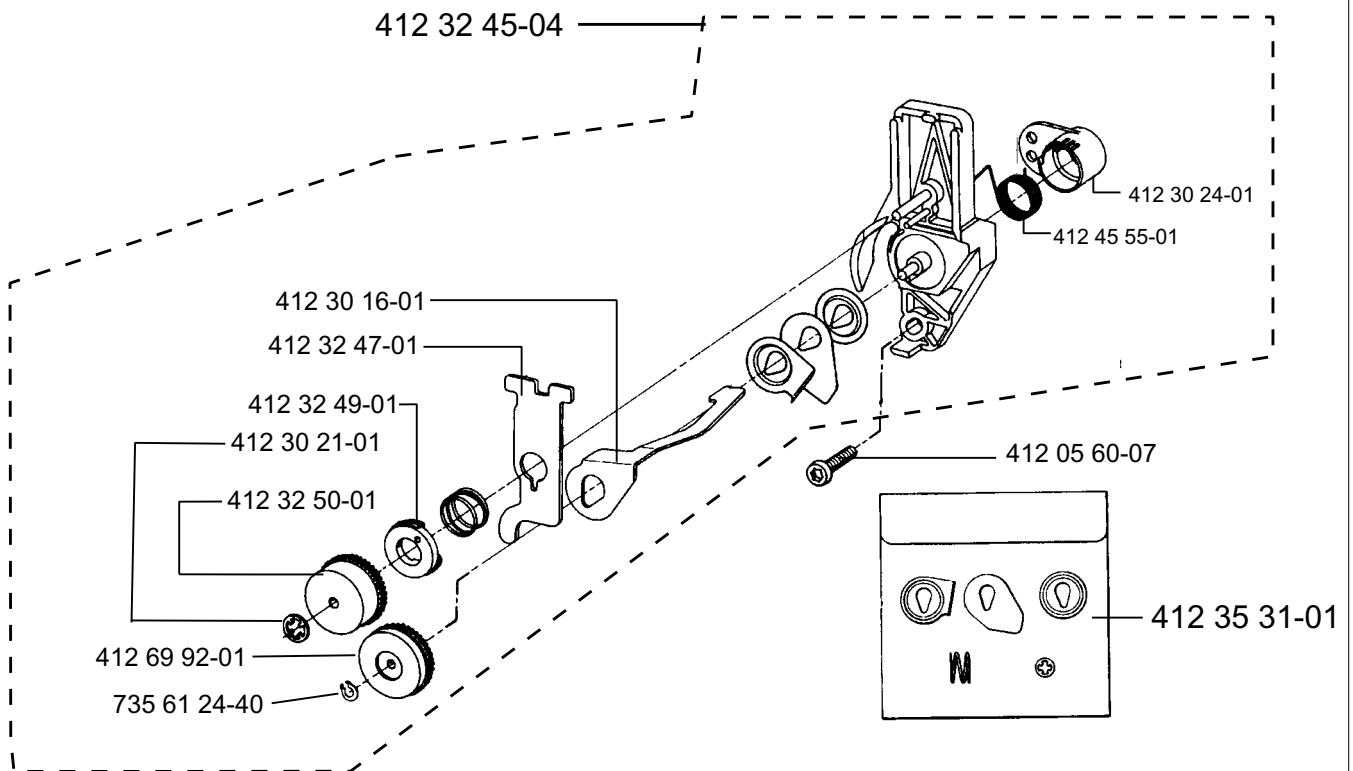 


412 77 34-01

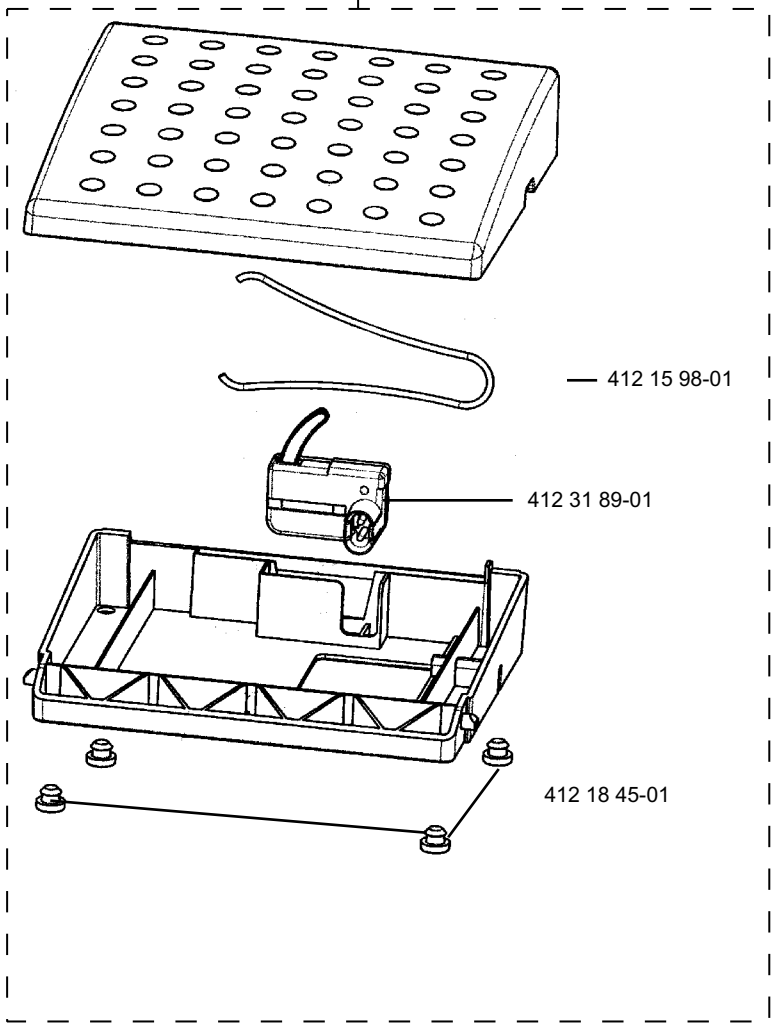 


412 80 24-01

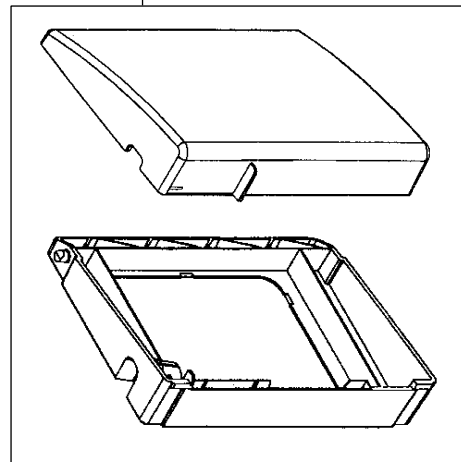 


 
412 15 78-01
412 15 79-03
412 15 80-02
412 15 81-01

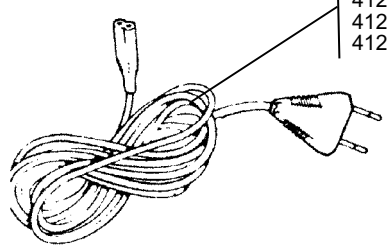

412 31 44-01
412 31 44-02

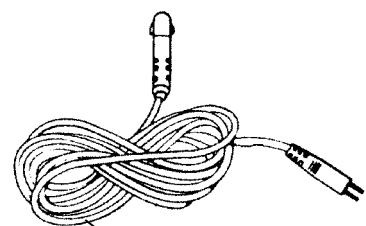 


L

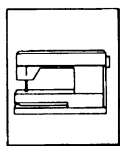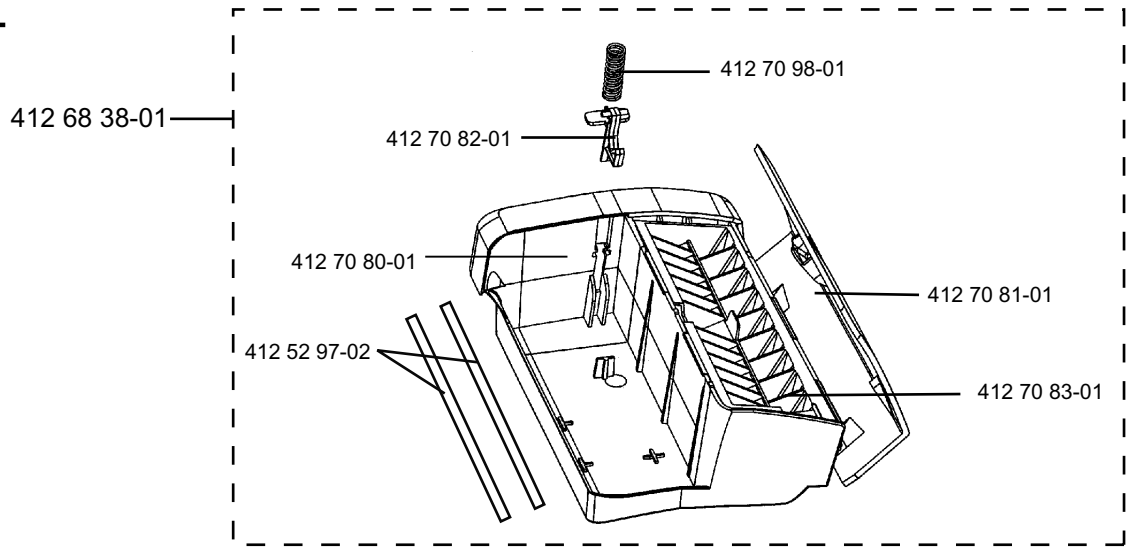  


Users Guide 730

 - 412 73 48-01 Users Guide Swe
- 412 73 48-06 Users Guide Dan
- 412 73 48-10 Users Guide Jap
- 412 73 48-11 Users Guide Fin
- 412 73 48-21 Users Guide Nor
- 412 73 48-26 Users Guide Eng
- 412 73 48-31 Users Guide Fra
- 412 73 48-36 Users Guide Holl
- 412 73 48-41 Users Guide Ita
- 412 73 48-51 Users Guide Germ
- 412 73 48-56 Users Guide Russ
- 412 73 48-82 Users Guide Pol
- 412 73 48-90 Users Guide Cz

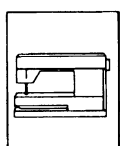


Users Guide 750

 - 412 76 47-01 Users Guide Swe
- 412 76 47-06 Users Guide Dan
- 412 76 47-10 Users Guide Jap
- 412 76 47-11 Users Guide Fin
- 412 76 47-21 Users Guide Nor
- 412 76 47-26 Users Guide Eng
- 412 76 47-31 Users Guide Fra
- 412 76 47-36 Users Guide Holl
- 412 76 47-41 Users Guide Ita
- 412 76 47-51 Users Guide Germ
- 412 76 47-56 Users Guide Russ
- 412 76 47-82 Users Guide Pol
- 412 76 47-90 Users Guide Cz

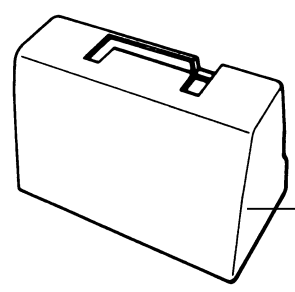


412 68 37-01 Hard cover

 
ACCESSORIES



412 35 31-01
Thread tension set

 

 412 39 09-29 /730
412 39 09-30 / 750
412 39 09-30 / 750Quilt
Plastic bag with access.



412 56 15-45
Plastic bobbins
10 pac



412 57 01-01



412 36 14-01