

# PFAFF

hobbylock

## 752 / 4752

 
**Bestandteile-Liste**

 
**List of spare parts**

**Liste des pièces détachées**


**Catalogo pezzi staccati**

**Lista de piezas de repuesto**

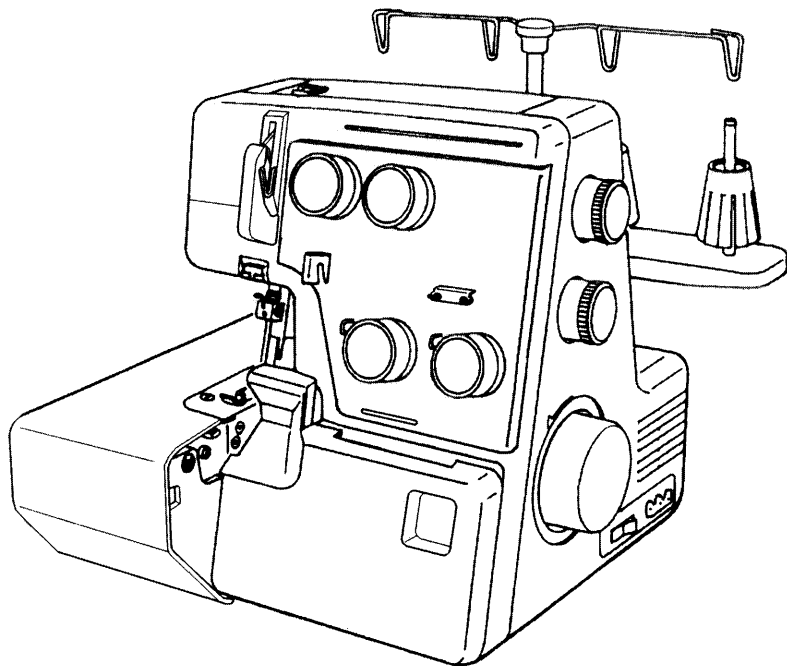


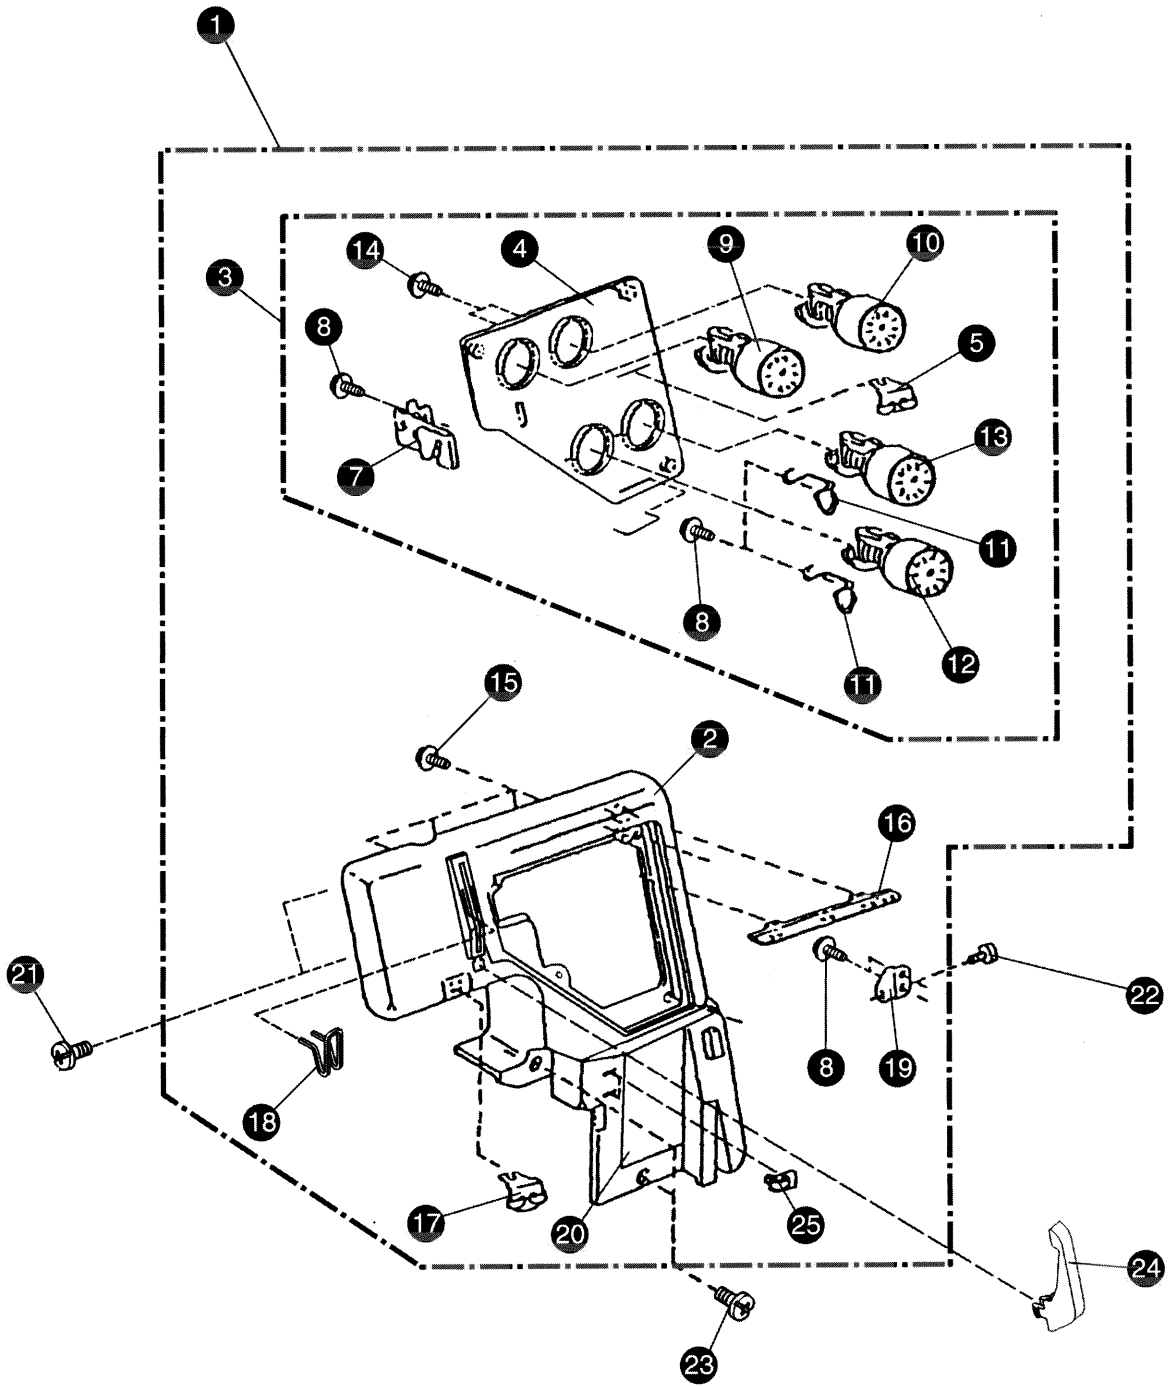


<b>Pos.-Nummer</b>	<b>Teilenummer</b>	
1	98-787 694-00-700	Modell 752
	98-787 694-10-000	Modell 4752
2	98-787 338-10-800	Modell 752
	98-787 388-20-100	Modell 4752
3	98-787 695-00-800	Modell 752
	98-787 699-00-200	Modell 4752
4	98-787 389-10-900	Modell 752
	98-787 389-20-200	Modell 4752
5	98-785 232-00-700	
6	98-787 390-00-000	
7	98-785 607-00-700	
8	98-000 149-30-100	
9	98-785 552-20-200	Modell 752
	98-785 552-40-800	Modell 4752
10	98-785 553-30-600	Modell 752
	98-785 553-50-200	Modell 4752
11	98-785 231-00-600	
12	98-785 554-30-700	Modell 752
	98-785 554-50-300	Modell 4752
13	98-785 555-30-800	Modell 752
	98-785 555-50-400	Modell 4752
14	98-000 114-70-900	
15	98-000 149-00-200	
16	98-787 363-00-400	Modell 752
	98-787 363-10-700	Modell 4752
17	98-785 015-00-200	
18	98-787 392-00-200	
19	98-787 399-00-700	
20	98-787 393-00-300	Modell 752
	98-787 396-00-600	Modell 4752
21	98-000 115-60-700	
22	98-000 101-40-400	
23	98-000 103-41-700	
24	98-787 394-00-400	
25	98-787 131-00-100	

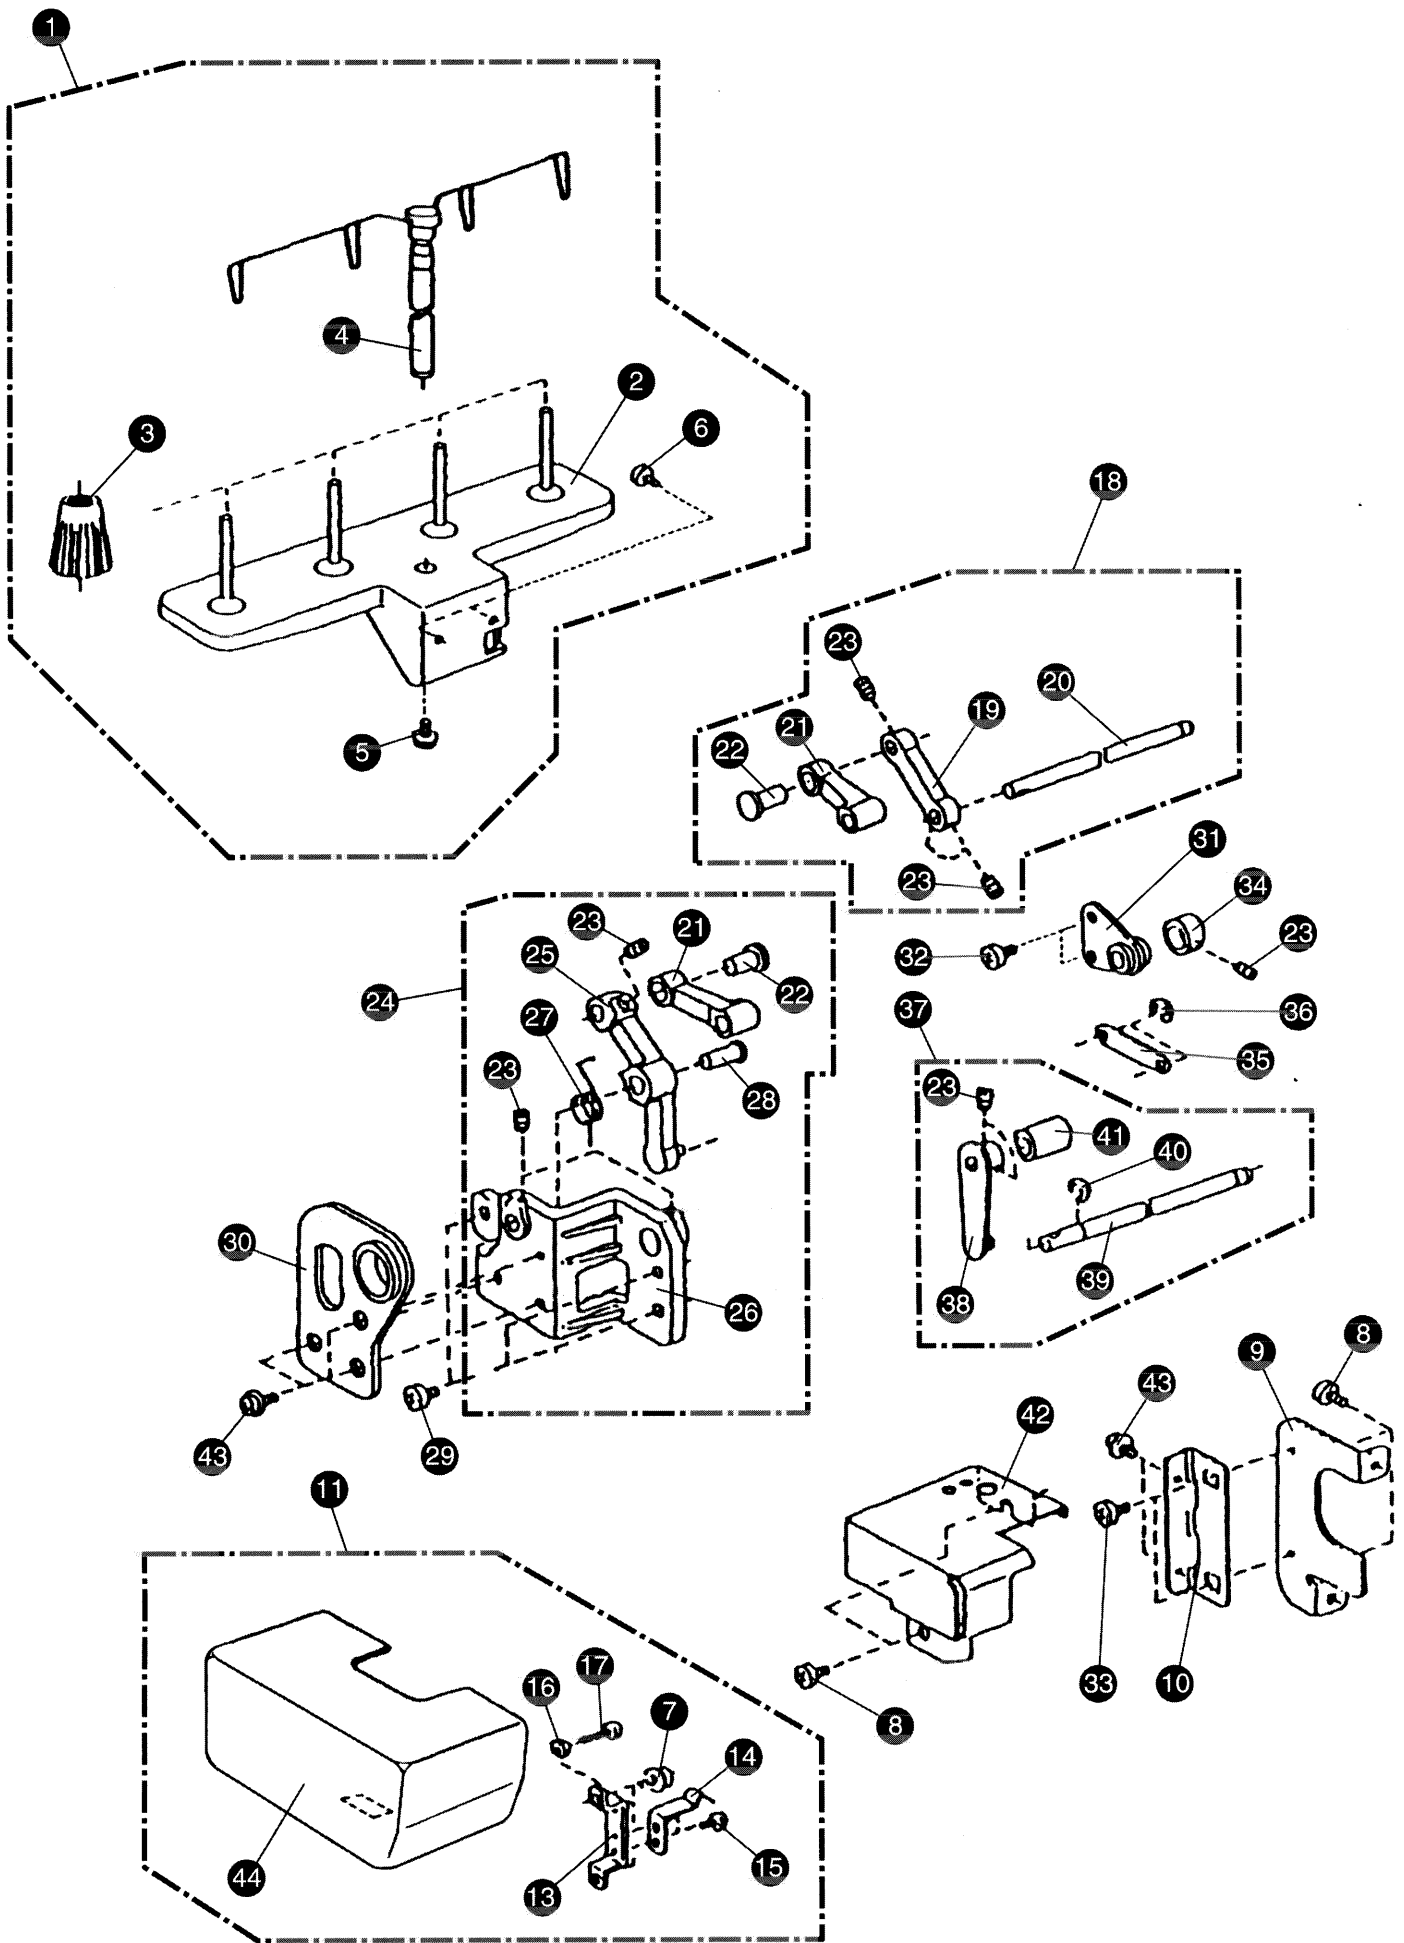 

<b>Pos.-Nummer</b>	<b>Teilenummer</b>
1	98-777 603-00-800
2	98-777 011-00-003
3	98-784 223-10-500
4	98-785 692-10-200
5	98-000 115-70-000
6	98-000 114-80-200
7	98-000 149-30-100
8	98-000 081-00-500
9	98-787 165-00-400
10	98-787 507-00-200
11	98-787 280-00-000
12	98-787 628-10-300
13	98-787 161-00-000
14	98-787 163-00-200
15	98-000 103-80-000
16	98-000 160-00-900
17	98-000 104-90-200
18	98-787 637-00-200
19	98-787 970-00-500
20	98-787 980-00-600
21	98-787 067-00-500
22	98-787 195-00-300
23	98-000 111-20-100
24	98-787 656-00-700
25	98-787 194-00-200
26	98-787 074-00-500
27	98-787 301-00-400
28	98-787 076-00-700
29	98-000 103-50-900
30	98-787 354-00-200
31	98-787 077-00-800
32	98-810 220-00-300
33	98-000 101-40-400
34	98-650 136-00-900
35	98-787 081-00-500
36	98-000 002-10-500
37	98-787 655-00-600
38	98-787 193-00-100
39	98-787 270-00-300
40	98-000 001-60-900
41	98-625 144-00-200
42	98-787 356-00-400
43	98-000 115-61-800
44	98-100 045-00-000

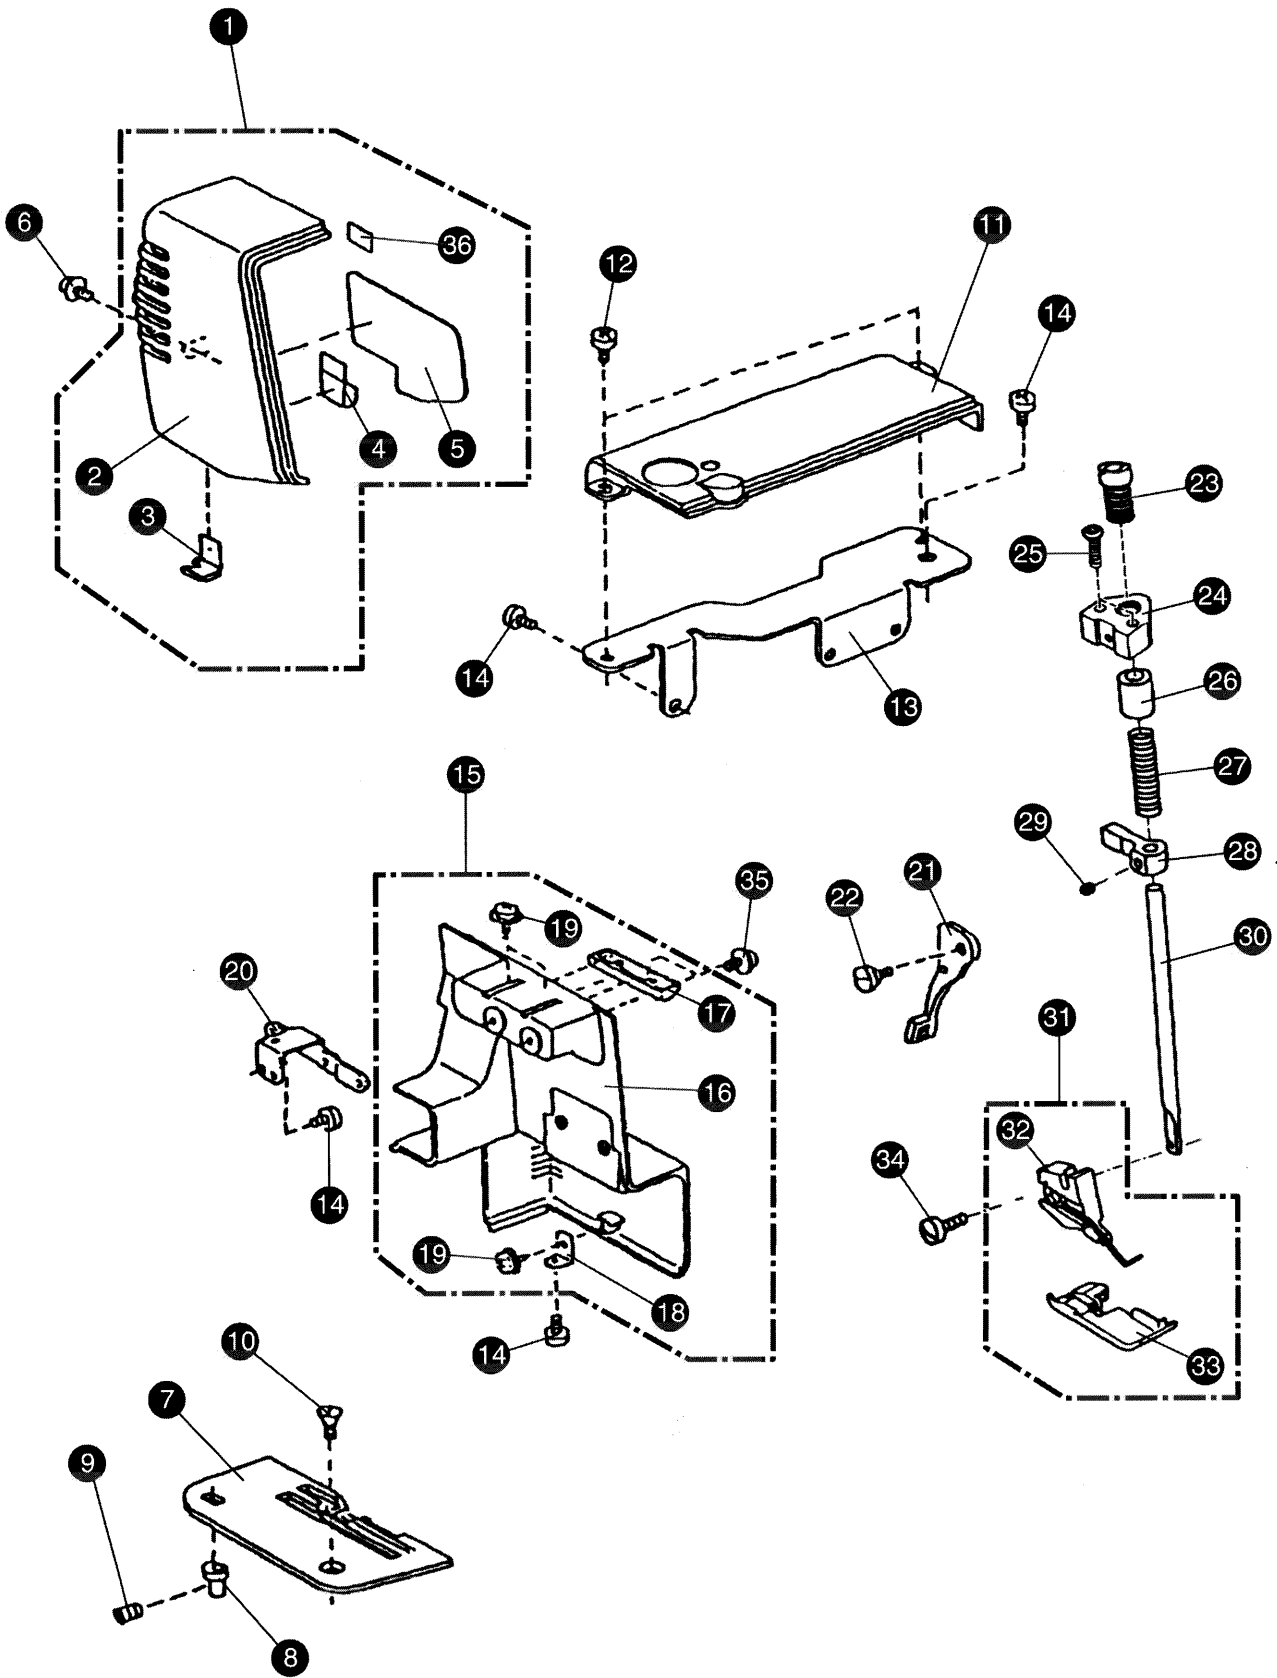 

<b>Pos.-Nummer</b>	<b>Teilenummer</b>
1	98-787 671-01-100
2	98-787 352-20-000
3	98-840 602-00-600
4	98-787 382-00-900
5	98-787 353-00-100
6	98-000 115-70-000
7	98-788 601-00-000
8	98-784 004-00-500
9	98-000 111-90-200
10	98-681 009-10-100
11	98-787 371-00-500
12	98-000 101-40-400
13	98-787 370-00-400
14	98-000 081-00-500
15	98-787 648-00-600
16	98-787 293-00-200
17	98-787 173-00-500
18	98-787 174-00-600
19	98-000 149-30-100
20	98-787 294-00-300
21	98-650 032-01-500
22	98-810 431-00-900
23	98-777 013-00-500
24	98-788 005-00-800
25	98-000 104-70-600
26	98-777 002-00-100
27	98-787 020-00-600
28	98-724 118-00-700
29	98-000 111-30-400
30	98-787 019-00-200
31	98-788 501-00-900
32	98-787 541-00-800
33	98-788 502-00-000
34	98-763 048-00-600
35	98-000 115-61-800
36	98-100 411-10-400

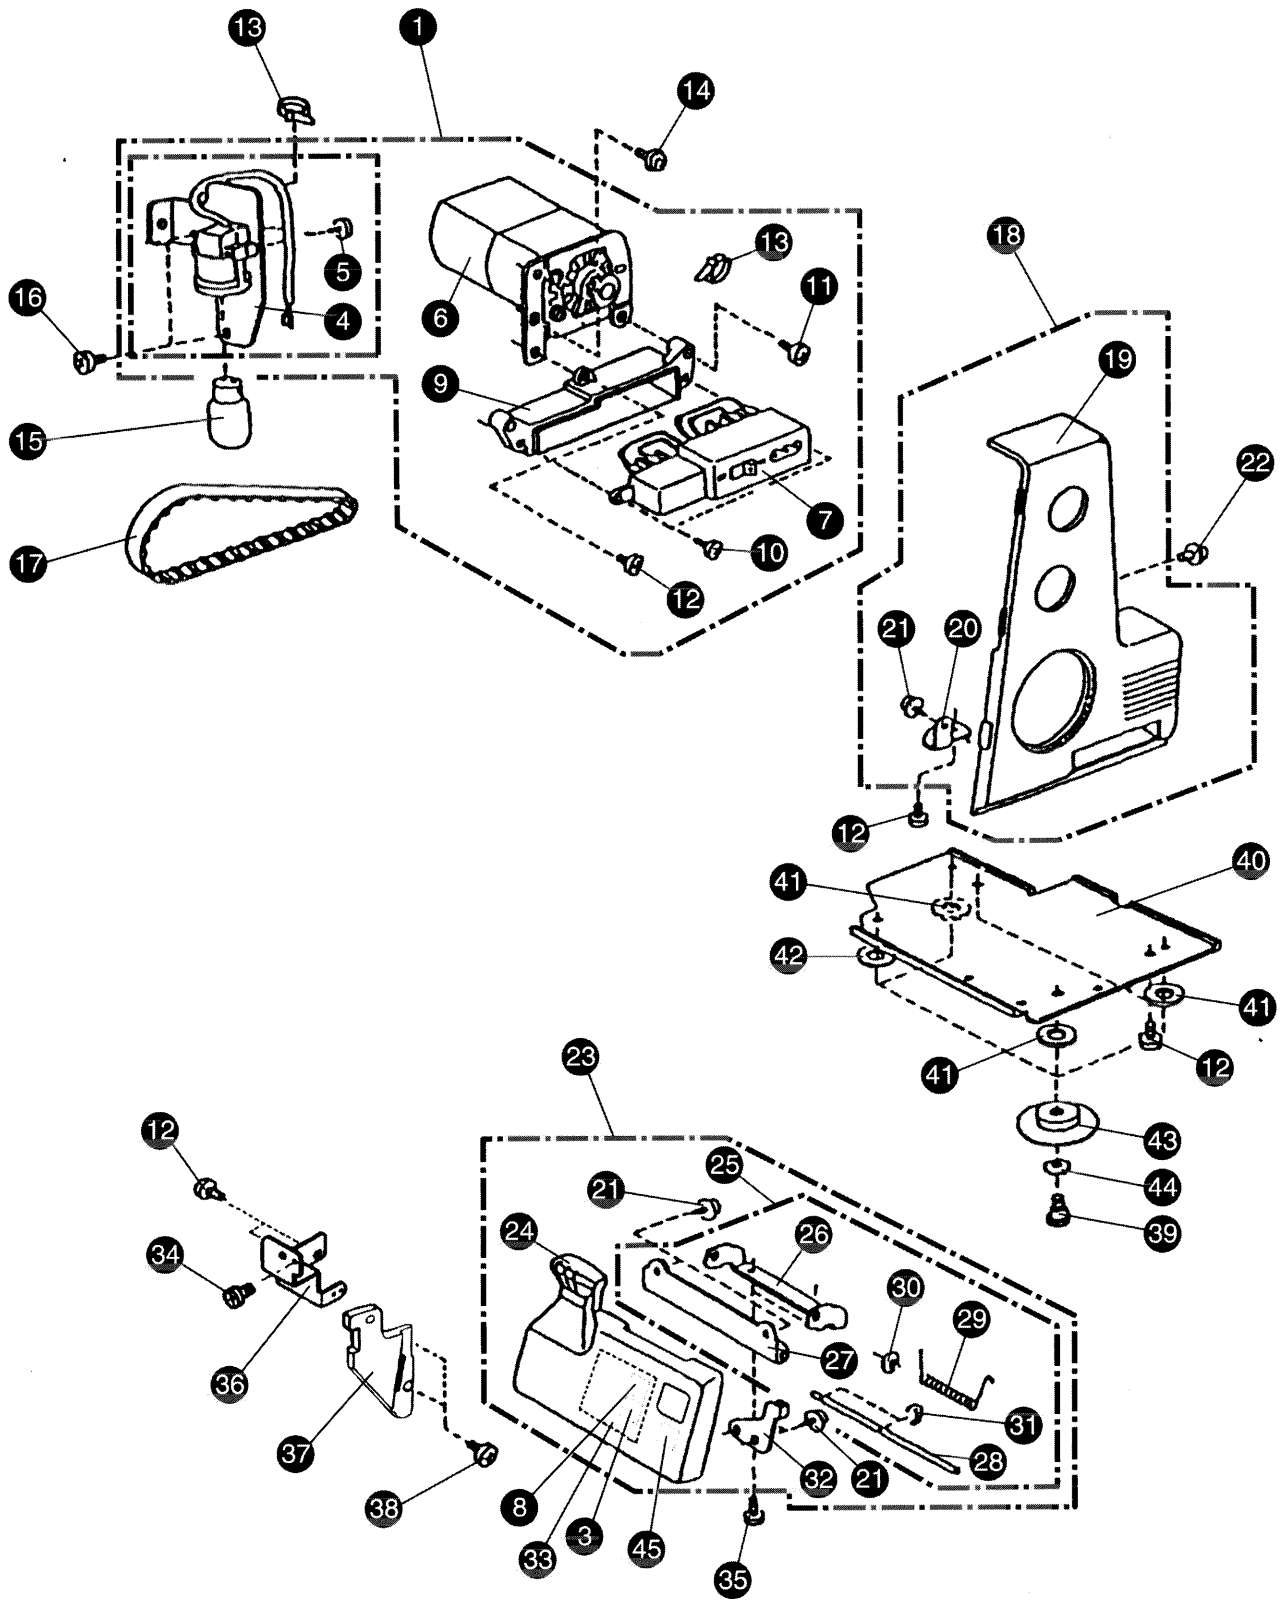 

**Pos.-Nummer**

 
**Teilenummer**

1	98-787 677-40-600	230 V
	98-787 698-00-100	110 V
2	98-787 631-00-600	220 - 240 V
	98-787 633-00-800	120 V
3	98-888 261-00-700	
4	98-787 026-00-200	




**Pos.-Nummer****Teilenummer**

5	98-000 120-20-300	
6	98-787 697-00-000	230 V
	98-787 629-10-400	120 V
7	98-777 502-00-600	220 - 240 V
	98-777 504-00-800	120 V
8	98-100 045-00-000	
9	98-784 128-02-800	
10	98-000 121-90-500	
11	98-000 104-10-800	
12	98-000 081-00-500	
13	98-000 053-00-800	
14	98-000 115-50-400	
15	98-000 009-00-900	220 - 240 V
	98-000 009-80-300	120 V
16	98-000 101-40-400	
17	98-784 124-00-200	
18	98-787 678-00-500	Modell 752
	98-787 678-60-300	Modell 4752
19	98-787 379-30-200	Modell 752
	98-787 379-90-000	Modell 4752
20	98-787 158-00-400	
21	98-000 149-30-100	
22	98-000 115-61-800	
23	98-787 696-10-200	Modell 752
	98-787 696-60-700	Modell 4752
24	98-787 150-31-600	Modell 752
	98-787 150-32-700	Modell 4752
25	98-787 626-00-800	
26	98-787 151-00-700	
27	98-787 152-00-800	
28	98-784 121-01-000	
29	98-784 122-00-000	
30	98-000 071-01-300	
31	98-000 002-10-500	
32	98-787 181-00-600	
33	98-785 279-00-600	
34	98-000 081-01-600	
35	98-000 115-20-500	
36	98-788 085-00-200	
37	98-788 086-10-600	
38	98-000 078-32-000	
39	98-784 169-00-900	
40	98-787 159-00-200	
41	98-785 260-00-400	
42	98-787 204-00-600	
43	98-784 135-00-600	
44	98-000 070-30-000	
45	98-784 250-00-800	

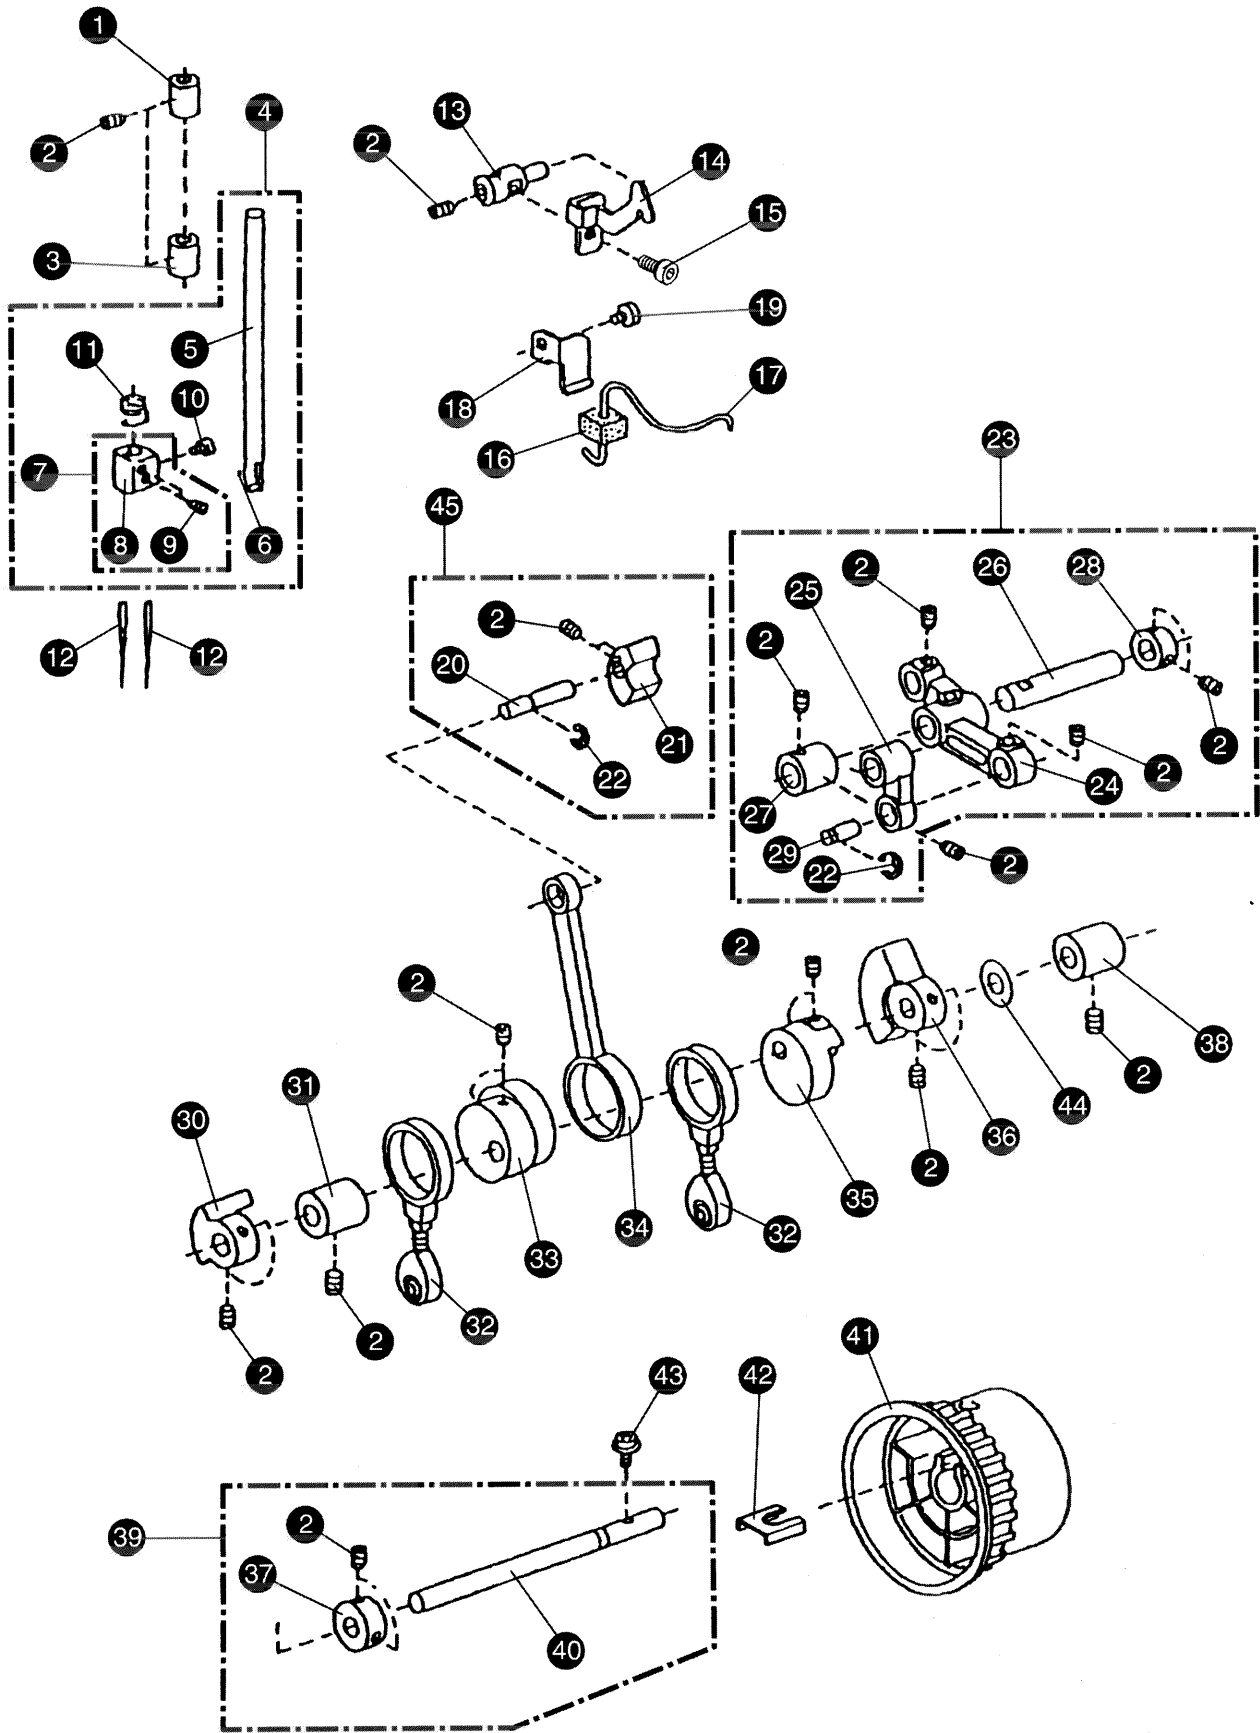


<b>Pos.-Nummer</b>	<b>Teilenummer</b>
1	98-784 027-00-400
2	98-000 111-20-100
3	98-784 028-00-500
4	98-787 606-00-200
5	98-787 015-00-800
6	98-000 022-30-700
7	98-785 557-00-100
8	98-785 004-02-000
9	98-785 008-02-400
10	98-785 026-01-700
11	98-785 009-00-300
12	98-784 157-01-500
13	98-784 024-00-100
14	98-787 348-00-300
15	98-000 084-50-300
16	98-787 027-00-300
17	98-763 033-02-000
18	98-787 029-00-500
19	98-000 101-40-400
20	98-787 346-00-100
21	98-787 347-00-200
22	98-000 001-60-900
23	98-787 604-00-000
24	98-787 021-00-700
25	98-784 021-00-800
26	98-787 010-00-300
27	98-787 011-00-400
28	98-624 245-00-100
29	98-784 022-00-900
30	98-787 177-00-900
31	98-784 310-00-700
32	98-784 602-00-900
33	98-787 007-10-000
34	98-784 011-00-500
35	98-787 004-10-700
36	98-787 176-00-800
37	98-619 006-00-200
38	98-784 009-00-000
39	98-787 670-00-700
40	98-787 345-00-000
41	98-787 175-00-700
42	98-787 114-00-800
43	98-000 114-80-200
44	98-000 038-60-500
45	98-787 686-00-600

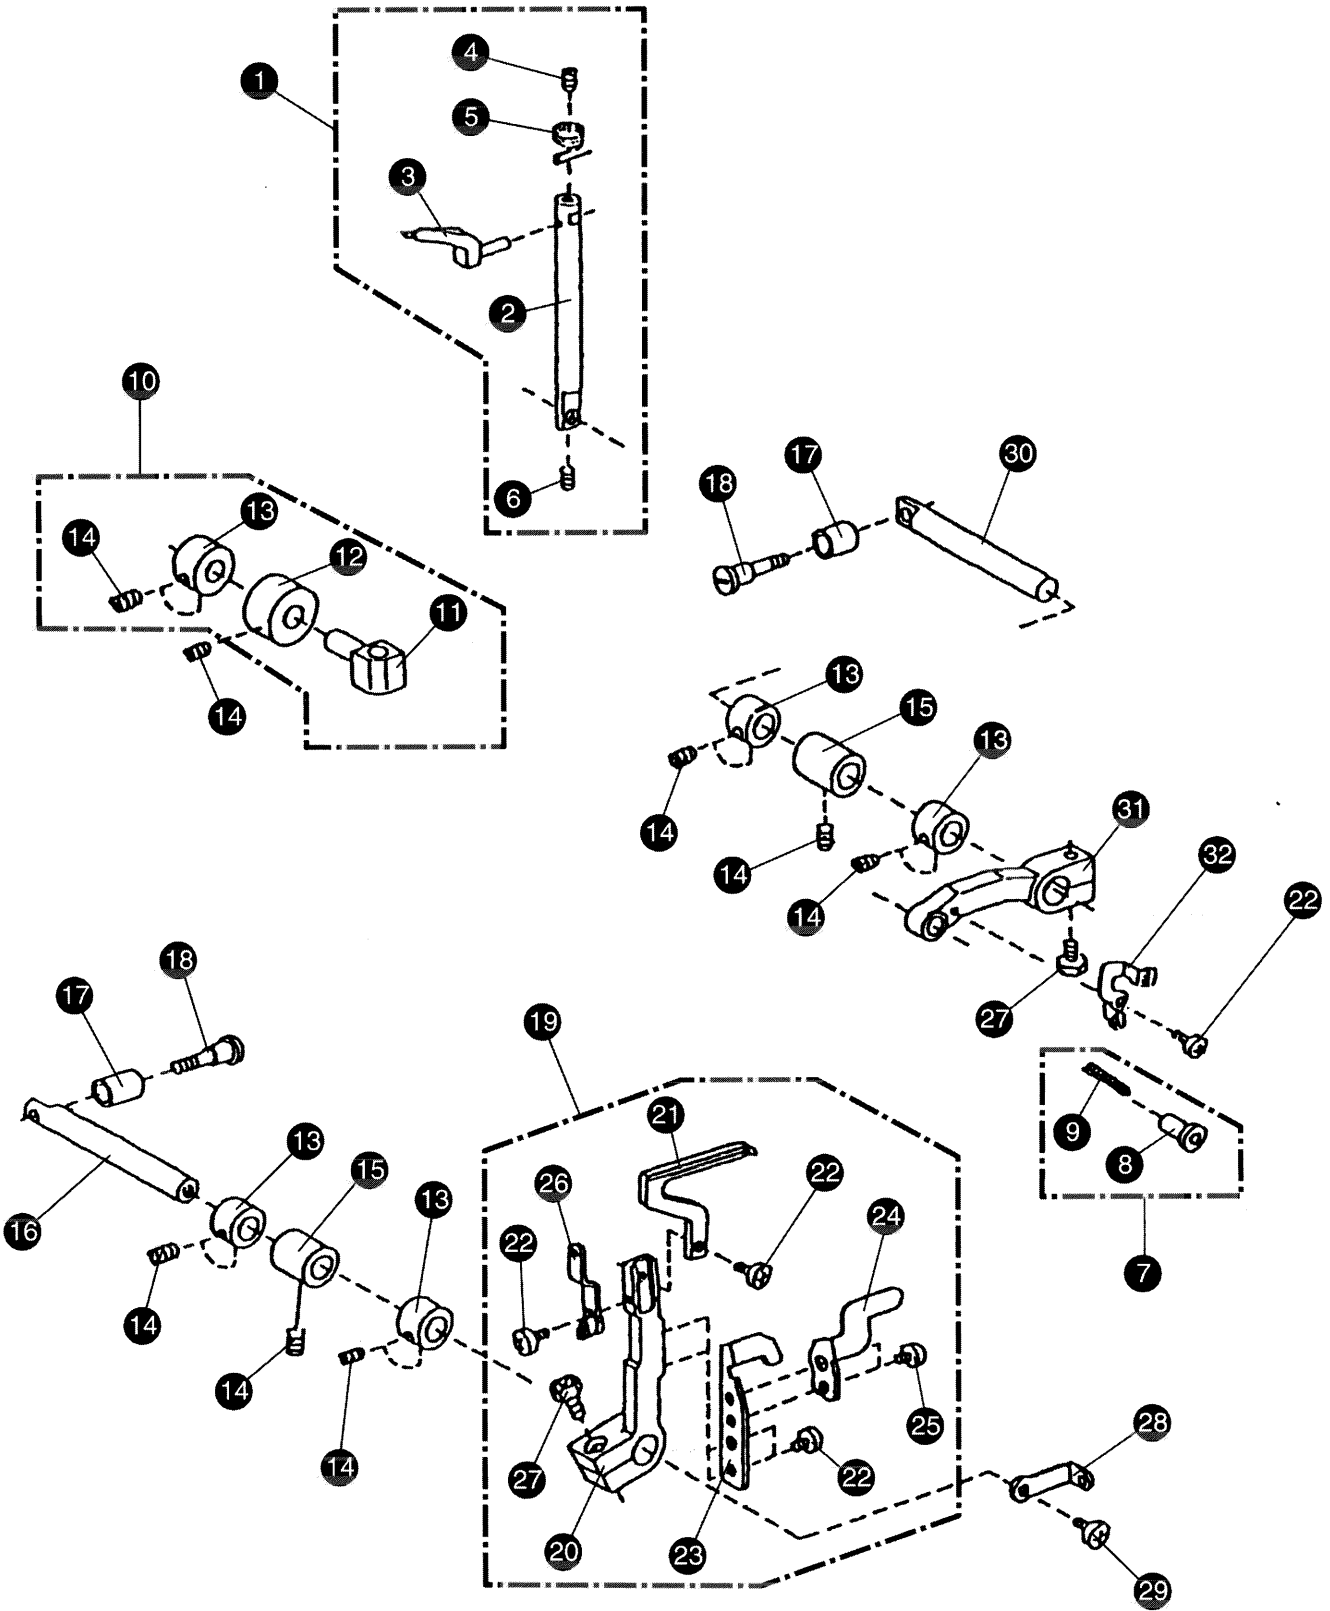 


**Pos.-Nummer****Teilenummer**

 1	98-787 618-00-700	
2	98-787 111-00-500	
3	98-784 076-01-900	
4	98-000 112-50-100	
5	98-784 077-00-900	
6	98-000 177-20-500	
7	98-787 632-00-700	
8	98-787 115-00-900	
9	98-787 192-00-000	
10	98-787 619-00-800	
11	98-787 112-00-600	
12	98-787 116-00-700	
13	98-787 106-00-700	
14	98-000 111-20-100	
15	98-787 104-00-500	
16	98-787 116-00-000	
17	98-787 107-00-800	
18	98-787 108-00-900	
19	98-785 610-03-600	Modell 752
	98-785 610-04-700	Modell 4752
20	98-785 024-00-400	
21	98-784 083-60-000	
22	98-000 078-32-000	
23	98-787 383-00-000	
24	98-785 023-00-300	
25	98-000 099-00-600	
26	98-784 085-20-600	Modell 752
	98-784 085-30-900	Modell 4752
27	98-000 138-00-800	
28	98-785 010-20-300	Modell 752
	98-785 010-30-600	Modell 4752
29	98-000 103-00-400	
30	98-787 105-00-600	
31	98-787 109-00-000	
32	98-787 110-00-400	Modell 752
	98-787 110-02-600	Modell 4752

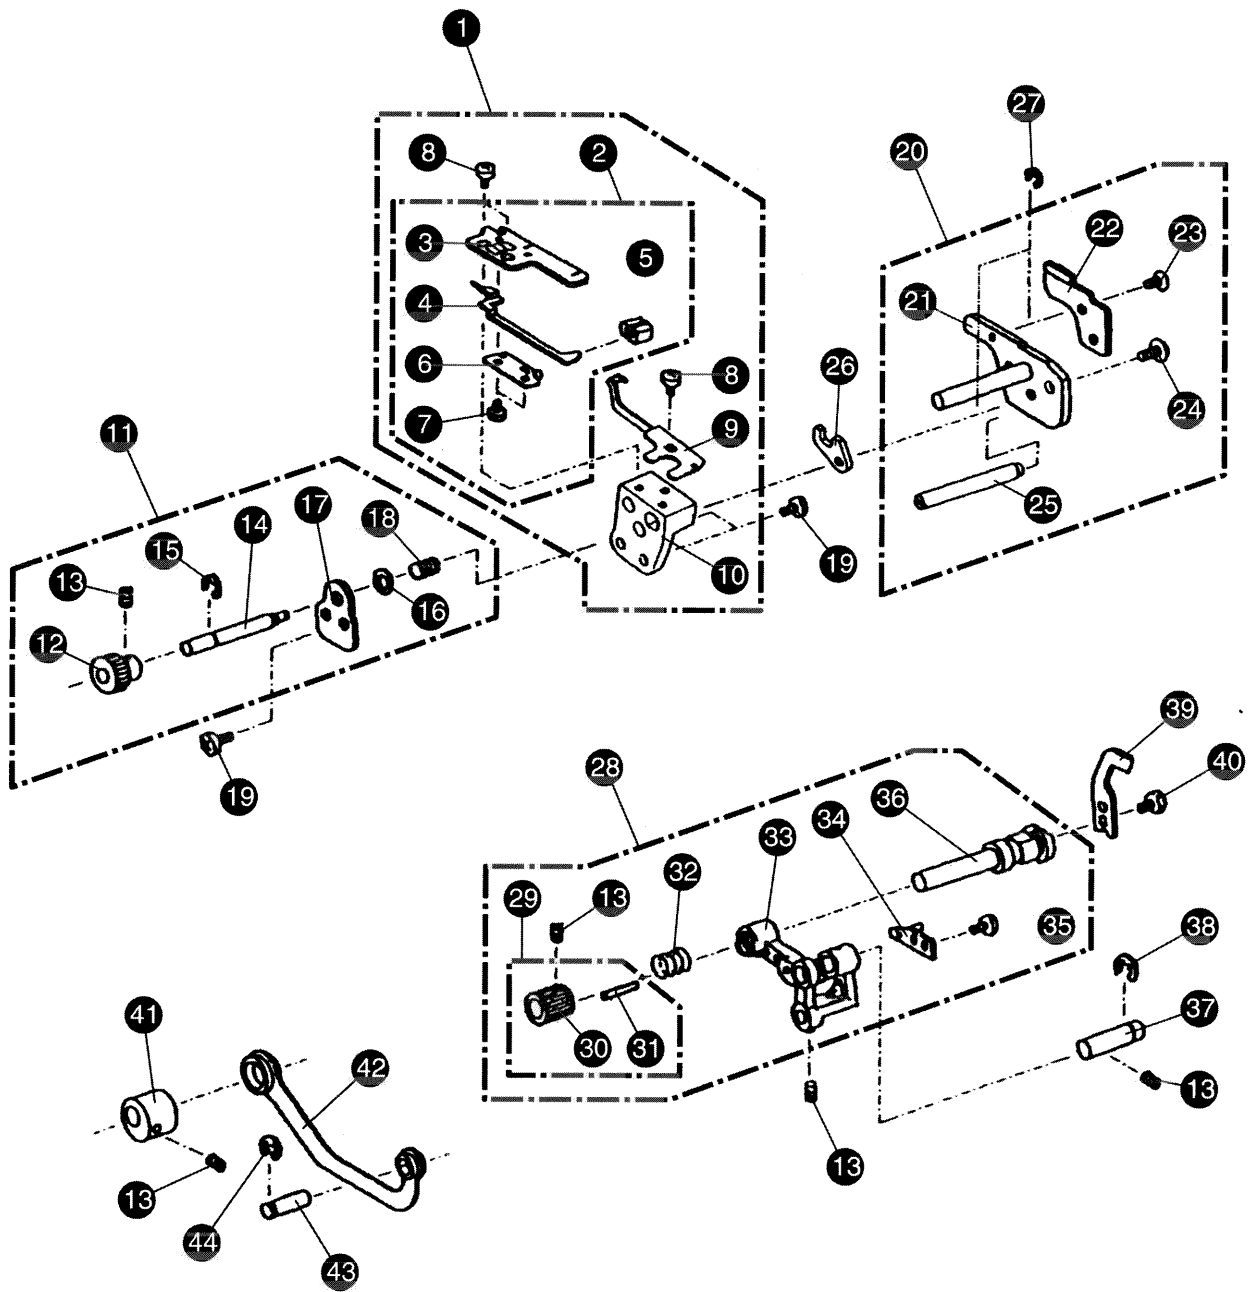


<b>Pos.-Nummer</b>	<b>Teilenummer</b>
1	98-788 604-00-300
2	98-788 605-00-400
3	98-788 016-00-200
4	98-788 017-00-300
5	98-787 041-00-300
6	98-788 018-00-400
7	98-820 373-00-300
8	98-000 078-32-000
9	98-788 019-00-500
10	98-788 015-00-100
11	98-788 619-00-100
12	98-787 050-00-500
13	98-000 111-20-100
14	98-788 020-00-900
15	98-000 002-50-700
16	98-000 070-30-000
17	98-787 046-00-800
18	98-787 048-00-000
19	98-000 081-00-500
20	98-788 603-00-200
21	98-788 012-00-800
22	98-788 013-00
23	98-000 102-22-100
24	98-000 114-71-000
25	98-788 014-00-000
26	98-788 021-00-000
27	98-000 001-20-700
28	98-787 635-00-000
29	98-784 607-xx-xxx
30	98-784 044-00-700
31	98-000 003-60-100
32	98-784 043-00-600
33	98-787 033-00-200
34	98-784 041-00-400
35	98-810 220-00-300
36	98-784 042-00-500
37	98-787 022-00-800
38	98-000 002-90-900
39	98-784 045-00
40	98-624 303-00-800
41	98-784 038-00-800
42	98-787 032-00-100
43	98-787 012-00-500
44	98-000 001-60-900

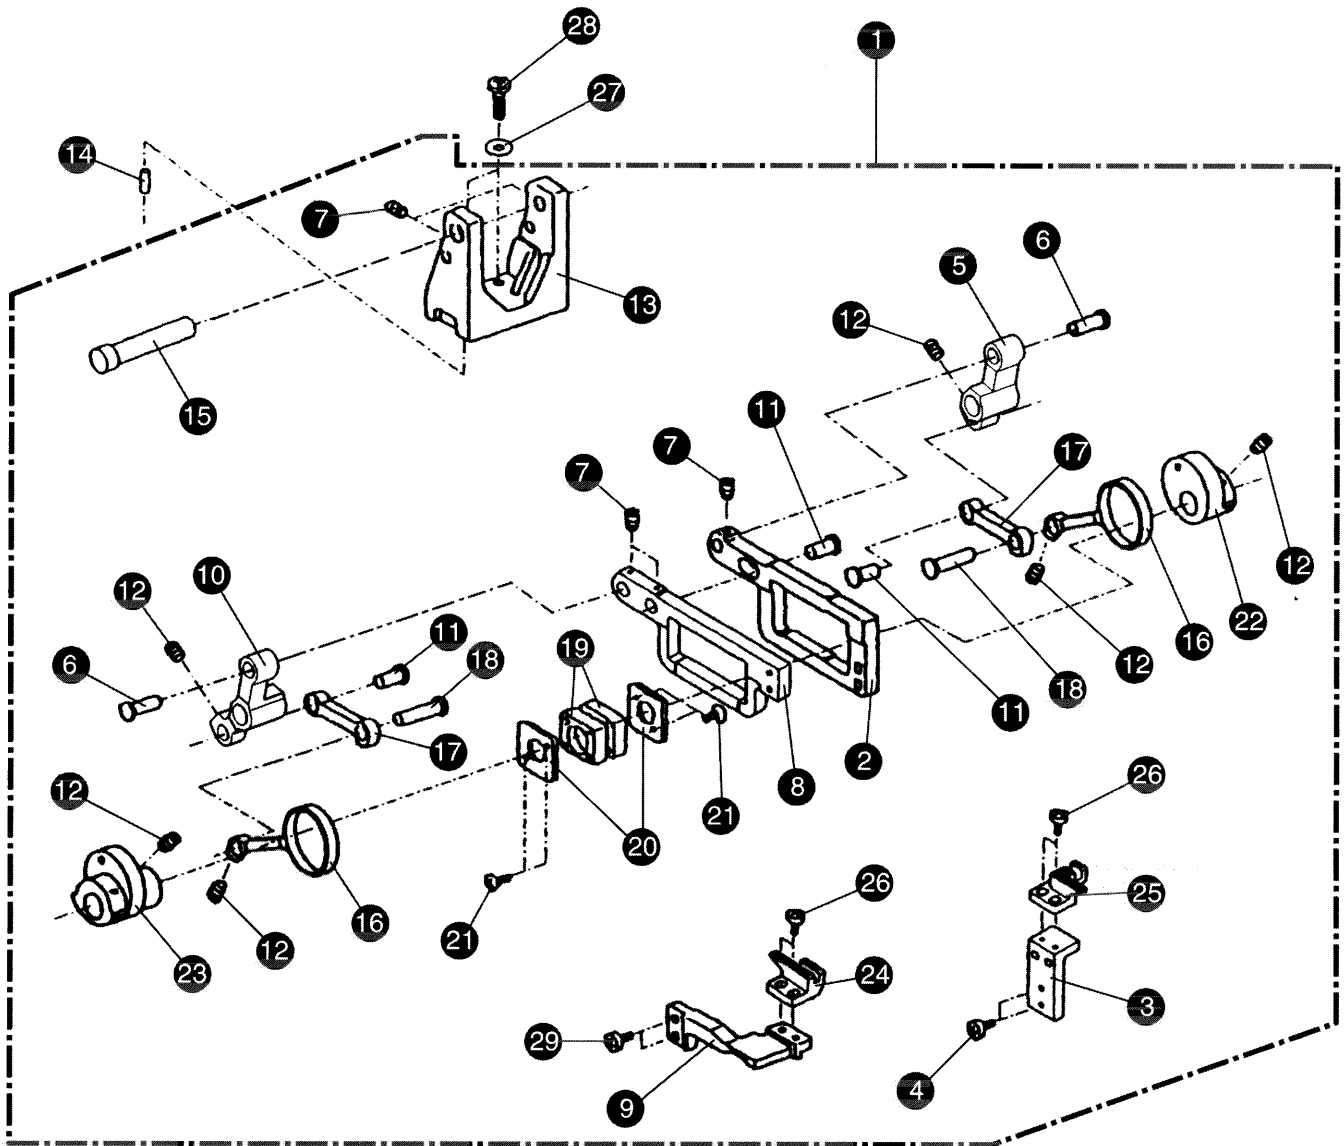 







<b>Pos.-Nummer</b>	<b>Teilenummer</b>
1	98-788 606-00-500
2	98-788 022-00-100
3	98-788 023-00-200
4	98-000 068-81-100
5	98-787 054-00-900
6	98-787 055-00-000
7	98-000 111-90-200
8	98-788 024-00-300
9	98-788 025-00-400
10	98-787 212-00-700
11	98-787 059-00-400
12	98-000 111-20-100
13	98-787 305-00-800
14	98-000 122-80-300
15	98-787 306-00-900
16	98-787 065-00-300
17	98-787 066-00-400
18	98-787 068-00-600
19	98-787 210-00-500
20	98-787 071-00-200
21	98-787 189-00-400
22	98-787 072-00-300
23	98-787 073-00-400
24	98-788 028-00-700
25	98-788 027-00-600
26	98-000 066-70-500
27	98-000 070-50-600
28	98-000 101-81-700
29	98-000 104-20-100


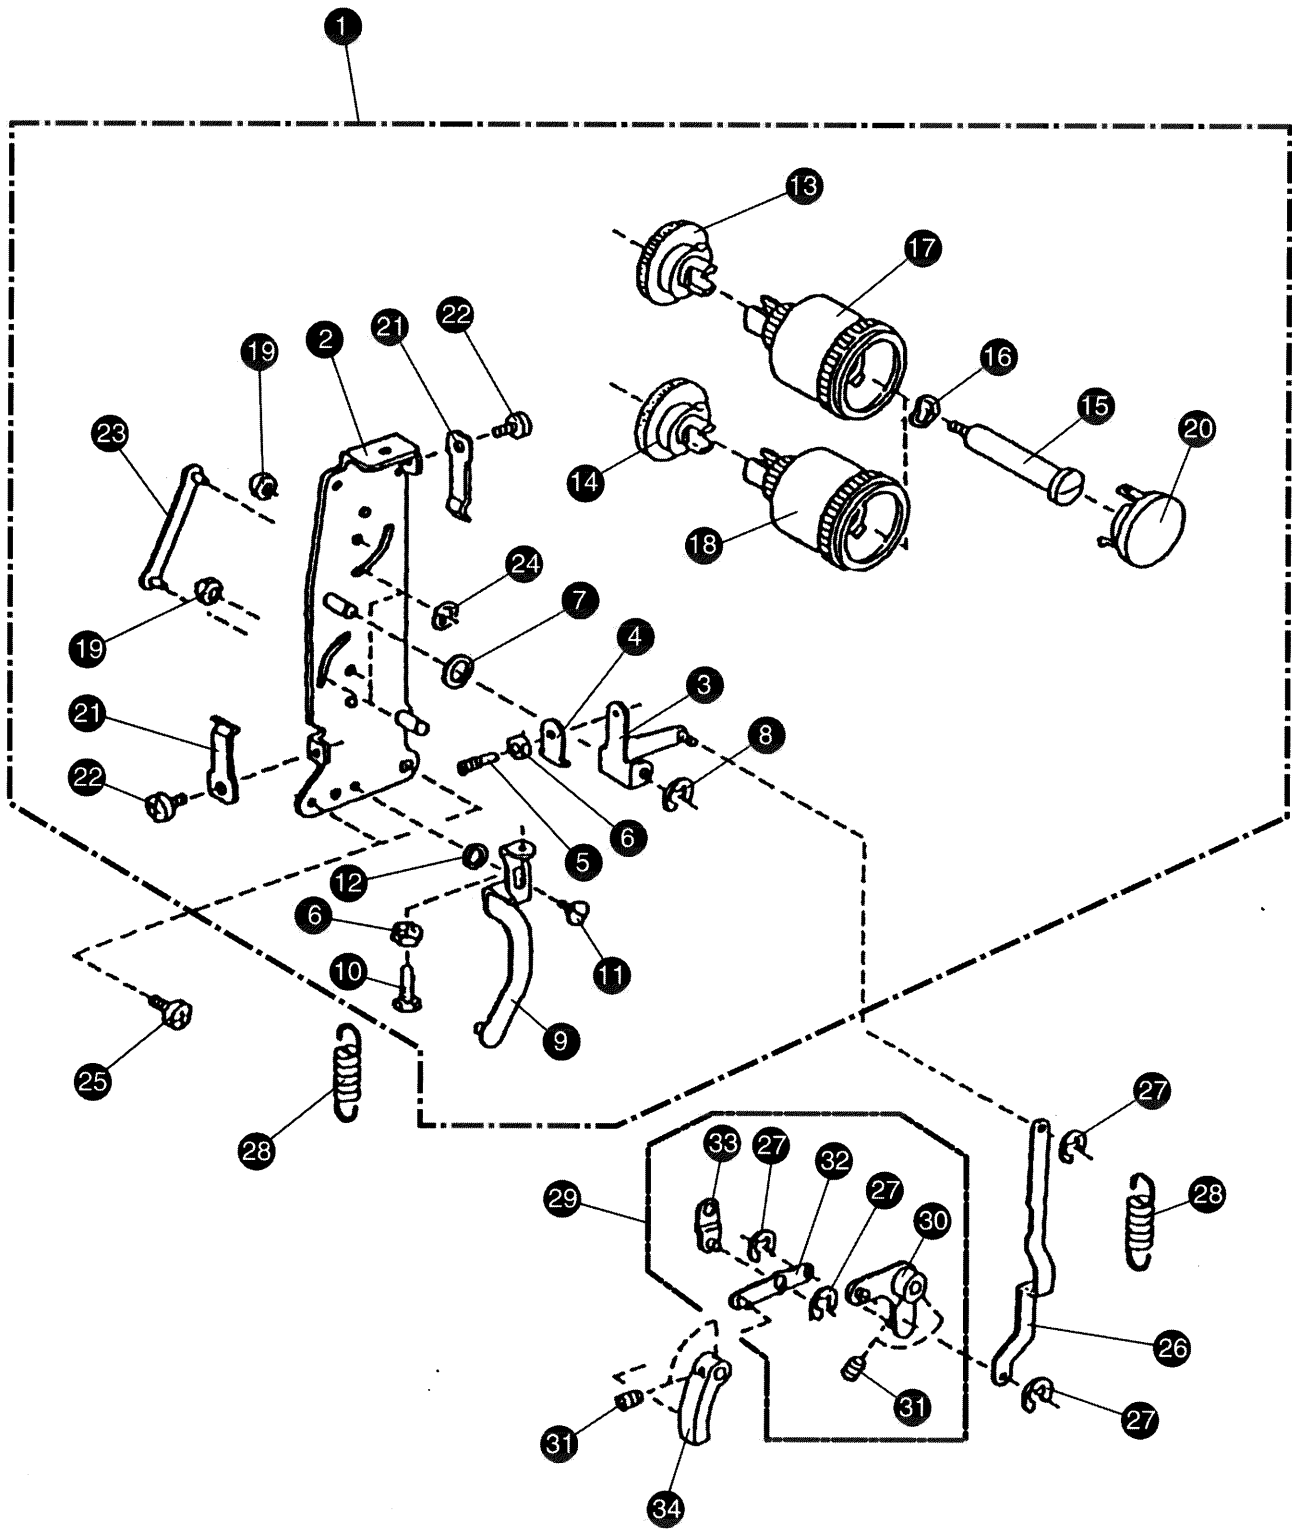 


**Pos.-Nummer****Teilenummer**

    1	98-787 672-00-900	Modell 752
	98-787 672-10-200	Modell 4752
2	98-787 357-00-500	
3	98-787 089-00-300	
4	98-785 156-00-600	
5	98-652 056-00-000	
6	98-000 160-10-200	
7	98-000 036-50-000	
8	98-000 001-60-900	
9	98-787 264-00-400	
10	98-785 224-00-600	
11	98-785 286-00-600	
12	98-785 222-00-400	
13	98-787 091-00-800	
14	98-787 269-00-900	
15	98-785 218-00-700	
16	98-000 116-20-600	
17	98-787 261-70-200	Modell 752
	98-787-261-13-700	Modell 4752
18	98-787 261-80-500	Modell 752
	98-787 261-14-800	Modell 4752
19	98-000 061-20-500	
20	98-787 262-30-100	
21	98-787 630-00-300	
22	98-000 081-11-900	
23	98-787 094-00-100	
24	98-000 014-30-600	
25	98-000 081-00-500	
26	98-787 102-00-300	
27	98-000 002-10-500	
28	98-787 259-00-600	
29	98-787 657-00-800	
30	98-787 267-00-700	
31	98-000 111-20-100	
32	98-787 266-00-600	
33	98-787 265-00-500	
34	98-787 268-00-800	

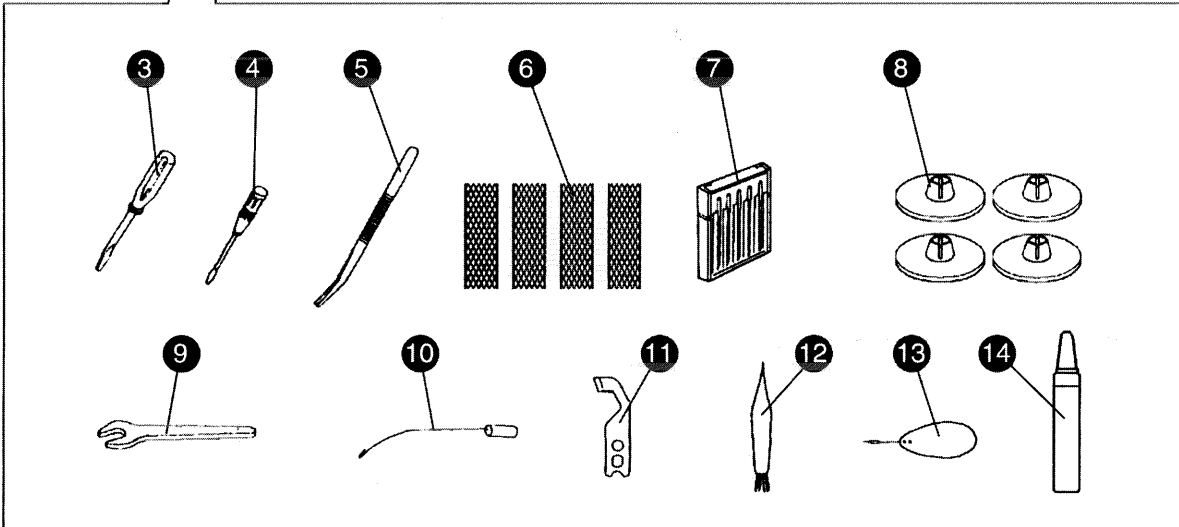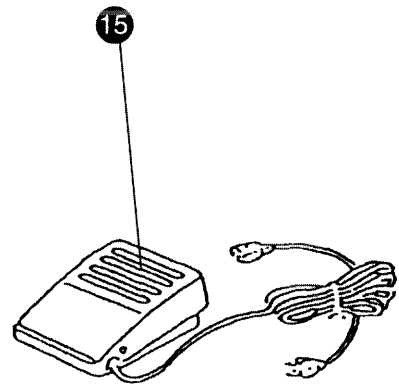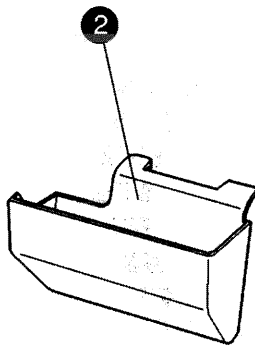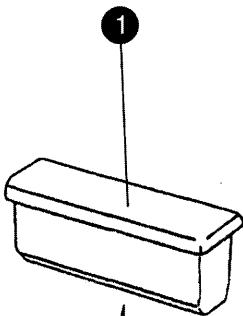

<b>Pos.-Nummer</b>	<b>Teilenummer</b>	
1	98-787 172-00-400	
2	98-787 171-00-300	Modell 752
	98-787 171-50-800	Modell 4752
3	98-784 810-00-200	
4	98-647 803-00-400	
5	29-924 991-64	
6	93-415 431-31	
7	98-784 860-10-000	
8	98-822 020-50-300	
9	07-433 000-12	
10	98-784 806-00	
11	98-784 045-00	
12	93-847 979-91	
13	93-847 250-00	
14	93-035 910-91	
15	C-2038-1	230 V
	C-1028	120 V

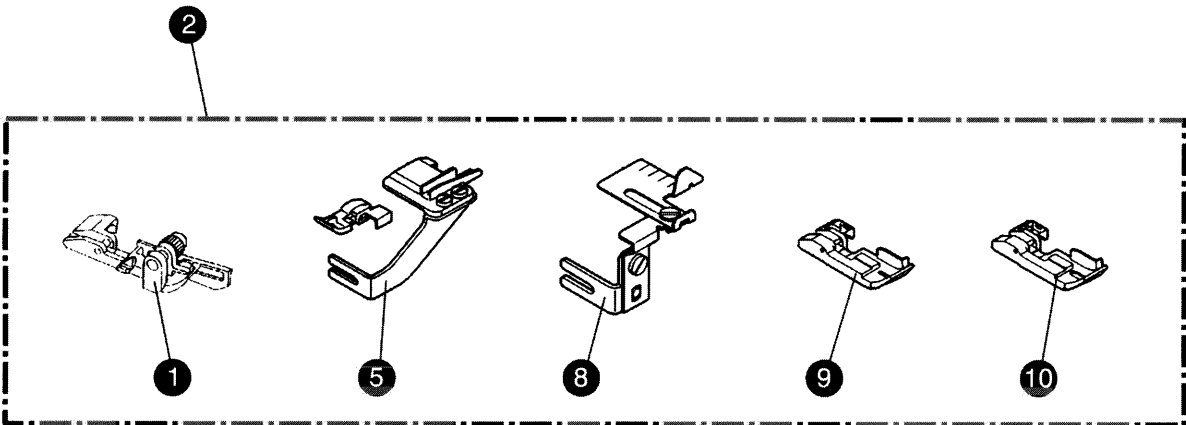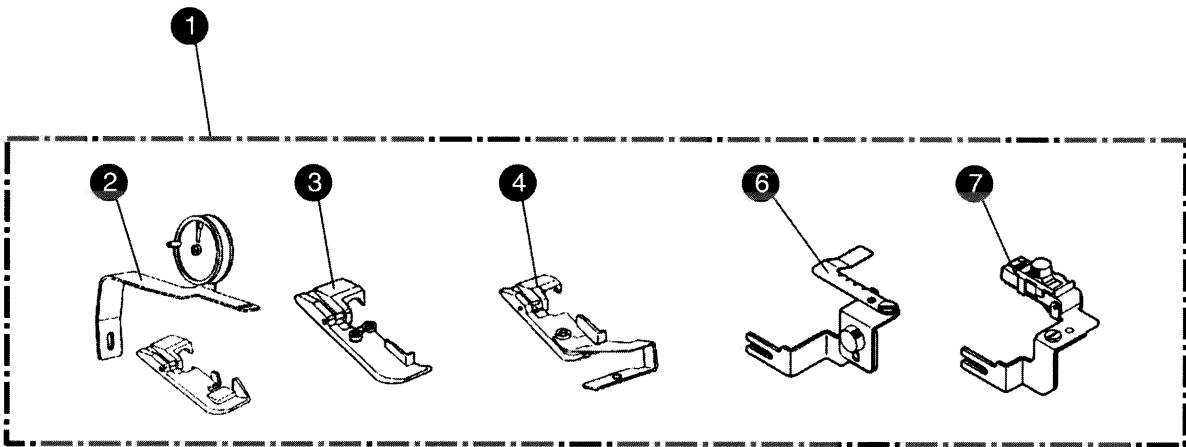  

<b>Pos.-Nummer</b>	<b>Teilenummer</b>
1	98-200 234-10-400
2	98-200 204-20-800
3	98-200 207-10-800
4	98-200 208-10-900
5	98-200 217-10-100
6	98-200 218-10-200
7	98-200 235-10-500
8	98-200 203-10-400
9	98-200 214-10-800
10	98-200 216-10-000
11	98-200 219-10-300
12	98-200 220-10-700