




**Husqvarna**  
**Sewing machines**  
**Huskylock M560EDT**

HUSQVARNA AB · HUSKVARNA · SWEDEN

# 560 EDT

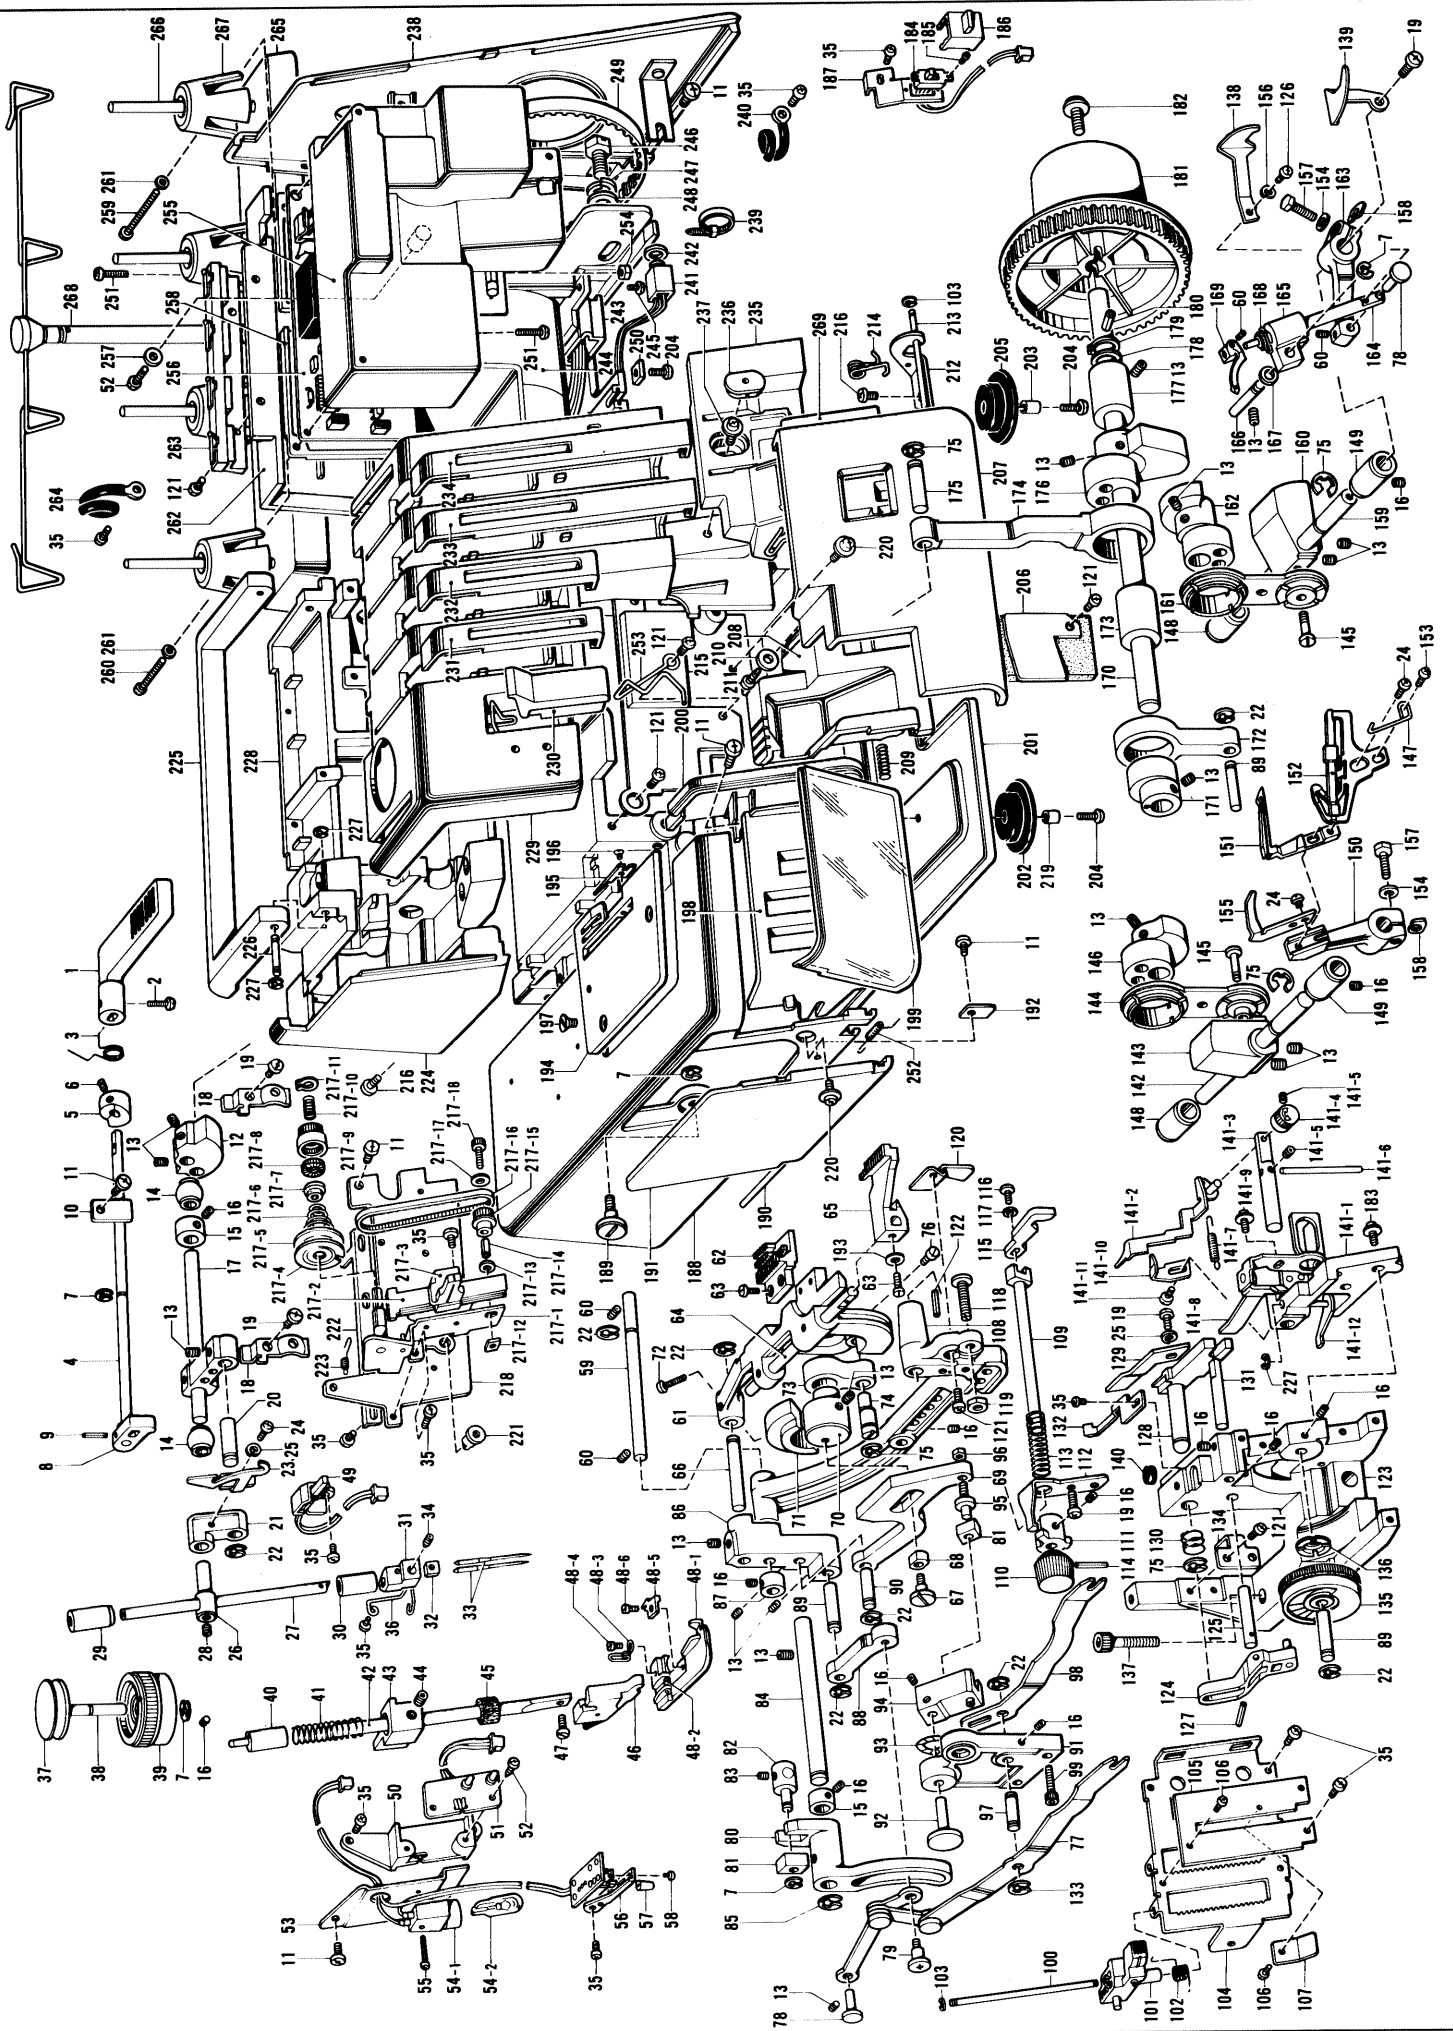

Ref. No.	Parts No.	Parts Name	Ref. No.	Parts No.	Parts Name	Ref. No.	Parts No.	Parts Name	Ref. No.	Parts No.	Parts Name
1	X75108001	Presser foot lever	54-1	X63086101	Light holder assembly	113	X75231001	Spring	161	X76036001	Over looper rod
2	X060301605	Set screw	54-2	X602228001	Sew-light bulb	114	X75231001	Spring pin	162	X75104000	Looper rod connecting wheel
3	X75342001	Spring	55	X02261605	Set screw	115	X75059001	Upper blade	163	X05078001	Over looper shaft lever
4	X75107000	Presser bar lifter shaft	56	X75152001	Sew-light switch holder	116	X06070812	Set screw	164	X75982001	Over looper shaft
5	X75158000	Tension release cam	57	X75461001	Sew-light switch cap	117	X05161003	Washer	165	X75093000	Over looper shaft guide
6	X14300532	Set screw	58	X02020416	Set screw	118	X75314001	Set screw	166	X75978001	Guide shaft
7	X048040342	Stop ring	59	X75079001	Feed shaft	119	X021060312	Nut	167	X025050132	Washer
8	X75118000	Presser lifter cam	60	X14400422	Feed bar	120	X75165001	Stitch stopper	168	X75971001	Over looper thread guide
9	X75168042	Spring pin	61	X75237001	Feed bar	121	X02400804	Set screw	169	X75209001	Over looper
10	X75308001	Shaft presser	62	X75824001	Main feed dog	122	X04720842	Spring pin	170	X75156000	Driving shaft
11	X060400612	Set screw	63	X10080003	Set screw	123	X75192000	Needle plate base	171	X75169000	Upper blade eccentric wheel
12	X75138000	Needle bar driving lever	64	X75081001	Differential feed lever shaft	124	X75832000	Lower blade movable lever	172	X75140000	Upper blade link
13	X12500632	Set screw	65	X75228001	Differential feed dog	125	X75090001	Lever shaft	173	X75128000	Driving shaft bushing, left
14	X75071000	Crank shaft bushing	66	X75077001	Feed bar shaft	126	X062300412	Set screw	174	X38839000	Needle bar rod
15	X75150001	Collar	67	X75075001	Stud screw	127	X047301442	Spring pin	175	X75065001	Rod shaft
16	X14400532	Set screw	68	X75076000	Slide block	128	X75103000	Lower blade holder	176	X75137000	Needle bar connecting wheel assembly
17	X75557001	Needle bar crank shaft assembly	69	X75127000	Horizontal feed lever	129	X75233001	Lower blade	177	X12658000	Driving shaft bushing, right
18	X75058001	Bushing presser	70	X75167000	Feed eccentric wheel	130	X75234001	Spring	178	X127797000	Washer
19	X060400812	Set screw	71	X75536000	Feed eccentric wheel balance	131	X75262001	Lower blade guide shaft	179	X048100142	Stop ring
20	X75217001	Needle bar link shaft	72	X062301206	Set screw	132	X75916001	Needle guard	180	X047402542	Spring pin
21	X128782001	Needle bar link A	73	X128872000	Vertical feed lever	133	X75581001	Stop ring	181	X75202001	Handwheel
22	X048050346	Stop ring	74	X127801001	Vertical adjusting shaft	134	X75229001	Feed bar guide	182	X38849001	Set screw
23	X75980001	Thread take-up	75	X048060342	Stop ring	135	X76059002	Stitch width control dial	183	X38172001	Set screw
24	X062670612	Set screw	76	X104908002	Set screw	136	X75224000	Spring	184	X52540001	SP switch assembly
25	X028040242	Washer	77	X75350001	Differential feed change lever assembly	137	X75722001	Set screw	185	X02020416	Set screw
26	X128656001	Needle bar connecting stud	78	X127785001	Stud shaft	138	X75975001	Thread take-up, B	186	X50963001	Speed selector knob
27	X75136001	Needle bar	79	X75222001	Stud screw	139	X75979001	Thread take-up, A	187	X75235001	Switch holder
28	X140406022	Set screw	80	X75061000	Differential feed lever	140	X127025000	Cap	188	X75193001	Material plate cover
29	X128702000	Needle bar bushing, upper	81	X75083000	Slide block	141	X75652001	Movable stitch assembly	189	X75254001	Material plate cover set screw
30	X128703000	Needle bar bushing, lower	82	X75082001	Slide block stud	141-1	X75653001	Stitch tongue holder	190	X75283000	Side cover shaft
31	X75205001	Needle clamp	83	X524713001	Set screw	141-2	X75654001	Movable stitch tongue assembly	191	X75278001	Side cover
32	X75246001	Nut	84	X75080001	Differential feed lever shaft	141-3	X75656001	Stitch shaft	192	X75285001	Shaft presser
33	X75577012	Needle #80	85	X048070342	Stop ring	141-4	X75214001	Changing knob	193	X025850132	Washer
34	X16400632	Set screw	86	X75221000	Feed bar lever	141-5	X14300332	Set screw	194	X75822001	Needle plate
35	X060300616	Set screw	87	X75100001	Collar	141-6	X75657001	Pin	195	X75808001	Needle plate tongue
36	X75972001	Needle bar thread guide	88	X75116000	Differential feed link	141-7	X75661001	Spring	196	X14542001	Set screw
37	X75401001	Pressure adjustment dial plate	89	X75130001	Link shaft	141-8	X75662001	Stitch width adjusting lever	197	X10032003	Set screw
38	X75538001	Pressure adjustment stud	90	X75078001	Horizontal feed lever shaft	141-9	X215081001	Set screw	198	X75297002	Control cover plate
39	X75128000	Pressure adjustment dial	91	X75110000	Feed change lever bracket	141-10	X75537001	Presser plate	199	X75189001	Control cover
40	X75117000	Pressure adjustment bush	92	X75084001	Stud shaft	141-11	X26880001	Set screw	200	X75187001	Material plate R cover
41	X75218001	Presser bar spring	93	X75387001	Washer	141-12	X75668001	Safety lever	201	X75131001	Oil pan
42	X75134000	Presser bar	94	X75101000	Slide block guide	142	X75207000	UL lever shaft	202	X75545000	Cushion A
43	X75099000	Presser bar bracket	95	X75122001	Slide block stud	143	X75983001	UL balance	203	X75329000	Spacer collar
44	X14500522	Set screw	96	X021400312	Nut	144	X75391001	UL rod assembly	204	X75720001	Set screw
45	X75542000	Felt	97	X75085001	Feed change lever shaft	145	X75317001	Stud shaft	205	X75271000	Cushion
46	X38881001	Presser foot holder assembly	98	X75115001	Feed change lever	146	X75985001	UL rod eccentric wheel	206	X75394001	Dust cover
47	X128851001	Set screw	99	X018401632	Set screw	147	X75984001	Screw cover	207	X76031001	Front cover
48	X75343001	Presser foot assembly	100	X75155001	Feed adjusting knob shaft	148	X126611000	Looper shaft bushing, rear	208	X75195001	Front cover guide
48-1	X75309001	Presser foot	101	X75322001	Control lever	149	X75251000	Looper shaft bushing, front	209	X75281001	Spring
48-2	X127554001	Pin	102	X75074001	Spring	150	X06077001	Under looper lever	210	X02707001	Washer
48-3	X38820001	Spring	103	X048020346	Stop ring	151	X75208001	Under looper	211	X037401014	Set screw
48-4	X112397001	Set screw	104	X75168001	Control panel base plate	152	X75144001	Under looper thread guide assembly	212	X75161001	Front cover hinge
48-5	X127858001	Stitch tongue	105	X75154001	Control panel base cover	153	X062670412	Set screw	213	X75066001	Hinge shaft
48-6	X128680001	Set screw	106	X062300412	Set screw	154	X025710132	Washer	214	X75282001	Spring
49	X52543001	Presser foot sensor assembly	107	X75201001	Spring plate	155	X75388001	Needle guard plate	215	X75976001	Thread take-up lever cover
50	X75164000	Led PC board bracket	108	X75147001	Upper blade driving arm	156	X028030246	Spring washer	216	X060400606	Set screw
51	X52535001	Led PC board assembly	109	X75139001	Upper blade holder	157	X017501415	Looper lever fixing screw	217-A	X76007002	Needle thread, left tension asse.
52	X037310612	Set screw	110	X75088001	Upper blade knob	158	X05281001	Washer	217-B	X76014002	OL & Needle thread, right tension asse.
53	X75073001	Sew-light plate	111	X75191000	Upper blade holder guide	159	X75978001	UL lever shaft	217-C	X76013002	UL Tension assembly
54	X52498001	Sew-light assembly	112	X75198001	Guide plate	160	X75141000	Looper joint	217-1	X76008001	Thread tension frame

Ref. No.	Parts No.	Parts Name	Ref. No.	Parts No.	Parts Name
217-2	X75997002	Tension slide plate	258	X52517001	Insulation cover plate
217-3	X75996002	Slide lever	259	002304005	Set screw
217-4	X75981001	Tension disc. A	260	062303012	Set screw
217-5	X75121001	Tension disc	261	130971000	Washer
217-6-A	X76015001	Tension spring	262	X75197001	Rear cover
217-6-B	X76023001	Tension spring	263	X75374001	Thread rectifier body
217-6-C1	X76015001	Tension spring	264	X52318001	Wire clamp
217-6-C2	X76081001	Tension spring	265	X75254001	Spool stand base
217-7	X75992001	Washer	266	142914001	Spool pin
217-8	X05015000	Dial ratchet	267	126663001	Spool cushion
217-9	X75991001	Tension gear	268	X75258001	Spool stand assembly
217-10	X75993001	Spring	269	X76025001	Thread indication sheel
217-11	X76003001	Stop ring			
217-12	X76011001	Nut	122991002		Vinyl bag for accessories
217-13	026030150	Washer	X75437001		Screw driver
217-14	X76010001	Spacer	X75433001		Pincette
217-15	X75995001	Tension roller	X75580001		Needle set
217-16	X75998001	Tension control belt	523603001		Machine brush
217-17	025030336	Washer	X75399000		Spool cap
217-18	018301431	Set screw	X75438001		Wrench
218	X75994001	Thread tension bracket	127912001		Oiler
219	X75546000	Spacer collar	127610000		Thread net
220	138853001	Set screw	X76063001		Instruction sheet
221	X75157000	Nut	126736001		Machine cover
222	X75175001	Tension release plate			Power supply cord assembly
223	X75239001	Spring			Controller
224	X75331001	Sew-light cover			Instruction book
225	X75200001	Handle			
226	X75133001	Handle shaft			Optional parts
227	048030342	Stop ring	X75522001		Rolled hemming presser foot
228	X75057001	Machine body	X75524001		Blind stitch foot
229	X75430001	Panel assembly	X75526001		Elastic taping foot
230	X75264001	Thread take-up lever cover	X75561002		Gauge set
231	X76064001	Needle thread tension cover			
232	X76064002	Needle thread tension cover			
233	X76065001	OL thread tension cover			
234	X76065002	UL thread tension cover			
235	X76042001	Thread guide panel			
236	X75267001	Cap			
237	215081001	Set screw			
238	X75327001	Belt cover assembly			
239	122772000	Band			
240	225880001	Wire clamp			
241	X52538001	Controller jack			
242	X51271001	Nut			
243		Main power switch and inlet assembly			
244		Motor			
245	X50020001	Set screw			
246	103741001	Set screw			
247	203735001	Spring washer			
248	100197004	Washer			
249	X75376000	Timing belt			
250	127254001	Nut			
251	X75770001	Set screw			
252	X75651001	Spring			
253	X76016001	UL Thread guide			
254	021400215	Nut			
255	X52516001	Insulation cover			
256		Main PC board assembly			
257	554166000	Insulation washer			