





Featherweight C240




Liste de pièces Lista de Piezas Parts List

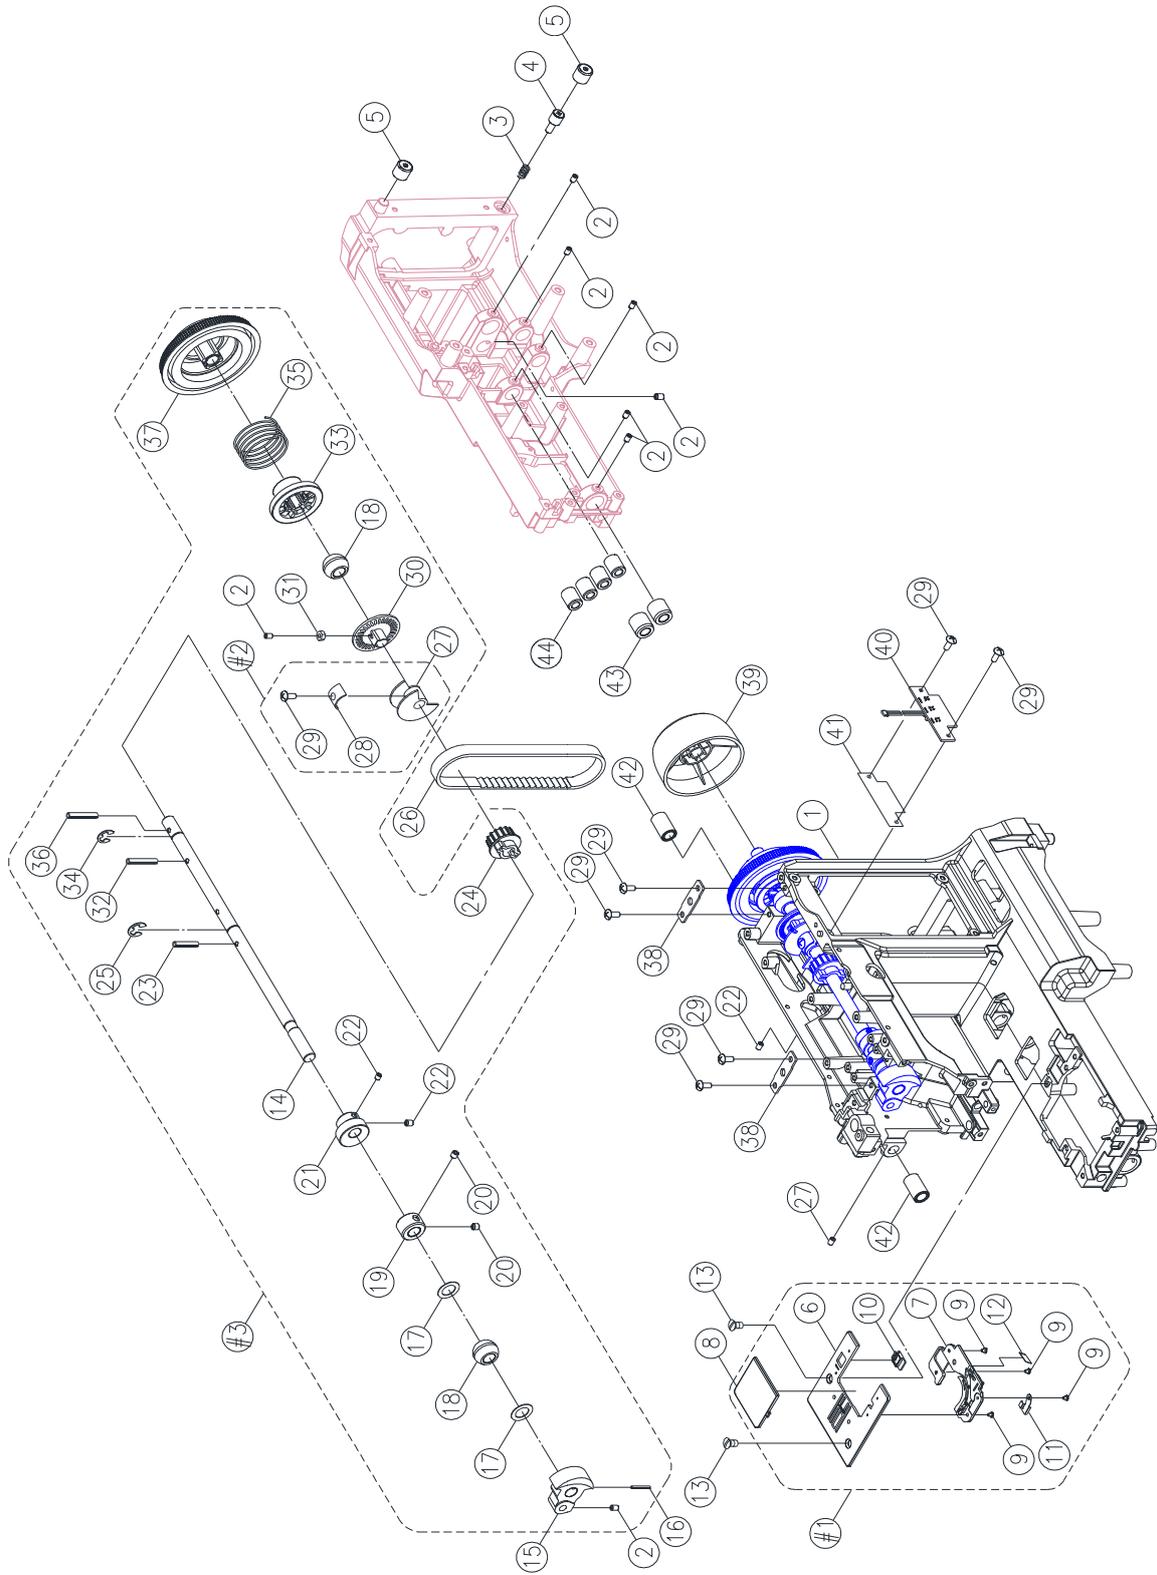

No.	Part No.	Description
1		ARM
2		SET SCREW (M4×6C)
3		BASE PLATE ADJUSTMENT SCREW SPRING
4		BASE PLATE ADJUSTMENT SCREW
5		FREE ARM BASE CUSHION RUBBER
6		NEEDLE PLATE
7		NEEDLE PLATE SUPPORTER
8	416679701	NEEDLE PLATE COVER
9		SET SCREW(M2×3)
10		NEEDLE PLATE COVER OPEN
11		NEEDLE PLATE SPRING
12	416172501	THREAD CUTTER
13		SET SCREW(M4×6)
14		ARM SHAFT
15		ARM SHAFT BALANCE
16		ARM SHAFT BALANCE PIN(□3.5×24)
17		ENDURE ATTRITION WASHER
18		ARM SHAFT BUSING
19		ARM SHAFT COLLAR
20		SET SCREW(M5×5C)
21		SHANK CAM(2)
22		SET SCREW(M4×5C)
23		SPRING PIN(□3×18)
24		ARM SHAFT SPROCKET
25		E-RING(ETW-9)
26		BELT
27		ROTARY SENSOR COLLAR
28		ARC WASHER
29		SET SCREW(M4×8A)
30		REVOLUTION CONTROL PANEL
31		NUT (M4 T=3)
32		SPRING PIN(□3×28)
33		CLUTCH SLEEVE
34		E-RING(ETW-8)
35		ARM SHAFT CLUTCH ANNULUS SPRING
36		SPRING PIN(□3×30)
37		ARM SHAFT DRIVE BELT PULLEY
38		ARM SHAFT BUSHING HOLDER PLATE
39	68006168	HAND WHEEL
40	68003049	PHOTO SENSOR PLATE
41		INSULATING SLICE
42		FEED ROCK BUSHING
43		LOWER SHAFT BUSHING
44		FEED ROCK BUSHING
#1	416679601	NEEDLE PLATE COMPLETE
#2		REVOLUTION CONTROL PANEL COMPLETE
#3		ARM SHAFT COMPLETE

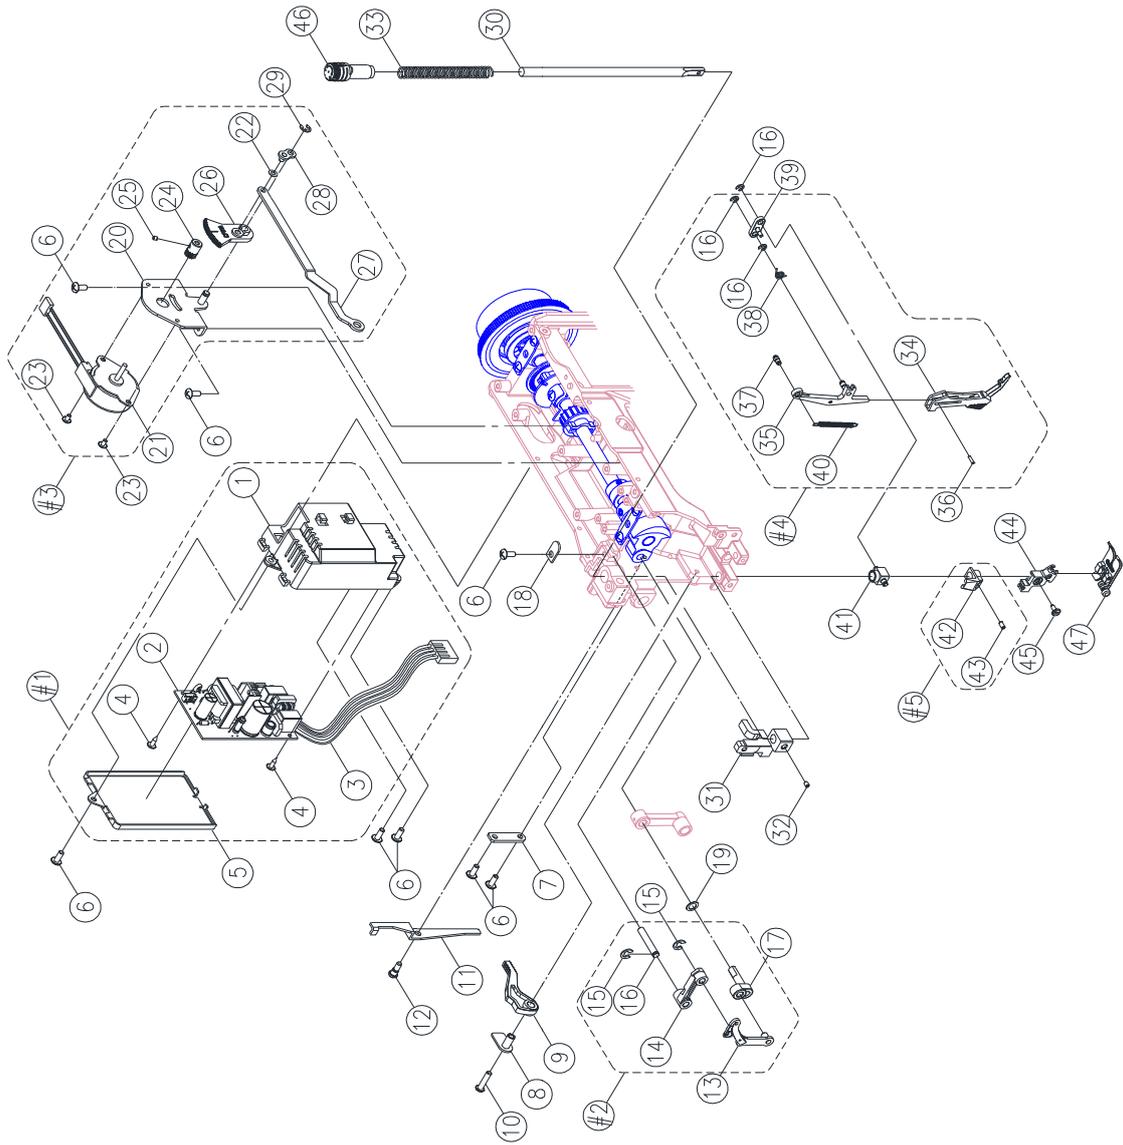


No.	Part No.	Description
1		HF TRANSFORMER BOX
2		HF TRANSFORMER COMPLETE
3		HF TRANSFORMER WIRE
		HF TRANSFORMER WIRE
4		SET SCREW(M3×8.5)
5		HF TRANSFORMER BOX COVER
6		SET SCREW(M4×8 A)
7		PRESSER BAR BRACKET PLATE
8		PRESSER BAR LIFTER LEVER SPACER
9		PRESSER BAR LIFTER LEVER
10		SET SCREW (M4×18B)
11		TENSION LEVER LIFTER
12		TENSION LEVER LIFTER SCREW
13		THREAD TAKE UP LEVER COMPLETE
14		THREAD TAKE UP LEVER SUPPORTER
15		E-RING(ETW-3)
16		THREAD TAKE UP LEVER SUPPORTER SHAFT
17		ARM SHAFT BALANCE PIN COMPLETE
18		CARRYING HANDLE SHAFT
19		ENDURE ATTRITION WASHER (□6.2×12×0.25)
20		ZIGZAG PULSE MOTOR PLATE COMPLETE
21		PULSE MOTOR
22		WASHER(□5.2×□10×0.2)
23		SET SCREW(M3×5A)
24		PULSE MOTOR GEAR COMPLETE
25		SET SCREW(M3×3C)
26		ZIGZAG CRANK GEAR
27		NEEDLE BAR DRIVING ROD
28		NEEDLE BAR DRIVING ROD PLATE COMPLETE
29		E-RING (ETW-4)
30	416476801	PRESSER BAR
31		PRESSER BAR BRACKET
32		SET SCREW(M5×5C)
33		PRESSER BAR SPRING
34		DUAL FEED SHANK
35		SHANK OF DELIVER CLOTH FOOT
36		SPRING PIN(□2×L7)
37		PIN
38		SPRING
39		SHANK LEVER COMPLETE
40		SHANK SPRING
41		PRESSER BAR LIFTER SPACER
42		PRESSER BAR RING
43		SET SCREW (M3×6C)
44	416477001	SHANK COMPLETE
45	416430601	SET SCREW
46		PRESSER BAR SET SCREW
47	820773096	ALL PURPOSE FOOT
#1	416681301	HF TRANSFORMER BOX COMPLETE
	416681401	HF TRANSFORMER BOX COMPLETE
#2	416484501	THREAD TAKE UP LEVER COMPLETE
#3	416681801	ZIGZAG PULSE MOTOR PLATE COMPLETE
#4	416484001	DUAL FEED SHANK COMPLETE
#5		PRESSER BAR RING COMPLETE

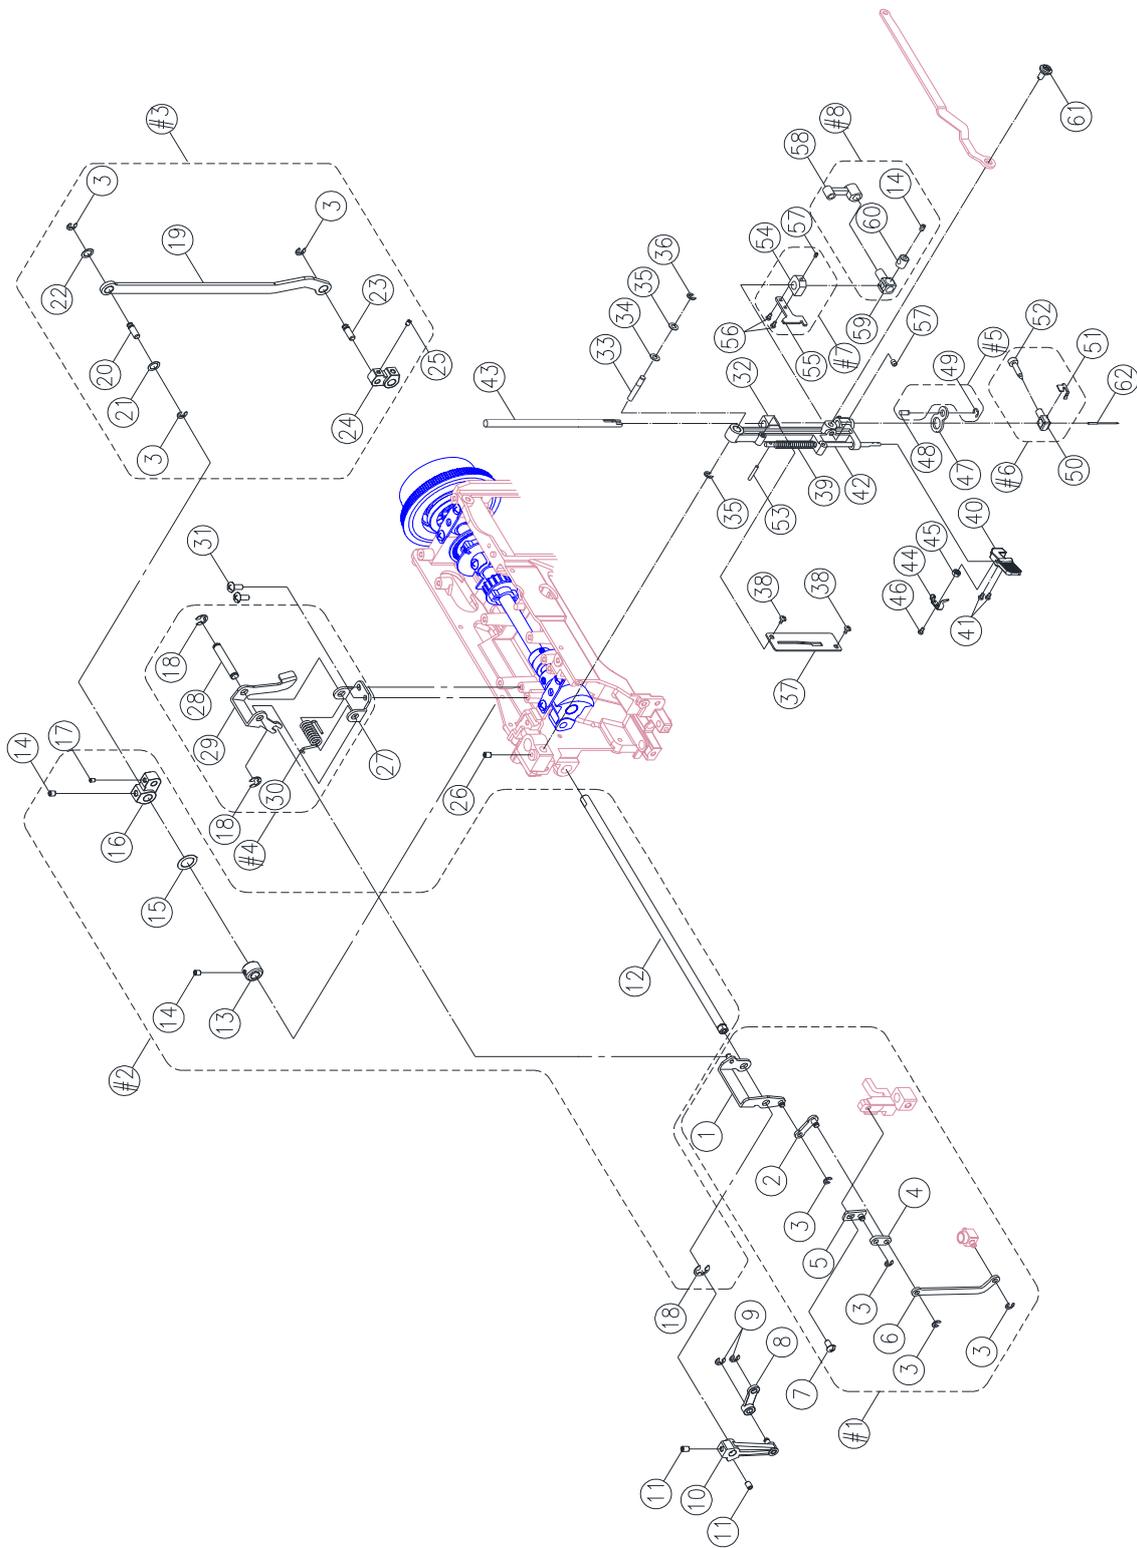


No.	Part No.	Description	No.	Part No.	Description
1		FEED CRANK COMPLETE	55		THREADING STOP HOLDER
2		FEED LEVER COMPLETE	56		SET SCREW(M2×4)
3		E-RING(ETW-3)	57		SET SCREW(M3×4 C)
4		FEED ROD CRANK	58		NEEDLE BAR CRANK ROD
5		FEED LEVER	59		NEEDLE BAR BRACKET(1)
6		FEED ROD	60		NEEDLE BAR BRACKET(2)
7		SET SCREW(M4×6B)	61		NEEDLE BAR DRIVING ROD PIN
8		FEED ROD	62		NEEDLE
9		E-RING(ETW-3)	#1		FEED ROD COMPLETE
10	416578301	FEED CRANK	#2	416740901	FEED CRANK COMPLETE
11		SET SCREW(M4×6C)	#3		FEED ROD COMPLETE
12		FEED SHAFT	#4		FEED SUPPORTER COMPLETE
13		FEED COLLAR	#5		NEEDLE BAR SUPPORTER PIN CPL
14		SET SCREW(M4×4C)	#6	416613201	NEEDLE CLAMP COMPLETE
15		WASHER(□6.2×□9.6×0.5)	#7	416741101	THREADING STOPPER COMPLETE
16		FEED CRANK	#8	416235801	NEEDLE BAR CRANK ROD CPL
17		SET SCREW(M3×3C)			
18		E-RING(ETW-5)			
19		FEED ROD			
20		PIN(1)			
21		WASHER(□4.2×□8×0.8)			
22		WASHER(□4×□8×0.5)			
23		PIN			
24		FEED TRANSFER CRANK (2)			
25		SET SCREW(M3×5C)			
26		SET SCREW(M4×5C)			
27		FEED SUPPORTER			
28		FEED SHAFT			
29		FEED CRANK			
30		SPRING			
31		SET SCREW(M4×8A)			
32		NEEDLE BAR SUPPORTER			
33		NEEDLE BAR SUPPORTER PIN			
34		WASHER(WW-6)			
35		WASHER(□6.5×□13×1)			
36		E-RING(ETW-4)			
37		THREADING GUIDE			
38		SET SCREW(M3×6 A)			
39		THREADING SHAFT SPRING			
40	416580201	THREADING PLATE			
41		SET SCREW(M2×4B)			
42		THREADING SHAFT			
43	416173601	NEEDLE BAR			
44	416409701	THREADING			
45		NUT(M2 T=1.6)			
46		SET SCREW(M2×3.5)			
47	416682401	NEEDLE BAR SWING RING			
48		NEEDLE BAR SUPPORTER PIN			
49		E-RING(ETW-4)			
50		NEEDLE CLAMP			
51		NEEDLE CLAMP GUIDE			
52		NEEDLE CLAMP SET SCREW			
53		PIN(2×L16)			
54		THREADING STOPPER			


C

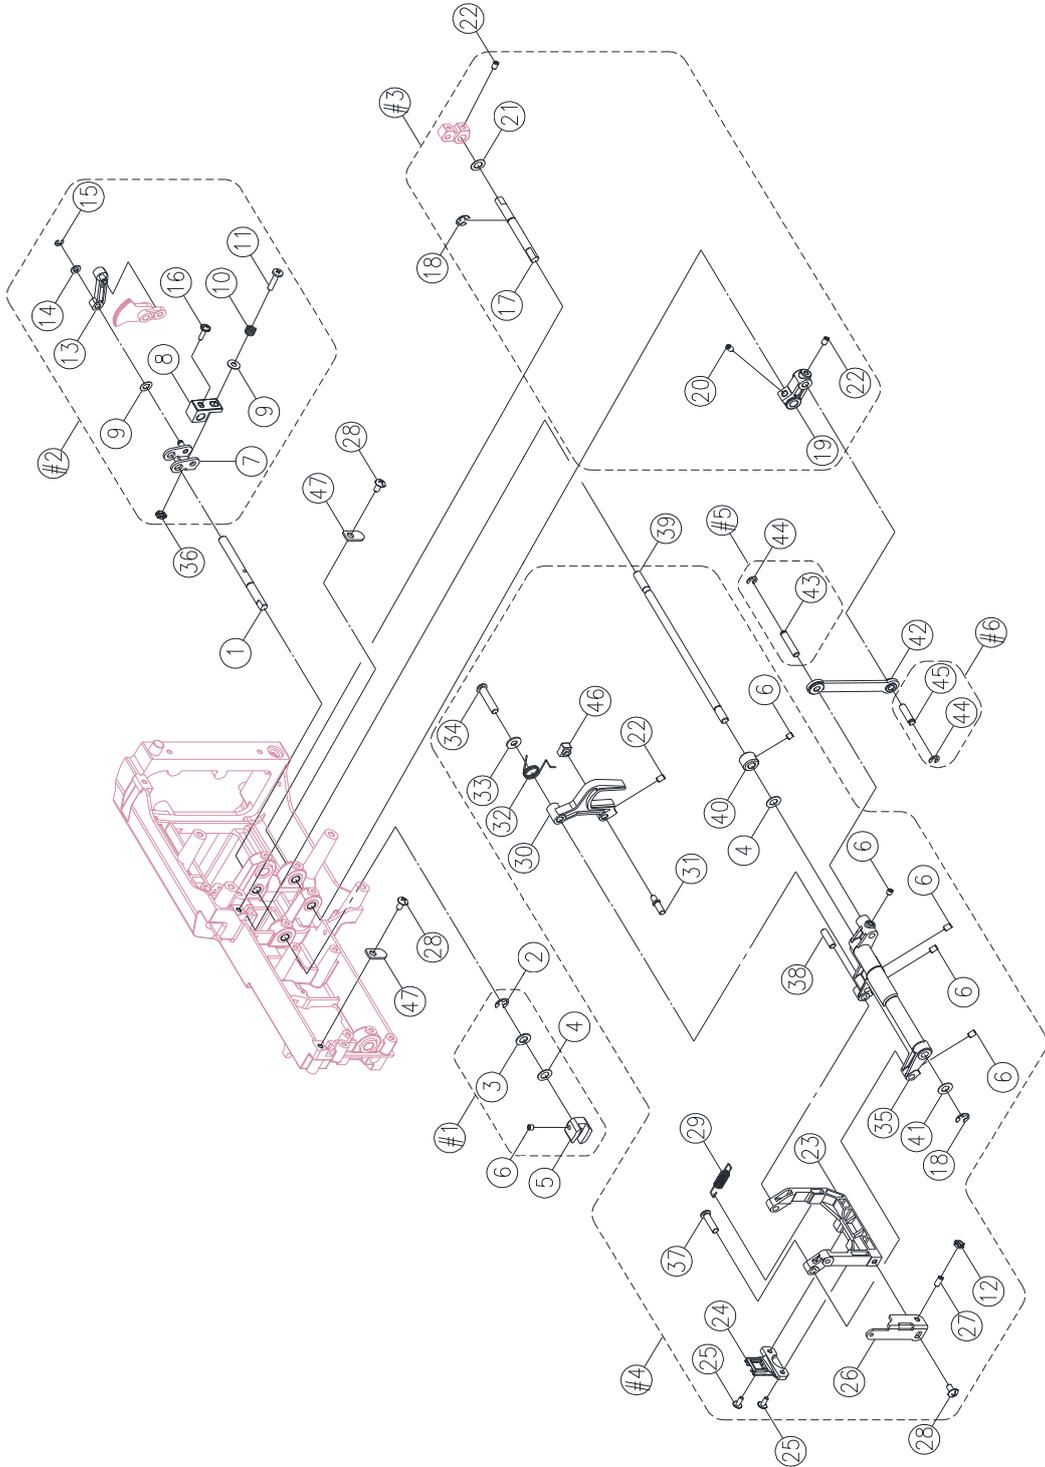

No.	Part No.	Description
1		FEED REGULATING SHAFT
2		E-RING(ETW-5)
3		WASHER(□6.7×□12×1)
4		ENDURE ATTRITION WASHER(□6.7×□11.8×0.5)
5		FEED REGULATING
6		SET SCREW(M4×4C)
7		FEED REGULATING CRANK(2)COMPLETE
8		FEED REGULATING CRANK(1)
9		WASHER(□4.2×□9×0.5)
10		PULSE MOTOR SPRING
11		SET SCREW(M4×18)
12		ADJUSTING NUT(M4×0.7)
13		FEED ROCK ROD (3)
14		WASHER(□4.2×□10×0.5)
15		E-RING(ETW-3)
16		SET SCREW(M3×12)
17		FEED TRANSFER SHAFT
18		E-RING(ETW-5)
19		FEED TRANSFER CRANK (1)
20		SET SCREW(M5×8C)
21		WASHER(□6.7×□11.8×0.25)
22		SET SCREW(M4×6C)
23		FEED DOG SUPPORTER
24	416479601	FEED DOG
25		SET SCREW(M3.5×8A)
26		FEED LIFTING ROCK CRANK COMPLETE
27		SET SCREW(M4×0.7)
28		SET SCREW(M4×8A)
29		FEED DOG SPRING
30		FEED ROCK CRANK
31		REGULATING BLOCK SHAFT
32		FEED ROCK CRANK SPRING
33		WASHER(□5.2×□12×1)
34		FEED ROCK SHAFT
35		FEED ROCK SWING RACK
36		ADJUSTING NUT(M4×0.7)
37		FEED DOG SHAFT
38		FEED ROCK FRAME SHAFT(2)
39		ROCK SWING RACK SHAFT
40		FEED COLLAR
41		ENDURE ATTRITION WASHER(□6.7×□11.8×0.5)
42		FEED ROCK ROD COMPLETE
43		FEED ROCK ROD PIN
44		E-RING(ETW-4)
45		FEED ROCK ROD PIN
46		FEED REGULATING BLOCK
47		CARRYING HANDLE SHAFT
#1		FEED REGULATING
#2		FEED REGULATING CRANK COMPLETE
#3		FEED TRANSFER SHAFT COMPLETE
#4		FEED ROCK SWING RACK COMPLETE
#5		FEED ROCK ROD PIN COMPLETE
#6		FEED ROCK ROD PIN COMPLETE

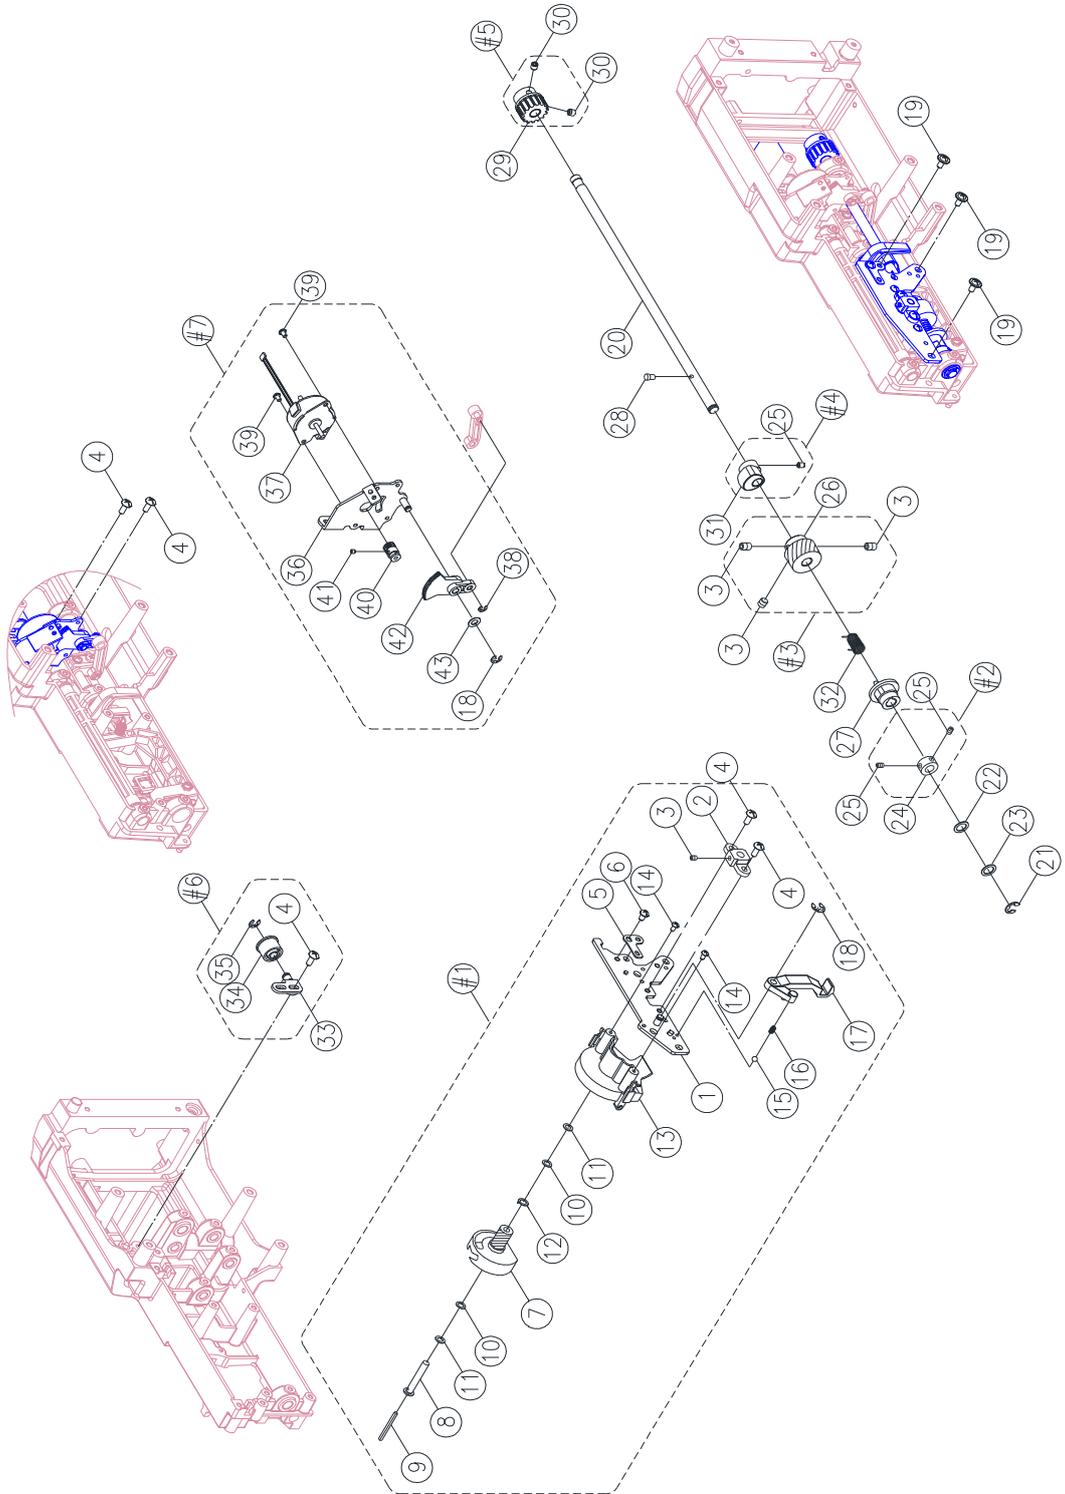


No.	Part No.	Description
1		ROTARY HOOK HOLDER COMPLETE
2		ROTARY HOOK SUPPORTER
3		SET SCREW(M4×5C)
4		SET SCREW(M4×8A)
5		ROTARY HOOK HOLDER POSITIONED PLATE
6		SET SCREW(M4×6B)
7	416479801	SHUTTLE HOOK HOLDER
8		BOBBIN SHAFT
9		BOBBIN SHAFT OIL CLOTH
10		ENDURE ATTRITION WASHER(□6.2×□9.6×0.5)
11		BOBBIN SHAFT WASHER (2)
12		BOBBIN SHAFT WASHER (3)
13		SHUTTLE HOOK COVER
14		SET SCREW(M3×12)
15		BALL
16		SPRING
17		TOOTH LEVER ARM
18		E-RING(ETW-4)
19		SET SCREW(M4×8)
20		LOWER SHAFT
21		E-RING(ETW-6)
22		ENDURE ATTRITION WASHER(□8.2×□12×0.5)
23		WASHER(□8.2×□12×0.5)
24		LOWER SHAFT COLLAR
25		SET SCREW(M4×4C)
26		LOWER SHAFT GEAR
27		FEED LIFTING ROCK CAM
28		FEED LIFTING ROCK COM PIN
29		LOWER SHAFT BELT PULLEY
30		SET SCREW(M5×5C)
31		FEED ROCK CAM
32		LOWER SHAFT SPRING
33		BELT ADJUSTING PLATE
34		BELT ADJUSTING PLATE PULLEY
35		E-RING(ETW-4)
36		PULSE SUPPORT PLATE COMPLETE
37		PULSE MOTOR
38		E-RING(ETW-3)
39		SET SCREW(M3×3.5A)
40		PULSE MOTOR GEAR
41		SET SCREW(M3×3C)
42		FEED ROCK CRANK GEAR
43		WASHER(□5.1×□9.5×0.4)
#1	68003033	ROTARY HOOK HOLDER COMPLETE
#2		LOWER SHAFT COLLAR COMPLETE
#3		LOWER SHAFT GEAR COMPLETE
#4		FEED ROCK CAM COMPLETE
#5		LOWER SHAFT BELT PULLEY COMPLETE
#6		BELT ADJUSTING PLATE COMPLETE
#7	416684001	PULSE SUPPORT PLATE COMPLETE

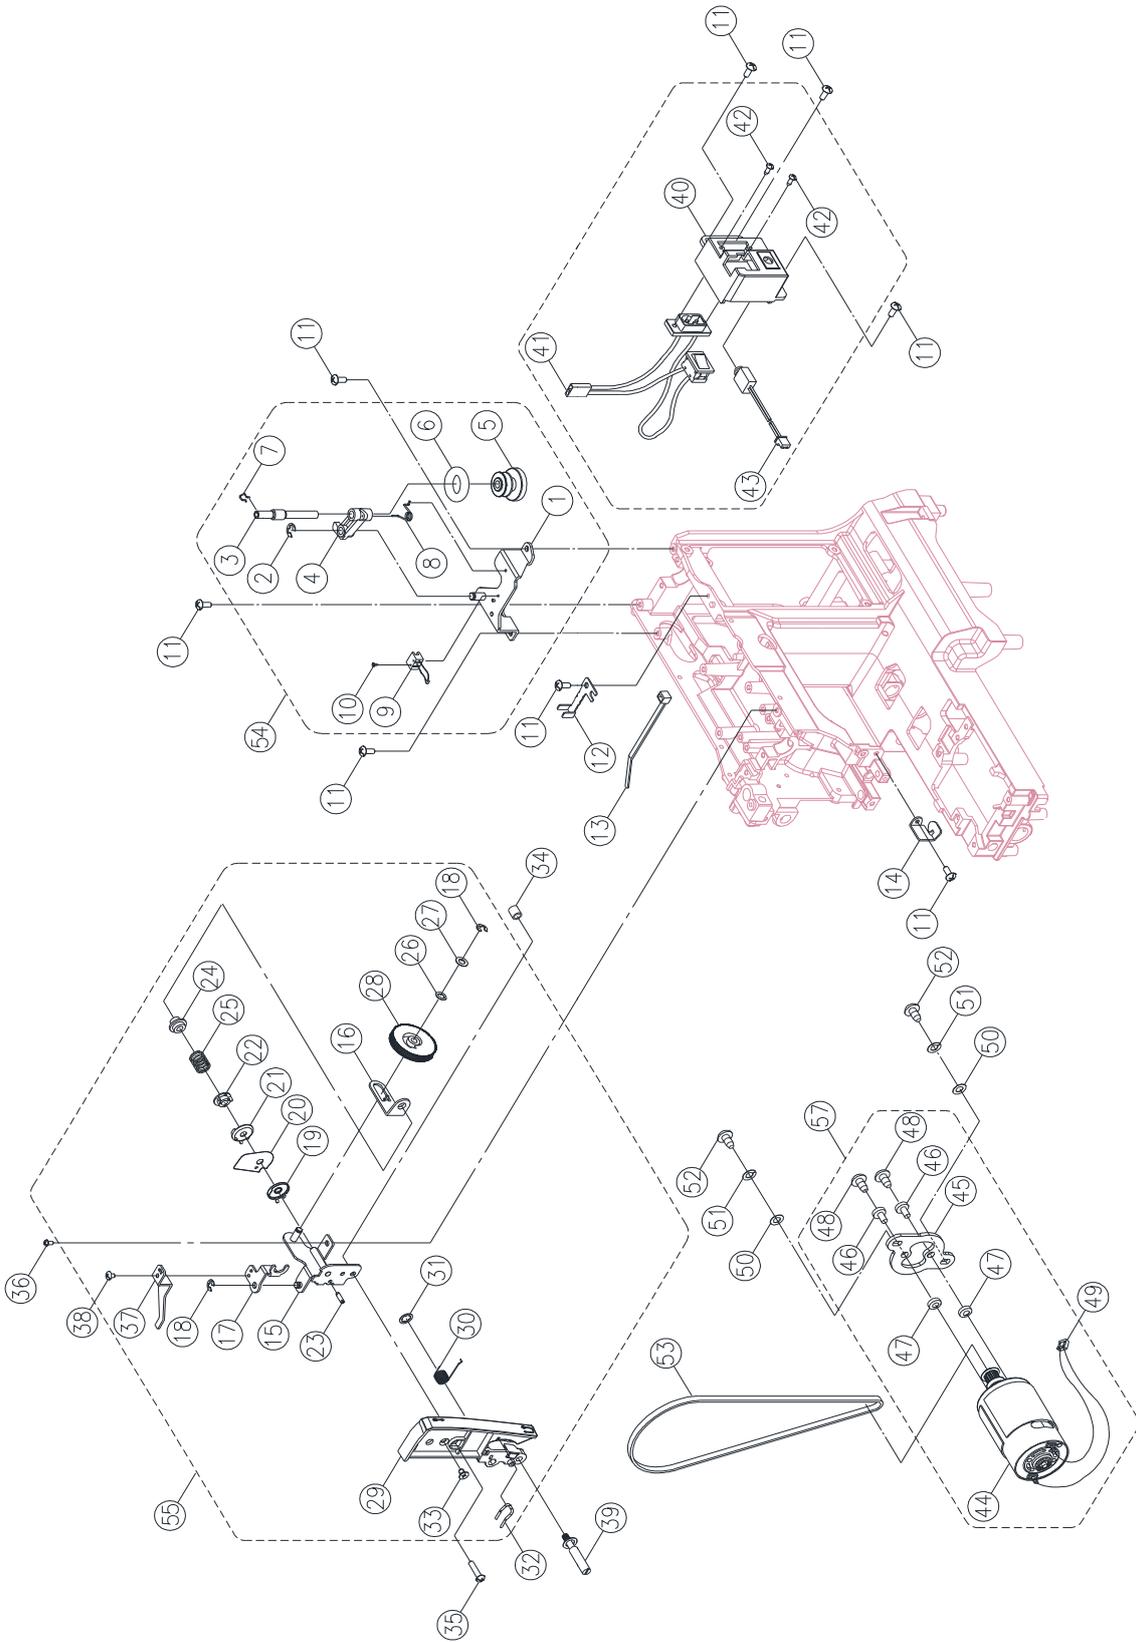


No.	Part No.	Description
1		BOBBIN WINDER PLATE CPL
2		E-RING(ETW-5)
3		BOBBIN WINDER CRANK
4		BOBBIN WINDER CRANK
5		BOBBIN WINDER PULLEY
6	416149201	RUBBER PULLEY
7		CRANK SPRING
8		CRANK SPRING
9	416684601	MICRO SWITCH
10		SET SCREW(M2×0.4×7.5)
11		SET SCREW(M4×8A)
12		WIRE PRESS BOARD
13		CORD CLIP(L=12)
14		THREAD GUIDE PLATE
15		SUPPORTER PLATE CPL
16		DIAL TENSION SPRING PLATE
17		DIAL TENSION WAFT PLATE
18		E-RING(ETW-4)
19		DIAL TENSION DISC(1)
20		DUAL THREAD GUIDE PLATE
21		DIAL TENSION DISC
22		DIAL TENSION SPRING REGULATOR
23		SPRING PIN(□3×10)
24		DIAL TENSION REGULATOR
25		DIAL TENSION SPRING
26		WASHER(WW-5)
27		WASHER(□5.2×□10×0.5)
28		DIAL TENSION KNOB
29		DIAL TENSION SUPPORTER PLATE CVR
30		THREAD GUIDE SPRING
31		CS-RING(CSTW-4.5)
32	416198701	THREAD GUIDE
33		SET SCREW(M4×6D)
34		DIAL TENSION GUIDE SPRING TUBE
35		SET SCREW(M4×15B)
36		SET SCREW(M4×6 B)
37		DIAL TENSION WAFT TRIMMING PLATE
38		SET SCREW(M3×4A)
39		SET SCREW(M4×37)
40		RECEPTACLE HOLDER
41	68009203	SWITCH RECEPTACLE ASS'Y(120V)
	68009202	SWITCH RECEPTACLE ASS'Y(230V)
42		SET SCREW(M3×8B)
43	416685401	CONTROLLER RECEPTACLE US
	416685501	CONTROLLER RECEPTACLE EU
44		DC MOTOR
45		MOTOR BRACKET
46		INSULATION SPACER
47		INSULATION SPACER
48		SET SCREW(M3×10)
49		DC MOTOR LEAD CORD
50		WASHER(□5.4×□10×0.9)
51		SPRING WASHER(□5.1×□9.2×1.3)
52		SET SCREW(M5×12)
53	416685701	BELT
54	68006169	BOBBIN WINDER COMPLETE
55	68005975	DIAL TENSION SUPPORTER PLATE COMPLETE
56		RECEPTACLE HOLDER COMPLETE
		RECEPTACLE HOLDER COMPLETE
57	68003052	DC MOTOR COMPLETE

No.	Part No.	Description
1		BH LEVER PLATE COMPLETE
2		PHOTO SENSOR COMPLETE
3		SET SCREW(M3×5 A)
4		BH MICRO SWITCH COMPLETE
5		SET SCREW(M2×7.5)
6		BH PHOTO SENSOR PLATE
7		BH LEVER CRANK SPRING
8		SET SCREW(M3×5 B)
9		BH LEVER CRANK COMPLETE
10		BH SPRING PLATE
11		PHOTO PLATE
12		BH LEVER
13		WASHER(□4×□8×0.5)
14		E-RING(ETW-3)
15		BH MOVEMENT CRANK
16		SET SCREW(M3×6)
17	416700901	LED LAMP PLATE
18	416595101	LED LAMP LINE
19		LED HOLDER
20		SET SCREW(M3×6B)
21		SET SCREW(M3×5)
22		BH LEVER BUTTON
23		SET SCREW(M4×8 A)
24		SET SCREW(M4×6 B)
25		PULSE SUPPORT SPRING
26		SET SCREW(M3×16)
27		MICRO SWITCH PLATE
28		PRESSER BAR LEVER MICRO SWITCH
29		LED HOLDER(RIGHT)
30	416687001	LED LIGHT LAMP COMPLETE
31		MAIN CIRCUIT BOARD HOLDER
32		MAIN CIRCUIT BOARD
33		SET SCREW(M3×8.5)
34		GROUND CONNECTION
35		CORD CLIP(L=12)
36		CORD CLIP(L=20)
37		PULSE MOTOR PLATE
38		ROTARY HOOK PLATE
39		ROTARY HOOK PLATE(1)
40		SET SCREW(M3×4 A)
41		ROTARY HOOK PLATE(2)
42		ROTARY HOOK PLATE SPRING (2)
43		ROTARY HOOK PLATE SPRING (1)
44		SET SCREW(M2×2.5)
45	416568801	SHUTTLE HOOK COMPLETE
46	416475801	BOBBIN
#1		BH LEVER PLATE COMPLETE
#2		MICRO SWITCH PLATE COMPLETE
#3	68006172	MAIN CIRCUIT BOARD HOLDER COMPLETE
#4	416687901	ROTARY HOOK PLATE COMPLETE
#5	416687801	ROTARY HOOK PLATE (2) COMPLETE

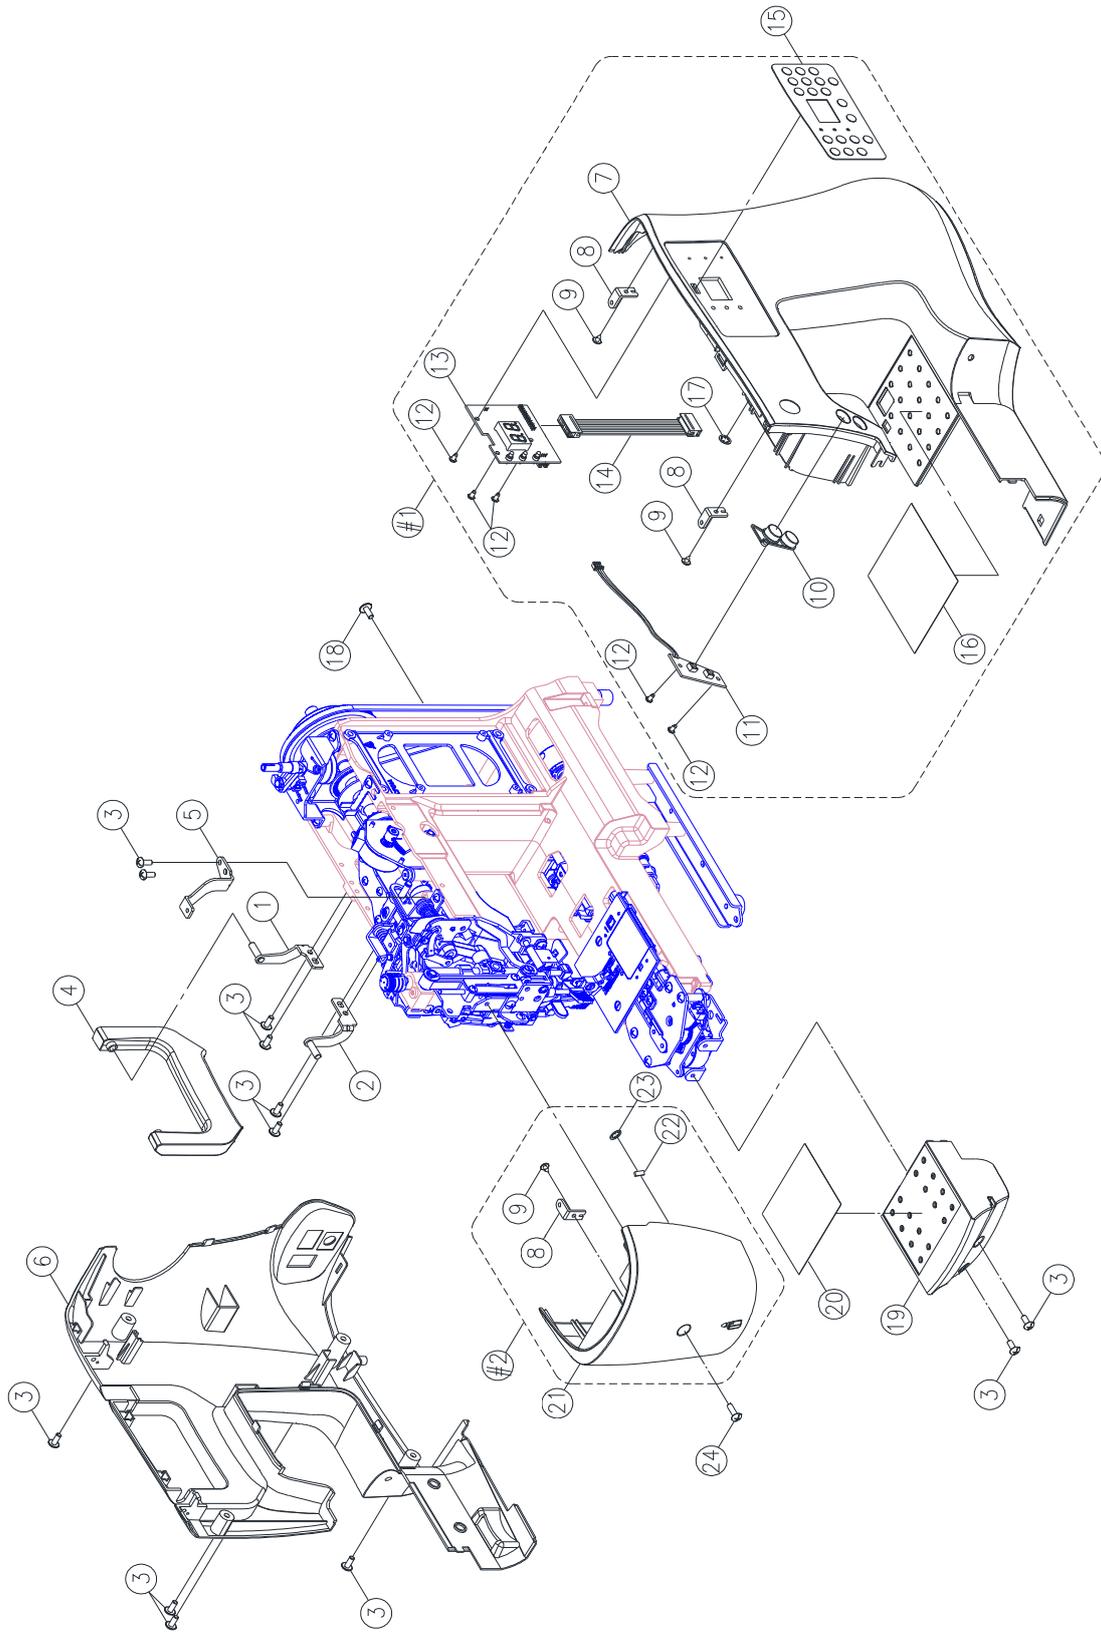


No.	Part No.	Description
1		HANDLE BRACKET COMPLETE(1)
2		HANDLE BRACKET COMPLETE(2)
3		SET SCREW(M4×8A)
4		HANDLE
5		ARM TOP COVER BRACKET
6		BACK COVER
7		FRONT COVER
8		FRONT COVER SET PLATE
9		SET SCREW(M3×6)
10	68005985	START/STOP PUSH BUTTON
11	68006174	START CIRCUIT BOARD
12		SET SCREW(M3×6B)
13	68006175	LED MAIN CIRCUIT BOARD
14		ROW LINE
15	68006176	FLIM KEY BOARD
16		SLAB(RIGHT)
17		CS-RING(CSTW-4)
18		SET SCREW(M4×8)
19		MOTOR COVER
20		SLAB (LEFT)
21		FACE PLATE
22	416172501	THREAD CUTTER
23		CS-RING(CSTW-4)
24		SET SCREW(M4×12 A)
#1		FRONT COVER COMPLETE
#2		FACE PLATE COMPLETE

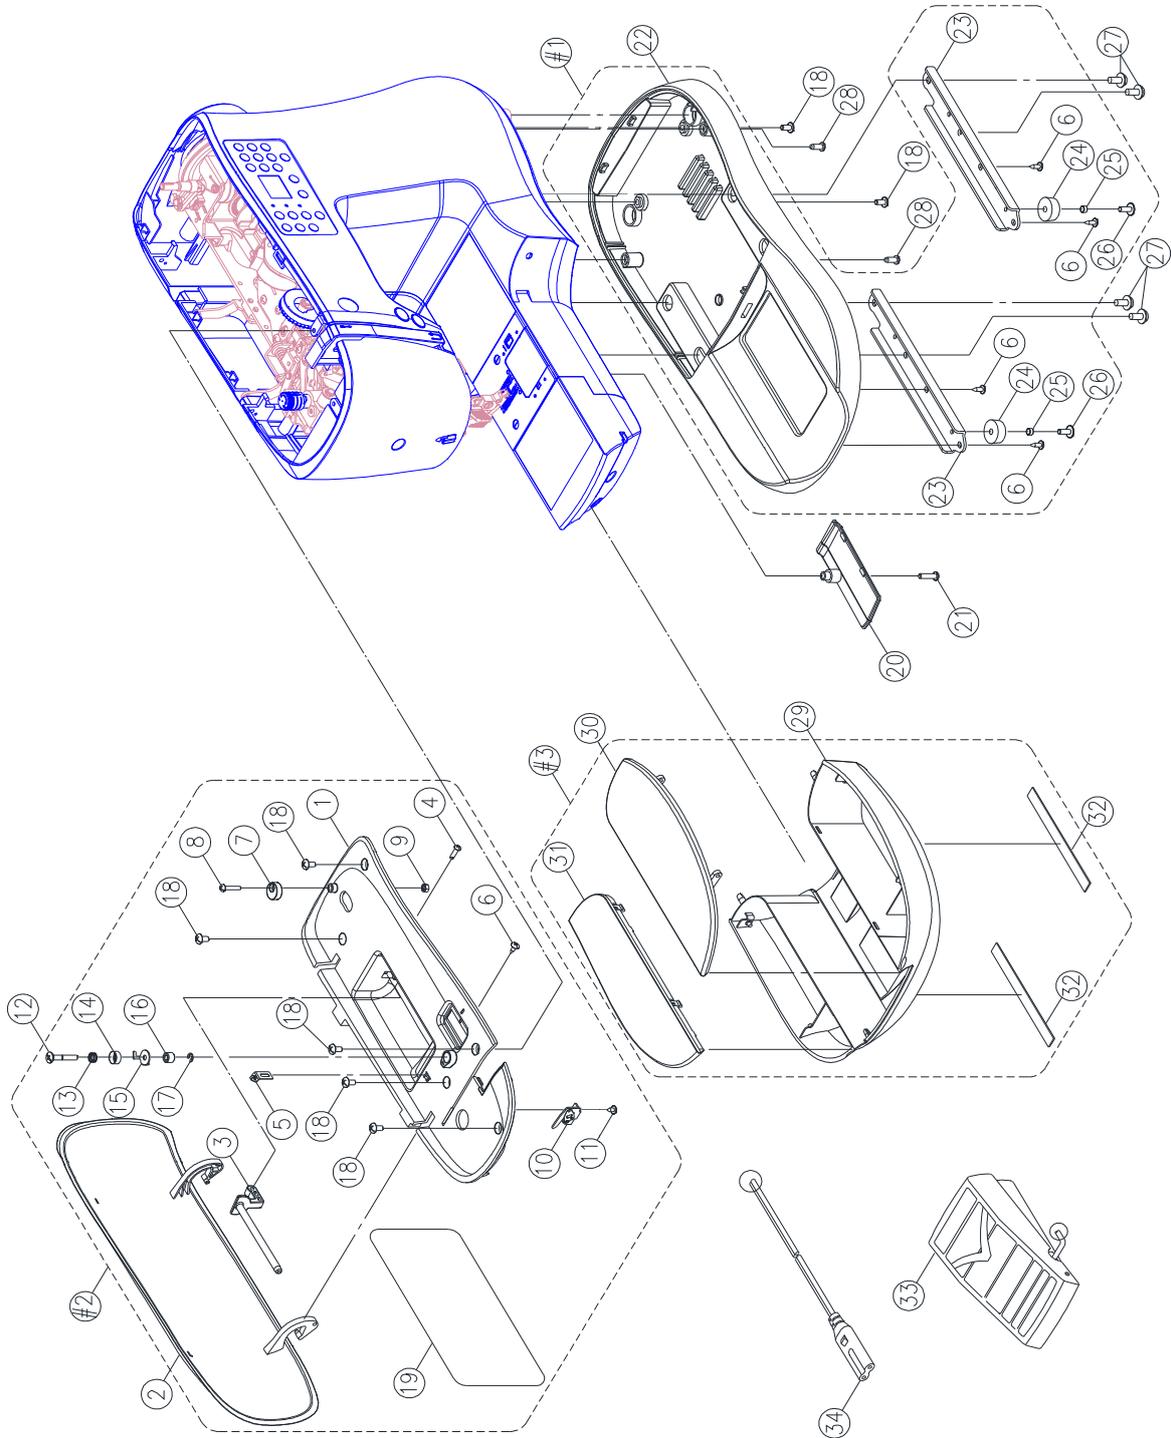

No.	Part No.	Description
1		TOP PLATE
2		TOP COVER
3	68003809	SPOOL PIN BASE
4		SET SCREW(M3×12 B)
5		THREAD GUIDE
6		SET SCREW(M3×8.5)
7		BOBBIN WINDER
8		SET SCREW(9/64×40×16 B)
9		NUT(9/64×40×3)
10		THREAD GUIDE COMPLETE
11		SET SCREW(M3×6)
12		BOBBIN WINDER THREAD GUIDE ADJUSTING
13		SPRING
14		BOBBIN WINDER SPRING DISC
15		BOBBIN WINDER THREAD GUIDE
16		SPACER
17		E-RING(ETW-3)
18		SET SCREW(M4×8 A)
19		STICKER
20		FREE ARM BASE
21		SET SCREW(M4×12 B)
22		CORD REEL COVER
23		FREE ARM BASE CUSHION
24		FREE ARM BASE CUSHION RUBBER
25		SPACER
26		SET SCREW (M4×8)
27		SET SCREW(M5×10)
28		SET SCREW (M4×10B)
29		SEWING TABLE BODY
30		SEWING TABLE BODY COVER
31		SEWING TABLE BODY COVER
32		SEWING TABLE BODY FELT
33	68005901	FOOT CONTROLLER
34	416419802	POWER CORD 120V US
34	416419702	POWER CORD 230V EU
34	416420002	POWER CORD 240V SAA
#1		TOP PLATE COMPLETE
#2		CORD REEL COVER COMPLETE
#3	68004737	SEWING TABLE BODY COMPLETE

STANDARD ACCESSORIES

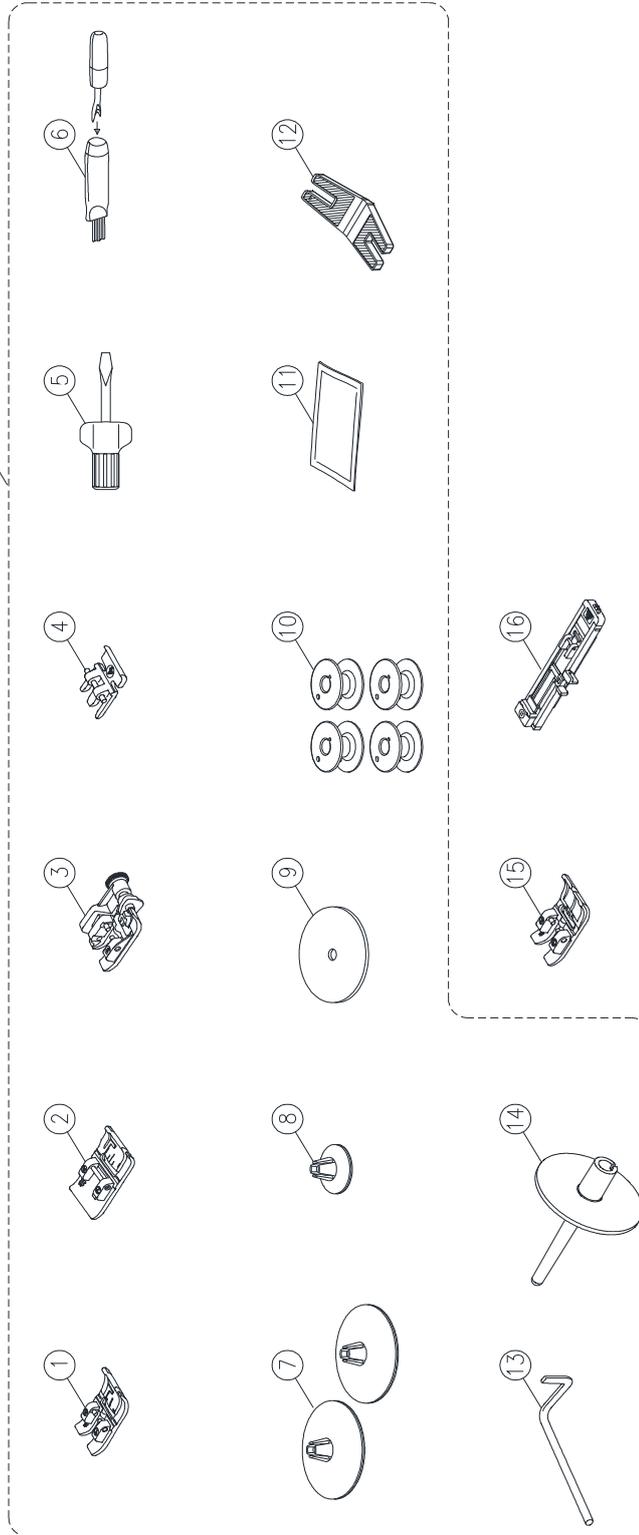

<u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	820773096	FANCY STITCHES FOOT
2	413060501	FANCY STITCHES FOOT (2A)
3	820256096	BLINDSTITCH FOOT W IDT
4	820248096	ZIPPER PRESSER FOOT W/IDT
5	412381501	SCREWDRIVER
6	416691401	BRUSH/SEAM RIPPER
7	412371101	SPOOL HOLDER (LARGE)
8	416483401	SPOOL HOLDER (SMALL)
9	412610701	FELT PAD
10	416475801	BOBBIN
11	N202014E03	NEEDLE
12	416483601	CLEARANCE PLATE
13	416483701	EDGE/QUILTING GUIDE
14	68006177	SPOOL PIN
15	820773096	STANDARD PRESSER FOOT
16	416483201	BUTTONHOLE FOOT
#1	68006178	ACCESSORY COMPLETE